


# HT-488 'Hop-on - Hop-off' Scenario

Before starting, configure FXO port on HT-488 with a PSTN phone number (617) 521- 5678.

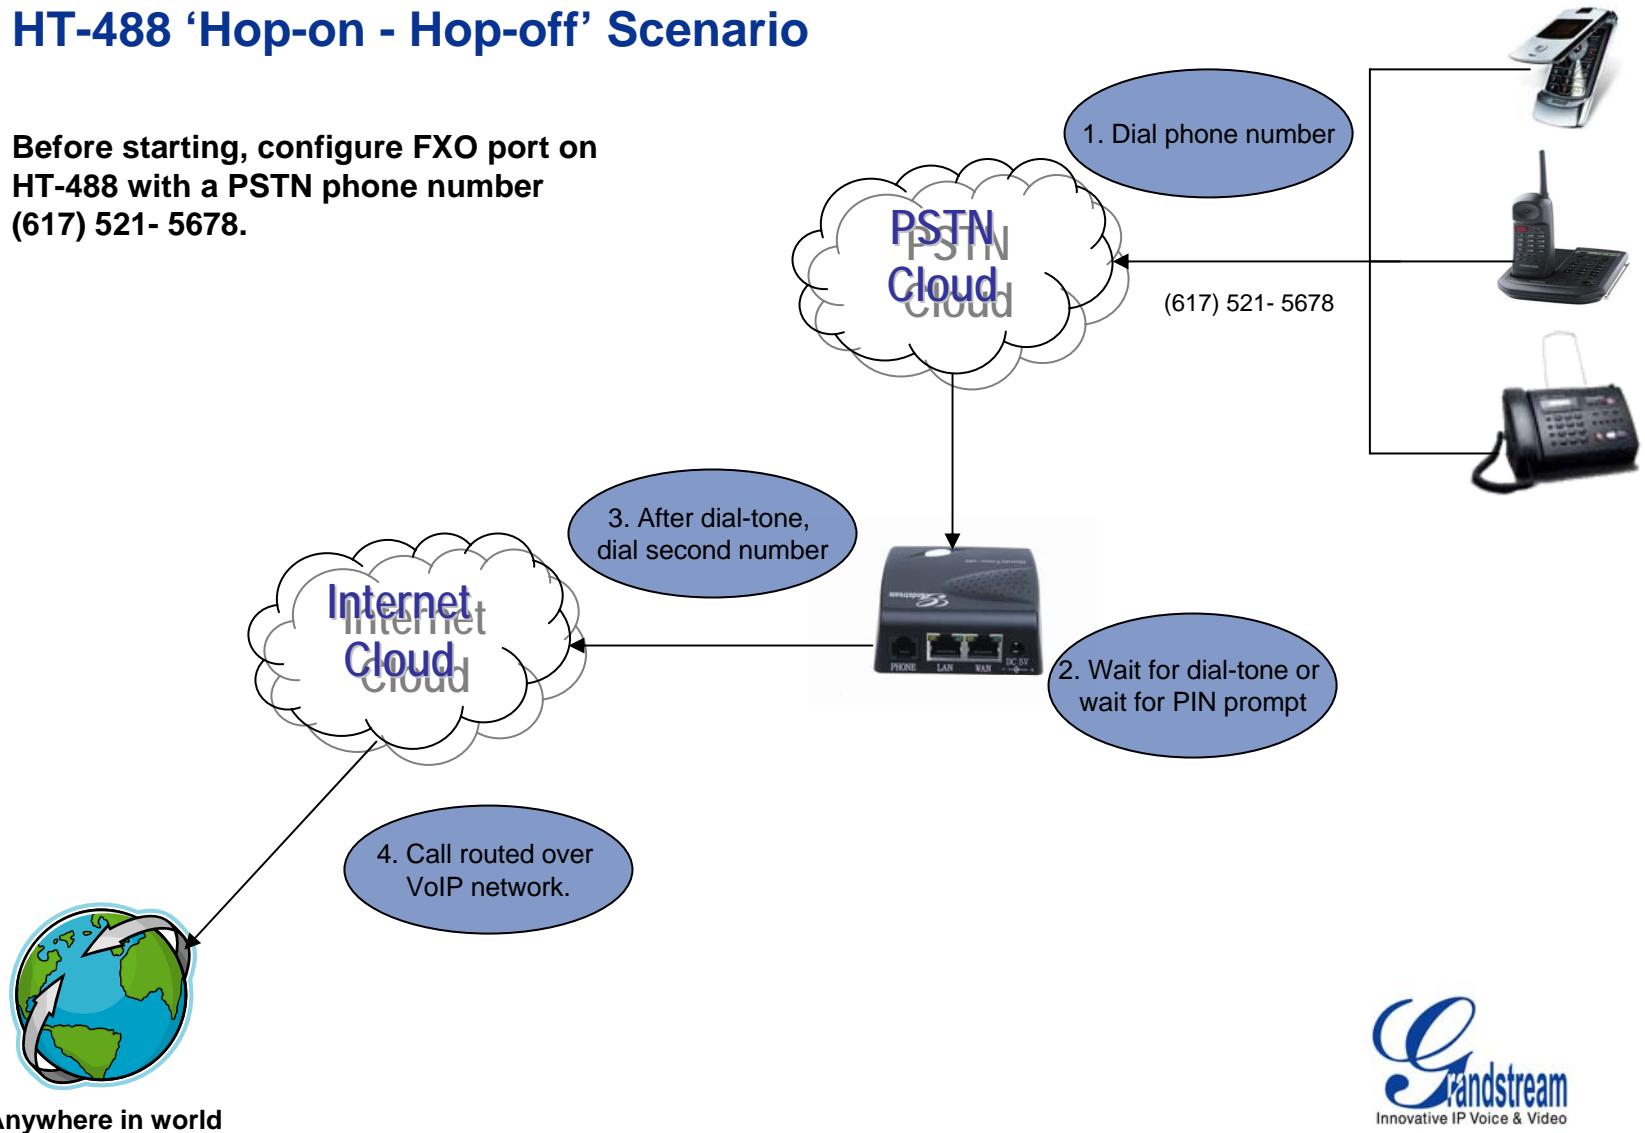

Anywhere in world

