



## Grandstream Networks, Inc.

---

GXV3672\_HD/GXV3672\_FHD

Outdoor Day/Night IP Camera



**TABLE OF CONTENTS**  
GXV3672\_HD/FHD User Manual

<b>WELCOME.....</b>	<b>4</b>
SAFETY COMPLIANCES.....	5
WARRANTY.....	6
<b>CONNECT YOUR GXV3672_HD/FHD.....</b>	<b>7</b>
EQUIPMENT PACKAGE CONTENTS .....	7
CONNECTING THE GXV3672_HD/FHD .....	8
<b>PRODUCT OVERVIEW .....</b>	<b>9</b>
GXV3672_HD/FHD CAMERA.....	9
GXV3672_HD/FHD SPECIFICATIONS .....	10
<b>INSTALLATION GUIDE .....</b>	<b>11</b>
MINIMUM RECOMMENDED COMPUTER SYSTEM REQUIREMENT.....	11
CONFIGURE THE GXV3672_HD/FHD VIA WEB BROWSER .....	11
GXV3672_HD/FHD HOME WEB PAGE .....	14
GXV3672_HD/FHD CONFIGURATION & LANGUAGE PAGE .....	15
<b>BASIC SETTINGS EXPLANATION .....</b>	<b>16</b>
SYSTEM SETTINGS PAGE .....	16
VIDEO & AUDIO SETTING PAGE .....	17
CMOS SETTINGS PAGE .....	19
NETWORKING SETTING PAGE .....	20
DDNS SETTINGS PAGE .....	21
SIP SETTING PAGE.....	22
STATUS PAGE.....	24
<b>ADVANCED SETTINGS EXPLANATION.....</b>	<b>25</b>
USER MANAGEMENT PAGE.....	25
MAINTENANCE PAGE.....	26
SMTP SETTING PAGE (EMAIL ALARM).....	27
FTP SETTINGS PAGE (UPLOAD ALARM).....	28
ALARM SERVER SETTINGS PAGE (UPLOAD ALARM TO SUPPORTED VMS OR HTTP SERVER) .....	29
MOTION DETECTION CONFIGURATION PAGE (SET ALARM) .....	30
SYSLOG SETTINGS PAGE (TROUBLESHOOTING) .....	32
SOFTWARE UPGRADE .....	33
SOFTWARE UPGRADE VIA TFTP, HTTP OR HTTPS.....	33
INSTRUCTIONS FOR LOCAL FIRMWARE UPGRADE USING TFTP SERVER: .....	34
CONFIGURATION FILE DOWNLOAD .....	34
<b>RESTORE FACTORY DEFAULT SETTING.....</b>	<b>35</b>
RESET FROM WEB INTERFACE.....	35
<b>IP SURVEILLANCE FAQ .....</b>	<b>36</b>

**TABLE OF FIGURES**  
**GXV3672\_HD/FHD USER MANUAL**

FIGURE 1: HOME PAGE OF GXV3672_HD/FHD .....	14
FIGURE 2: WEB LANGUAGE SWITCH .....	15
FIGURE 3: SYSTEM SETTINGS PAGE.....	16
FIGURE 4-1: VIDEO & AUDIO SETTINGS PAGE.....	17
FIGURE 4-2: VIDEO & AUDIO SETTINGS PAGE.....	18
FIGURE 5: CMOS SETTINGS PAGE.....	19
FIGURE 6: NETWORKING SETTING PAGE .....	20
FIGURE 7: DDNS SETTING PAGE.....	21
FIGURE 8-1: SIP SETTING PAGE.....	22
FIGURE 8-2: SIP SETTING PAGE.....	23
FIGURE 9: STATUS PAGE.....	24
FIGURE 10: USER MANAGEMENT PAGE .....	25
FIGURE 11: MAINTENANCE PAGE .....	26
FIGURE 12: SMTP SETTING PAGE .....	27
FIGURE 13: FTP SETTING PAGE.....	28
FIGURE 14: ALARM HTTP SERVER SETTING PAGE .....	29
FIGURE 15-1: MOTION DETECTION CONFIGURATION PAGE.....	30
FIGURE 15-2: MOTION DETECTION SCHEDULE CONFIGURATION PAGE .....	31
FIGURE 16: ALARM SERVER SETTING PAGE .....	32
FIGURE 17: FIRMWARE UPGRADE AND PROVISIONING .....	33
FIGURE 18: FACTORY RESET FROM WEB INTERFACE .....	35

**TABLE OF TABLES**  
**GXV3672\_HD/FHD USER MANUAL**

TABLE 1: GXV3672_HD/FHD TECHNICAL SPECIFICATIONS.....	10
---	----

## WELCOME

Thank you for purchasing Grandstream's GXV3672\_HD/FHD Outdoor Day/Night High Definition IP Camera, an innovative powerful weatherproof infrared next generation network camera. Its advanced ISP (Image Sensor Processor) powered with state-of-the-art auto-exposure/auto-white-balance algorithm and a high quality lens, ensures high fidelity video quality that matches digital still camera color grade in a wide range of light environments. It features cutting edge H.264 real-time video compression with excellent image clarity (720p for GXV3672HD; 1080p for GXV3672\_FHD) and color fidelity, industry leading SIP/VoIP for video streaming to smartphones and video phones, integrated PoE, IR-CUT (mechanical) for day or night mod, and advanced security protection using strong encryption. The GXV3672\_HD/FHD can be managed with GSurf, Grandstream's intuitive FREE VMS (video management systems) software that controls up to 36 cameras (\*) simultaneously; or record video using GSNVR, Grandstream's FREE network and PC based DVR (digital video recorder) software. It is fully compliant with ONVIF standard and offers flexible HTTP API and an SDK for advanced integration.

The GXV3672\_HD/FHD Outdoor Day/Night IP camera is a new addition to the popular GXV3XXX series IP surveillance product family. It ensures ease of use, integration and deployment, with multilingual graphical user interface, provides powerful solution to professional surveillance applications in outdoor environment.

This manual will help you to learn how to operate and manage your GXV3672\_HD/FHD Outdoor Day/Night HD IP camera and make the best use of it.

## Safety Compliances

These instructions are intended to assist users with the operation of the GXV3672\_HD/FHD and to instruct on how to avoid dangerous situations or damage to the device.

**Warnings:** Serious injury or death may be caused if any of the warnings below are neglected.  
**Cautions:** Injury or damage to the equipment may occur if any of the following caution messages are neglected.



**Warnings** Follow these safeguards to prevent serious injury or death.



**Cautions** Follow these precautions to prevent potential injury or material damage.



### **Warnings:**

Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with DC 12V according to the IEC60950-1 standard. Please refer to the technical specifications for more details.

Do not use a third-party power adapter or power cord

When the device is installed on the wall or ceiling, make sure that it is firmly attached.



### **Notice,**

Make sure that the power supply voltage is correct before using the camera.

Do not drop the device or expose it to physical shock.

Do not expose the device to temperatures outside the range of -10°C to +60°C when the device is in operation.

Do not expose the device to damp/wet conditions or high electromagnetism radiation.

To avoid heat accumulation, make sure that your operating environment has proper ventilation.

Do not attempt to open, disassemble, or modify the device

A few parts (e.g. electrolytic capacitor) of the equipment shall be replaced regularly according to their average life time. The average life time varies from the differences between operating environments and usage history. Regular maintenance checks are recommended for all users. Please contact your dealer for more details.

## Warranty

If you purchased your GXV3672\_HD/FHD from a reseller, please contact the company where you purchased the device for replacement, repair or refund.

If you purchased the product directly from Grandstream, please contact your Grandstream Sales and Service Representative for a RMA (Return Materials Authorization) number before you return the product. Grandstream reserves the right to remedy warranty policy without prior notification.

### **Caution:**

*Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty. Please do not use a different power adaptor with the GXV3672\_HD/FHD as it may cause damage to the products and void the manufacturer warranty.*

- This document is subject to change without notice. The latest electronic version of this user manual is available for download at:

[http://www.grandstream.com/products/surveillance/gxv3672hd/documents/gxv3672hd\\_fhd\\_usermanual\\_english.pdf](http://www.grandstream.com/products/surveillance/gxv3672hd/documents/gxv3672hd_fhd_usermanual_english.pdf)

*Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose is not permitted without the express written permission of Grandstream Networks, Inc.*

## CONNECT YOUR GXV3672\_HD/FHD

### Equipment Package Contents

The GXV3672\_HD/FHD package contains:

- GXV3672\_HD/FHD IP Camera
- 12V DC Universal Power Adaptor
- Ethernet Cable
- Hex Key and 3 Screws and Wall Anchors
- Quick Installation Guide



1 x GXV3672\_HD



1 x 12V Power Supply



1 x Ethernet Cable



3 x Wall Anchors



3 x Screw



1 x Hex Key



1 x Quick Start Guide

## Connecting the GXV3672\_HD/FHD

### Using the Power Adapter as power supply


- Connect the RJ-45 Ethernet cable to the NETWORK port of the GXV3672\_HD/FHD
- Connect the other end of the RJ-45 cable to your network (switch or router or PC)
- Connect the power supply to the DC 12V power jack on the back of the GXV3672\_HD/FHD

### Using PoE as power supply

- Connect the RJ-45 Ethernet cable to the NETWORK port of GXV3672\_HD/FHD
- Connect the other end of the RJ-45 cable to your PoE switch.

Please refer to following connection diagram to hook up the camera.


Refer to the illustration below when following the instructions on the next page.

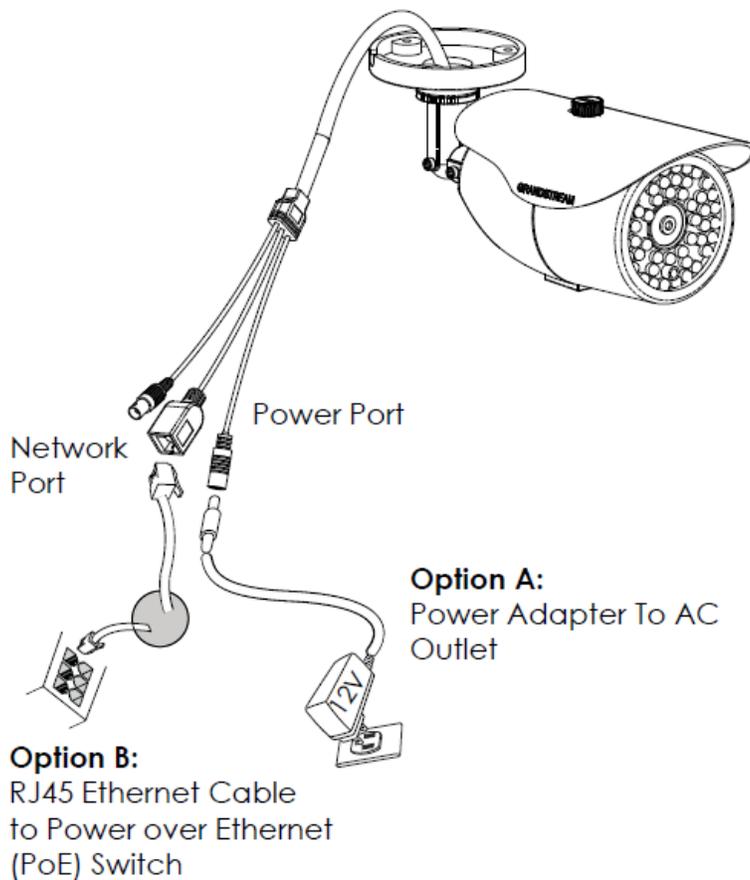

**NOTE:** Choose Option A if using the power supply; or choose Option B if using a Power over Ethernet (PoE) switch.

## PRODUCT OVERVIEW

### GXV3672\_HD/FHD Camera

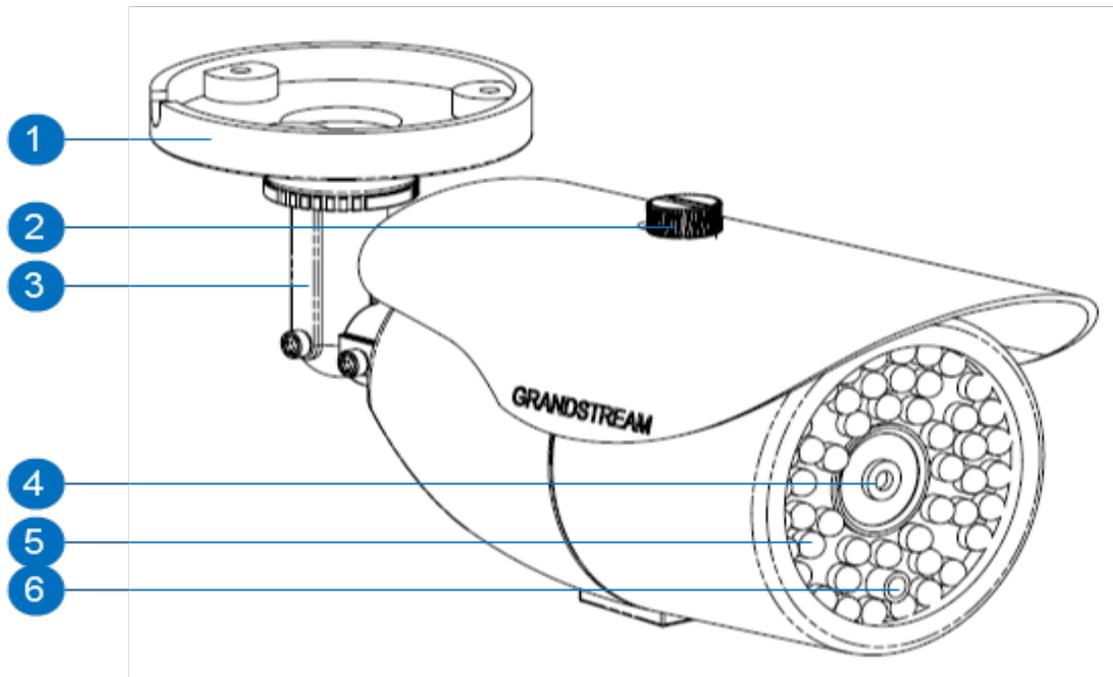

- |                                   |   |
|-----------------------------------|---|
| 1. <i>Mounting Plate</i>          | GXV3672_HD/FHD Mounting Plate                           |
| 2. <i>Top Shield Cover/Screw</i>  | Top metal cover (shielding direct light and rain, etc.) |
| 3. <i>Adjustable Wire Shield</i>  | Adjustable cylinder for wiring shield                   |
| 4. <i>Lens</i>                    | 1/3"CMOS (1.2M for HD/3.1M for FHD) and Lens            |
| 5. <i>IR Light Array</i>          | Infrared Light Array                                    |
| 6. <i>Light Sensor for IR-Cut</i> | Light Sensor for mechanical IR-Cut switching            |

## GXV3672\_HD/FHD Specifications

Table 1: GXV3672\_HD/FHD Technical Specifications

Model	GXV3672_HD	GXV3672_FHD
<b>Video Compression</b>	H.264, MJPEG	
<b>Image Sensor Resolution</b>	1/3", 1.2 Megapixel CMOS, 1280H x 960V	1/3", 3.1 Megapixel CMOS, 2048H x 1536V
<b>Image Sensor Sensitivity</b>	Day & night mode, exceptionally low noise levels and low-light sensitivity. Shutter: 1/10000 – 1/30 second	
<b>Focal Length</b>	8mm	
<b>Aperture</b>	F1.8	
<b>Field Angle (FOV)</b>	46°(D) x 36°(H) x 26.5°(V)	
<b>IR Cut Filter</b>	Yes, mechanical	
<b>Day &amp; Night Mode</b>	Infrared LED covering up to 30m	
<b>Minimum Illumination</b>	0 lux with IR LED on	
<b>Responsivity</b>	5.48V/lux-sec (550nm)	1.9V/lux-sec (550nm)
<b>Pixel Dynamic Range</b>	Wide dynamic range of 120dB with SNR <sub>MAX</sub> 44dB	Wide dynamic range of 100dB with SNR <sub>MAX</sub> 39dB
<b>Supported Maximum Video Resolution and Frame Rate</b>	1280x960 (30fps)	2048x1536 (15fps) 1920x1080 (30fps)
<b>Video Bit Rate</b>	32 Kbps ~ 8 Mbps, multi-rate for preview & recording	
<b>Embedded Analytics</b>	Motion detection (up to 16 target areas)	
<b>Pre-/post-alarm Buffer</b>	8MB	3MB
<b>Snapshots</b>	Triggered upon events, send via email/FTP	
<b>Network Protocol</b>	TCP/UDP/IP, RTP/RTCP, RTSP, DHCP, DDNS, HTTP, HTTPS, SMTP, FTP, NTP	
<b>SIP/VoIP Support</b>	Yes	
<b>Power over Ethernet (PoE)</b>	IEEE 802.3af class 0	
<b>External Cable Connection</b>	Network: RJ45, 10M/100M auto-sensing	
	Video Output: RCA	
	Power Input	
<b>Dimensions (D x L)</b>	94mm (D) x 230mm (L)	
<b>Weight</b>	0.52kg	
<b>Temperature / Humidity</b>	-20°C ~ +45°C (14°F ~ 113°F) Humidity 10–90% RH (non-condensing)	
<b>Power Adapter</b>	Output: 12VDC/1A; Input: 100–240VAC, 50–60Hz	
<b>Casing</b>	IP66 compliant weather-proof metal case	
<b>Compliance</b>	FCC Part 15, Subpart B Class B; CE EN 55022 Class B, EN61000-3-2, EN 61000-3-3, EN55024, EN60950-1; C-tick AS/NZS CISPR22, CISPR24; IP66	

# INSTALLATION GUIDE

## Minimum Recommended Computer System Requirement

To install GXV3672\_HD/FHD, you have to have a computer, PC recommend. The minimum recommended PC system requirement listed below:

- Windows 2000, XP, Windows Vista, Windows 7 (32bit or 64bit)
- CPU: Intel Pentium 4 or higher, 2 GHz
- RAM: 1 GB (4 GB recommended for larger systems)
- Support for DirectX 8.0 and above.

## Configure the GXV3672\_HD/FHD via Web Browser

The GXV3672\_HD/FHD has embedded Web server to respond to HTTP GET/POST requests. Embedded HTML pages allow user to configure the IP camera through Microsoft Internet Explorer (7.0 or above, 32-bit only) or Firefox (plug-in from Grandstream required).

- Download the GS\_Search tool from Grandstream website:  
[http://www.grandstream.com/products/tools/surveillance/GS\\_Search.zip](http://www.grandstream.com/products/tools/surveillance/GS_Search.zip)
- Download Firefox Plug-in from Grandstream website:  
[http://www.grandstream.com/products/tools/surveillance/firefox\\_plugin.exe](http://www.grandstream.com/products/tools/surveillance/firefox_plugin.exe)


## **NOTE:**

- *Google Chrome and Apple Safari support is pending.*
- *Microsoft Internet Explorer 64-bit support is pending.*
- *Please temporarily disable Antivirus or Internet Security Software when download and install the Grandstream Firefox plug-in for video or “GSViewerX.cab” for Microsoft Internet Explorer.*

## Connect the Camera to network with DHCP server (Recommended)

The GXV3672\_HD/FHD by default enabled as DHCP client, it will automatically get IP address from the network with DHCP server running. User can know the IP address assigned to the camera from DHCP server log or using Grandstream free GS\_Search tool.

1. Download the GS\_Search tool from Grandstream website:
2. [http://www.grandstream.com/products/tools/surveillance/GS\\_Search.zip](http://www.grandstream.com/products/tools/surveillance/GS_Search.zip)
3. Run the Grandstream GS\_Search tool by double click the unzipped "GS\_Search.exe".
4. Click on  button to begin device detection
5. The detected devices will appear in the Output field like below

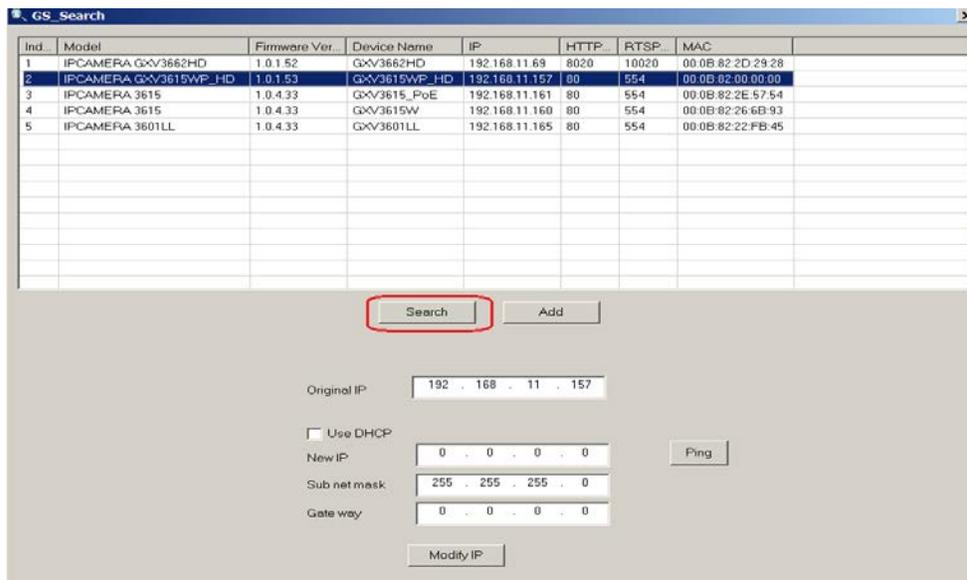

6. Double click the column of the detected camera, the browser will automatically open and link to the device IP and the web configuration page.
7. The browser will ask for plug-in or ActiveX if not installed, otherwise it will get to Home page and start to show the video captured by the camera (by default the camera enabled anonymous access)
8. Click "Configuration", the browser will ask credentials to authorize configuration.
9. Enter the administrator user name and password to access the Web Configuration Interface, the default user name and password are both set to **admin**.
10. In step 6, IE will indicate that "This website wants to install the following add-on: GSViewerX.cab from Grandstream Networks Inc.", allow the installation.
11. Firefox user need to download and install the plug-in to see the video, the plug-in for Firefox is here:
12. [http://www.grandstream.com/products/tools/surveillance/firefox\\_plugin.exe](http://www.grandstream.com/products/tools/surveillance/firefox_plugin.exe)

### NOTE:


- Please temporarily disable Antivirus or Internet Security Software when download and install the Grandstream Firefox plug-in for video or "GSViewerX.cab" for Microsoft Internet Explorer.

## Connect to the Camera using Static IP

If no DHCP server in the network, or the camera does not get IP from DHCP server, user can connect the camera to a computer directly, using static IP to configure the camera.

The default IP, if no DHCP server; or DHCP offer time out (3 minutes), is **192.168.1.168**

1. Connect the computer RJ-45 via an Ethernet cable directly to the IP camera GXV3672\_HD/FHD.
2. Configure the computer using Static IP: 192.168.1.XXX (1<XXX<255, but NOT 168) and configure the “Subnet mask” to “255.255.255.0”. Leave the “Default Gateway” to “Blank” like below:

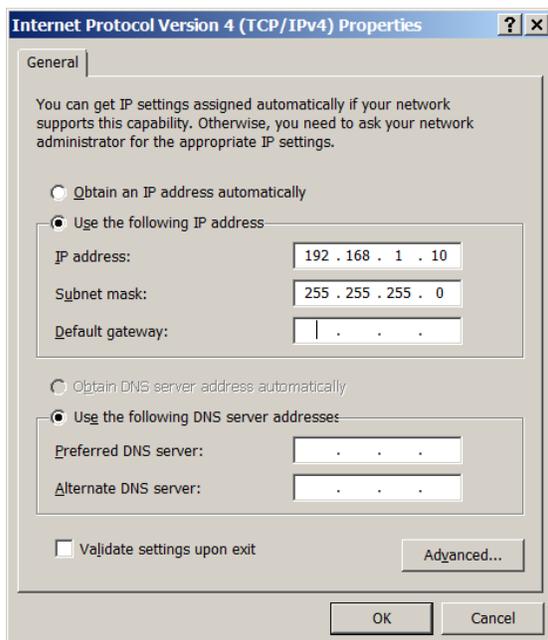

3. Power on the GXV3672\_HD/FHD.
4. Start the IE or Firefox browser when the network connection is up.
5. Enter 192.168.1.168 in the address bar of the browser.
6. The browser will ask for plug-in or ActiveX if not installed, otherwise it will get to Home page and start to show the video captured by the camera (by default the camera enabled anonymous access)
7. Click “Configuration”, the browser will ask credentials to authorize configuration.
8. Enter the administrator user name and password to access the Web Configuration Interface, the default user name and password are both set to **admin**.
9. In step 6, IE will indicate that “This website wants to install the following add-on: GSViewerX.cab from Grandstream Networks Inc.”, allow the installation.
10. Firefox user need to download and install the plug-in to see the video, the plug-in for Firefox is here:
11. [http://www.grandstream.com/products/tools/surveillance/firefox\\_plugin.exe](http://www.grandstream.com/products/tools/surveillance/firefox_plugin.exe)

### **NOTE:**

- Please temporarily disable Antivirus or Internet Security Software when download and install the Grandstream Firefox plug-in for video or “GSViewerX.cab” for Microsoft Internet Explorer.

## GXV3672\_HD/FHD Home Web Page

The Home Page of GXV3672\_HD/FHD shown as Figure 1:

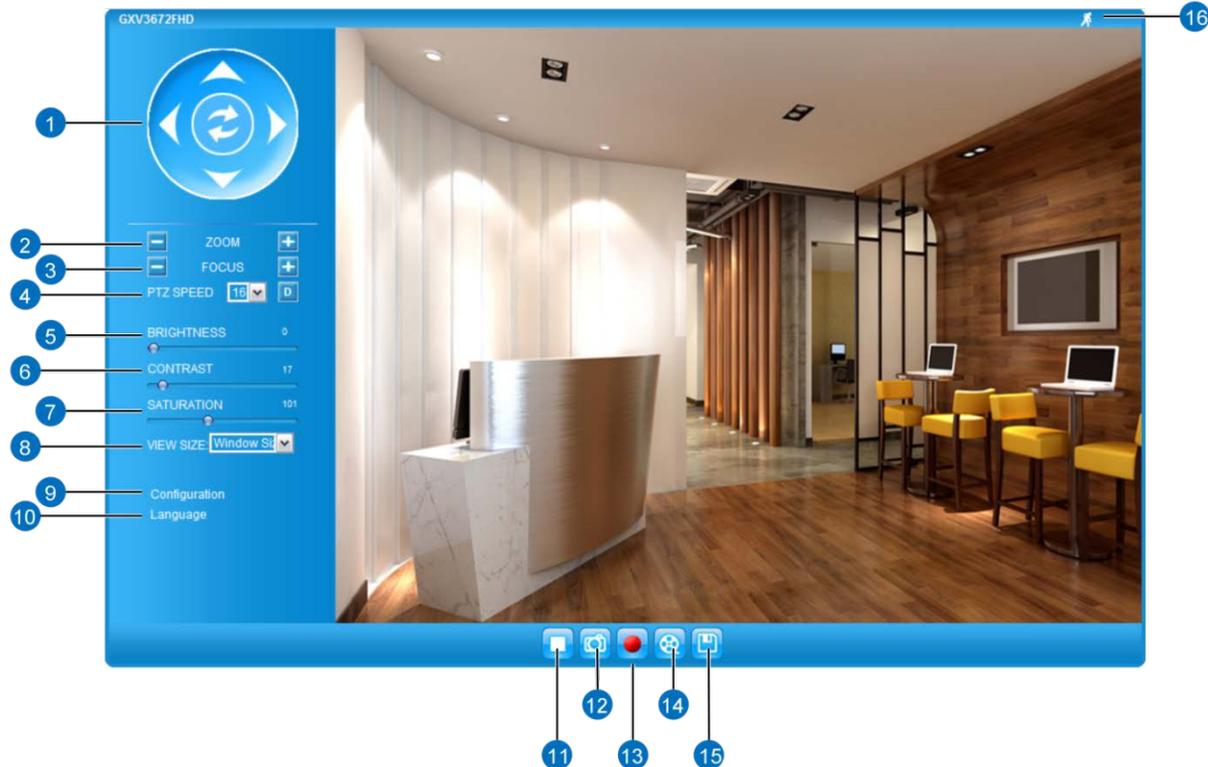


Figure 1: Home Page of GXV3672\_HD/FHD

1. **Control Console:** PTZ Console controller for ePTZ function.
2. **ZOOM:** Zoom in or Zoom out during ePTZ operation.
3. **FOCUS:** Adjust the focus of image (Not Applicable to GXV3672\_HD/FHD).
4. **PTZ SPEED/Default Button:** Adjust the rotate speed of the control console (Not Applicable);  
“Default Button” to reset the video brightness, contrast and saturation value from (auto or manual) adjusted value to factory default value.
5. **BRIGHTNESS:** Adjust the image brightness (will automatic save it unless readjusted)
6. **CONTRAST:** Adjust the image contrast. (Same as above, auto save adjusted value)
7. **SATURATION:** Adjust the image saturation. (Same as above)
8. **View Size:** Pull down to select between “Window Size” or “Real Size” to display the embedded video stream at configured video resolution.
9. **Configuration** Click to enter “Configuration Page” to configure the parameters of GXV3672\_HD/FHD (Administration privilege required).
10. **Language:** Click to switch webpage language.  
(Current supported: Chinese, English and Russian)
11. **Play/Stop:** Start/Stop playing the video stream at embedded webpage.
12. **Snapshot:** Click to capture and save a snapshot of current video frame displayed.  
Default directory: C:\Capture
13. **Record:** Click to Start/Stop record of current video stream into a file.  
Default directory: C:\Record
14. **Playback:** Playback recorded video files
15. **Path of File Saved:** Click to change the path of record/snapshot file saved.
16. **Motion Detection Alarm Indicator:** If motion detection alarm triggered, the indicator will flash in **red**.  
Click the indicator icon to turn off the alarm indication.

## GXV3672\_HD/FHD Configuration & Language Page

- When click the “Configuration” tab, web page will link to page to configure the related parameters of the GXV3672\_HD/FHD.
- There are two big categories of settings: Basic Settings and Advanced Settings. Details will be illustrated in the later Chapter.
- When click the “Language” tab, supported languages will be displayed in Figure 2. Click to select the related webpage display language.

**Figure 2: Web Language Switch**



- Currently firmware only support: English (default), Simplified Chinese and Russian.

# BASIC SETTINGS EXPLANATION

## System Settings Page

This page allow user to configure the system settings of GXV3672\_HD/FHD.

Figure 3: System Settings Page

- **Current System Time:** Display time current system is running at
- **Set the System Time:** Configure the time system is running.
  - **Time Zone:** Select from pull down menu the time zone unit located
  - **Self-Defined Time Zone:** Use the self-defined time zone for automatic daylight saving time adjustment. Format please refer to the “help over mouse”
  - **Update via NTP Server:** Synchronize time using NTP protocol with a Time Server over the Internet cloud (\*)
  - **Synchronize with Local Computer:** Synchronize time with local computer
  - **Set the Time Manually:** Manually input the time
  - **Keep Current D/T:** Select to use camera current displayed time
- **OSD Date Format:** Pull down to select date format displayed on video screen
- **Device Name Setting:** Setting of Device Name for user convenience
- **Expansion Port Mode Select:** The setting for external expansion interface module

### NOTE:

(\*) If select this option, a valid DNS server must be preconfigured under **Basic Settings** → **Networking**

➤ **Save** button has to be clicked to save all the changes made to the device.

## Video & Audio Setting Page

This page allows user to configure the video and audio related settings.

The screenshot displays the 'GXV3672HD Administration Interface' with a blue header and a left-hand navigation menu. The menu includes 'Home', 'Basic Settings', 'System', 'Video & Audio' (highlighted), 'CMOS Settings', 'Networking', 'DDNS', 'SIP', 'Status', and 'Advanced Settings'. The main content area is divided into three sections: 'On Screen Display(OSD)', 'Video Settings', and 'Audio Settings'. The 'On Screen Display(OSD)' section contains fields for 'OSD Text' (set to 'FrontDoor'), 'OSD Position' (set to 'top'), 'Display Time' (checked), and 'Display Text' (checked), with a 'Save' button below. The 'Video Settings' section has expandable options for '+Primary Stream Settings' and '+Secondary Stream Settings'. The 'Audio Settings' section includes 'Preferred Audio Codec' (set to 'Disabled'), 'Microphone Volume' (slider at 2), and 'Speaker Volume' (slider at 29). Below this is the 'Power Frequency' section with a dropdown set to 'Outdoor' Hz and a 'Save' button.

Figure 4-1: Video & Audio Settings Page

- **On Screen Display (OSD):** Display time stamp and text on the video screen.
  - OSD Text: Inputted text (to identify the camera) shown on the screen.
  - OSD Position: Show the OSD in either top or bottom position on screen.
  - Display Time: When checked, time stamp will display on video screen
  - Display Text: When checked, inputted text will display on video screen.
- **Audio Settings:** Pull down to disable due to no microphone in this camera.
  - Microphone Volume: Slide to adjust microphone gain.
  - Speaker Volume: Slide to adjust the built-in speaker volume.
- **Power Frequency:** Select correct local power frequency to avoid video flicking effect under fluorescence light condition. Default is Outdoor.

**Video Settings**

**Primary Stream Settings**

Preferred Video Codec: H264

Resolution: 1280\*720 (16:9)

Bit Rate: 2048 kbps

Maximum Frame Rate: 30 fps

Bit Rate Control:  CBR  VBR

Image Quality: Very High

I-frame Interval: 30 Frame(1-100)

**Secondary Stream Settings**

Preferred Video Codec: H264

Resolution: 320\*240 (4:3)

Bit Rate: 256 kbps

Maximum Frame Rate: 30 fps

Bit Rate Control:  CBR  VBR

I-frame Interval: 30 Frame(1-100)

**Figure 4-2: Video & Audio Settings Page**

- **Primary Stream Settings:**
  - Preferred Video Codec: MJPEG and H.264 supported, H.264 recommended.
  - Resolution: The video resolution in pixels used in video of camera
  - Bit Rate: video bit rate used
  - Maximum Frame Rate: Maximum frame rate used. More data if big frame used
  - Bit Rate Control: Constantly bit rate, or variable bit rate
  - Image Quality: Image quality used when Variable Bit Rate used
  - I-frame Interval: I-frame interval
  
- **Secondary Stream Settings:** Pull down to select, same as Primary steam..

**NOTE:**

- *H.264 suggested if camera needs to be viewed via Internet.*
- *If MJPEG selected, reduce max. frame rate to min. value to save bandwidth and get better image*
- Grandstream IP Camera provides two video streams, user can use them with flexibility. For example, the high-resolution stream for local recording; another low or high resolution for remote monitoring; or vice versa depending application scenarios.
- *Use below link to calculate bandwidth and storage before installation*  
<http://www.grandstream.com/support/tools/bandwidth-storage-calc>

## CMOS Settings Page

This page allows user to adjust the CMOS parameters:

CMOS Parameters Configuration

Flip:

Shutter Speed: Auto

IR CUT Setting: Automatic(IR sensor control)

IR CUT Sensitivity: 3

Color Mode: Auto

Save

Figure 5: CMOS Settings Page

- **Flip:** Check this will allow video flip 180° vertically in horizontal axis.
- **Shutter Speed:** Camera Shutter Speed. There are 10 options, with Auto, 1/30, 1/60, 1/125, 1/250, 1/500, 1/1000, 1/2000, 1/5000 and 1/10000
- **IR CUT Setting:** Manual or Automatic (IR Sensor or Algorithm controlled mechanical IR CUT)
- **IR CUT Sensitivity:** Sensitivity of IR CUT be trigged, 5 lever total
- **Color Mode:** Camera Color Mode. There are three options: Color; Black/White; Auto.

### NOTE:

- *Auto option recommended for Shutter Speed, IR CUT Setting and Color Mode.*

## Networking Setting Page

This page allows user to configure network related parameters:

The screenshot displays the Networking Setting Page with three main sections:

- IP Address Configuration:** Includes radio buttons for "Dynamically Assigned via DHCP" (unselected) and "Statically Configured as:" (selected). Below are input fields for IP Address (192.168.1.68), Subnet Mask (255.255.255.0), and Default Gateway (192.168.1.1).
- DNS Configuration:** Includes radio buttons for "Obtain DNS Server Address Automatically" (unselected) and "Use the Following DNS Server Address:" (selected). Below are input fields for Primary DNS Server (64.119.143.2) and Secondary DNS Server (71.243.0.12).
- HTTP:** Includes an input field for HTTP Port (8088).

A "Save" button is located at the bottom left of the form area.

Figure 6: Networking Setting Page

- **IP Address Configuration:** Camera IP address configuration
  - Dynamically Associated via DHCP: Default setting, DHCP server assign IP to camera.
  - Statically Configured as: Static IP address configuration
- **DNS Configuration:** DNS server IP, must be configured correctly if using static IP.
- **HTTP:** Web access TCP port, default 80.

### NOTE:

- *If camera behind SOHO router with port forwarding configuration for remote access, static IP or static DHCP has to be used to avoid IP address change after router reboot.*
- *TCP port above 5000 suggested if port forwarding HTTP remote access, due to some ISP would block port 80 inbound traffic. For example, change the default HTTP port from 80 to 8088, to make sure the port forwarding not likely be blocked.*
- *In addition to HTTP port, RTSP port also required to be configured for port forwarding, in order for remote party viewing the H.264 video.*
- *If change the default port from TCP 80 to port "A", then RTSP port should be "2000+A". Both TCP port "A" and "2000+A" should be configured for port forwarding in the router. For example, the HTTP port changed to 8088, the RTSP port should be 10088, both 8088 and 10088 should be configured for port forwarding in order for remote camera video access.*

## DDNS Settings Page

This page allows user to configure dynamic DNS related parameters:

The screenshot shows the 'GXV3672HD Administration Interface' with a sidebar on the left containing navigation links: Home, Basic Settings, System, Video & Audio, CMOS Settings, Networking, DDNS (highlighted), SIP, Status, and Advanced Settings. The main content area is titled 'Dynamic DNS Settings' and contains the following fields:

- DDNS Active:
- DDNS ISP Type:
- Self-Define DDNS Address:
- Site Name:
- DDNS Account:
- DDNS Password:
- STUN Server:

A 'Save' button is located at the bottom left of the settings area.

Figure 7: DDNS Setting Page

- **DDNS Active:** Enable DDNS by check this field.
- **DDNS ISP Type:** Select the DDNS service provider from the pull-down menu list
- **Self-Define DDNS Address:** Input the self-defined DDNS address
- **Site Name:** DDNS site name
- **DDNS Account:** DDNS account name
- **DDNS Password:** DDNS password
- **STUN Server:** Stun server FQDN or IP. If device behind a non-symmetric router, STUN server can help to penetrate & resolve NAT issue.

## SIP Setting Page

This page allows user to configure SIP related parameters.

GXV3672\_HD/FHD can be configured as SIP endpoint to call out when alarm triggered; or allow permitted number to call in to check the video if Grandstream video IP phone is used.

The screenshot displays the 'GXV3672FHD Administration Interface' with a sidebar menu on the left containing: Home, Basic Settings, System, Video & Audio, CMOS Settings, Networking, DDNS, SIP (highlighted), Status, and Advanced Settings. The main content area is divided into two sections: 'General Phone Settings' and 'SIP Settings'. In 'General Phone Settings', 'Registered:' is 'Offline' and 'Unregister On Reboot:' is unchecked. The 'SIP Settings' section includes: Account Name (MyPBX), SIP Server (sippbx.voip\_provider.com), Outbound Proxy (empty), SIP User ID (6175669300), Authenticate ID (0039665716), Authenticate Password (masked with dots), STUN Server (mystun.freebox.com), Stream (Secondary), Register Expiration(Second) (3600), local SIP Port (5060), local RTP Port (5004), Auto on Hook Timer (300), Disable Audio in SIP Call (unchecked), Enable Keep Alive (unchecked), and Accept Direct IP Call (checked).

Figure 8-1: SIP Setting Page

- **Registered:** SIP registration status. Display “Online” in Green, “Offline” in Red.
- **Unregistered on Reboot:** If checked and server support, reboot camera will unbind all registration in same SIP account.
- **Account Name:** SIP account name
- **SIP Server:** FQDN or IP of SIP server from VoIP service provider
- **Outbound Proxy:** IP or FQDN of Outbound proxy server, helps penetrate NAT/Firewall
- **SIP User ID:** SIP username, or telephone number from ITSP
- **Authenticate ID:** Authenticate ID used by SIP proxy

- **Authenticate Password:** Authenticate password used by SIP proxy
- **STUN Server:** STUN server used to resolve NAT if have
- **Stream:** Which stream used for SIP call.
- **Preferred Vocoder:** Audio codec used for SIP call **(NOTE)**
- **Registration Expiration:** Registration expiration time, default 3600 seconds
- **Local SIP Port:** Local SIP port, default 5060
- **Local RTP Port:** Local RTP port for media, default 5004
- **Auto on hook Timer:** Auto On Hook timer, default 300 seconds
- **Disable Audio in SIP Call:** Checked to disable audio for SIP call
- **Enable Keep Alive:** Checked to enable, help NAT resolution
- **Accept Direct IP Call:** Check to accept peer to peer IP call.

Accept Direct IP Call:

Enable White List Number Filter:

Enable Dual-way Audio Warning Mode:

Note: You must restart the device to apply the changes.

**Save**

**Phone List**

Phone Number	Remark Name	Remove
<input type="text" value="6179114110"/>	<input type="text" value="Local Police"/>	<input type="button" value="Add..."/>

Note: You must restart the device to apply the changes.

**White List**

Phone Number	Remove
<input type="text" value="6175669300"/>	<input type="button" value="Add..."/>

Note: You must restart the device to apply the changes.

**Figure 8-2: SIP Setting Page**

- **Enable White List Number Filter:** Check to allow only white list number to call in, for security
- **Enable Dual-way Audio Warning:** Check to enable two-way audio warning.
- **Phone List/Phone Number:** Callee or call receiver number when alarm call triggered.
- **White List/Phone Number:** Phone numbers allowed to call into the camera.

**NOTE:**

- *Unless external microphone connected to internal module, GXV3672\_HD/FHD does NOT support Audio even the audio codec configured.*

## Status Page

This page shows the GXV3672\_HD/FHD operation status:

The screenshot displays the 'GXV3672FHD Administration Interface' with a sidebar menu on the left and three main content panels on the right. The sidebar menu includes: Home, Basic Settings, System, Video & Audio, CMOS Settings, Networking, DDNS, SIP, Status, and Advanced Settings. The 'Status' menu item is highlighted.

**System Statistics**

Product Model:	GXV3672FHD
Hardware Version:	V1.0A
Part Number:	9670004310A
Bootloader Version:	1.0.0.0
Core Version:	1.0.1.67
Base Version:	1.0.1.67
Firmware Version:	1.0.1.67
System Up Time Since:	17 minutes

**Network Status**

MAC Address:	00:0B:82:27:F5:C8
LAN IP Address:	192.168.1.150
LAN Subnet Mask:	255.255.255.0
LAN Default Gateway:	192.168.1.3
DDNS Status:	Disabled
SIP Registered:	Offline

**Camera Type**

Camera Type:	Aptina, AR0331 Pixels 2048*1536
--------------	---------------------------------

Figure 9: Status Page

### NOTE:

- When SIP account registered, the status will display “Online” in Green.
- When SIP account unregistered, the status will display “Offline” in Red, as below.

SIP Registered: Offline

## ADVANCED SETTINGS EXPLANATION

The supports all the traditional and advanced telephony features.

### User Management Page

This page allows user to do user management:

The screenshot shows the 'GXV3672FHD Administration Interface' with a sidebar on the left containing navigation options: Home, Basic Settings, Advanced Settings, User Management (selected), Maintenance, SMTP, FTP, Alarm Server, Motion Detection, and Syslog. The main content area is titled 'Manage User' and contains the following fields and controls:

- Existing User Name: --Add New User-- (dropdown menu)
- User Name: (text input field)
- User Password: (text input field with an information icon)
- Confirm User Password: (text input field)
- Privilege: Administrator (dropdown menu with Administrator and Viewer options)
- Buttons: Add, Update, Delete

Below the 'Manage User' section is the 'Manage Anonymous Viewing' section, which includes a checkbox for 'Allow Anonymous Viewing' that is checked. A 'Save' button is located at the bottom left of the form area.

Figure 10: User Management Page

- **Existing User Name:** Allow revise existing user or add new user
- **User Name:** The name of user need to be revised
- **User Password:** New password if revise password
- **Confirm User Password:** Re-enter the new password for verification
- **Privilege:** Choose user privilege
- **Allow Anonymous Viewing:** When checked, no security enhanced. Any person can view the camera if knowing the IP or FQDN of the camera, but can NOT change anything, just view ONLY.

## Maintenance Page

This page allows user to maintain the camera:

The screenshot shows the 'Maintenance Page' of the GXV3672FHD Administration Interface. The page is divided into a sidebar and a main content area. The sidebar on the left contains navigation links: Home, Basic Settings, Advanced Settings, User Management, Maintenance (highlighted), SMTP, FTP, Alarm Server, Motion Detection, and Syslog. The main content area is titled 'GXV3672FHD Administration Interface' and contains three sections: 1. 'Restart the device' with a 'Restart' button. 2. 'Restore the device' with a 'Restore' button. 3. 'Firmware Upgrade and Provisioning' with fields for 'Upgrade via' (HTTP), 'Firmware Server Path' (firmware.grandstream.com), 'Config Server Path' (firmware.grandstream.com), 'XML Config File Password' (masked with dots), 'Automatic Upgrade Interval (Minutes)' (10080), and 'Automatic Upgrade' (checked). A 'Save' button is at the bottom.

Figure 11: Maintenance Page

- **Restart:** When clicked, the camera will reboot or restart
- **Restore:** When clicked, the camera will be reset to factory default, wiping out all the configurations (except IP address)

### Firmware Upgrade and Provisioning:

- **Upgrade via:** Upgrade firmware via TFTP, HTTP or HTTPS
- **Firmware Server Path:** Server path holding the firmware
- **Config Server Path:** Server path holding the configuration file (auto provisioning)
- **XML Config File Password:** Password for encrypt the XML based configuration file
- **Automatic Upgrade Interval (Minutes):** Time interval for automatic upgrade, default 10080
- **Automatic Upgrade:** Checked to enable automatic firmware upgrade and provisioning.

### NOTE:

- Only XML based automatic provisioning is supported by GXV3672\_HD/FHD.

## SMTP Setting Page (Email Alarm)

This page allows user to configure email client to send out email when alarm triggered:

**SMTP Server Settings**

Enable SMTP:

SMTP Server:

SMTP Server Port:

From E-Mail address:

To E-Mail address 1:

To E-Mail address 2:

To E-Mail address 3:

User Name:

Password:

SSL:

1 Required Fields.  
2 Valid DNS server is required for hostname.

Save Test

Figure 12: SMTP Setting Page

- **Enable SMTP:** When checked, email client is enabled.
- **SMTP Server:** SMTP Email Server IP or Domain Name
- **SMTP Server Port:** Port number used by server to send email
- **From Email address:** The email address of alarm email sending from, usually client email ID
- **To E-Mail address:** The email address to receive the alarmed email, total 3 included.
- **User Name:** Email client User ID
- **Password:** Email client password
- **SSL:** Check if the SMTP email server requires SSL

### NOTE:

- Click “Save” to save the email configuration information.
- Click “Test” after configuration, if setting is correct, a test email will send out and “Test successful!” yellow bar will display like below

**Test successful!**

Enable SMTP:

## FTP Settings Page (Upload Alarm)

This page allows user to configure FTP parameters to upload the alarm or video recording::

The screenshot shows the GXV3672FHD Administration Interface. The sidebar on the left contains the following navigation options: Home, Basic Settings, Advanced Settings, User Management, Maintenance, SMTP, FTP (highlighted), Alarm Server, Motion Detection, and Syslog. The main content area is titled "FTP Settings" and contains the following fields:

- Enable FTP:
- FTP Server:
- FTP Server Port:
- User Name:
- Password:
- Path:

A yellow error message is displayed at the bottom of the form: "Valid DNS server is required for hostname." Below the form are "Save" and "Test" buttons.

Figure 13: FTP Setting Page

- **Enable FTP:** When checked, built-in FTP client is enabled.
- **FTP Server:** IP or Domain name of FTP site or server
- **FTP Server Port:** TCP port for FTP server, default port number 21
- **User Name:** FTP server User ID
- **Password:** FTP server user password
- **Path:** Path in the server where upload files are stored.

### **NOTE:**

- Click "Save" to save the FTP configuration information.
- Click "Test" after configuration, if setting is correct, a test FTP operation will be performed and "Test successful!" yellow bar will display if the operation is successful.

## Alarm Server Settings Page (Upload Alarm to supported VMS or HTTP Server)

This page allows user to configure alarm HTTP server to upload alarms:



The screenshot displays the 'GXV3672FHD Administration Interface'. On the left is a blue sidebar menu with the following items: Home, Basic Settings, Advanced Settings, User Management, Maintenance, SMTP, FTP, Alarm Server (highlighted), and Motion Detection. The main content area is titled 'Alarm HTTP Server Settings' and contains the following fields:

- Server Name: Security\_Solution
- URL: server911.cloud.net:9999
- User Name: subscriber\_110
- Password: [Masked with 10 dots]

A 'Save' button is located below the fields.

Figure 14: Alarm HTTP Server Setting Page

- **Server Name:** The name of HTTP server or VMS system
- **URL:** URL of the Server
- **User Name:** User ID from that Server
- **Password:** Password for that User ID

### **NOTE:**

- *Grandstream provide HTTP API to help 3<sup>rd</sup> party company by using HTTP server or VMS to develop further solutions for its customers.*
- *Grandstream IP Camera and DVS (include GXV3672\_HD/FHD) are ONVIF certified.*

## Motion Detection Configuration Page (Set Alarm)

This page allows user to configure motion detection to trigger alarms:

The screenshot shows the Grandstream GXV3672FHD Administration Interface. The left sidebar contains navigation links: Home, Basic Settings, Advanced Settings, User Management, Maintenance, SMTP, FTP, Alarm Server, Motion Detection (highlighted), and Syslog. The main content area is titled 'Motion Detection Region Settings' and features a video preview window with a white rectangle overlaid on a video feed. To the right of the preview are several configuration options: 'Enable Motion Detection' (checked), 'Show Motion Detection Regions' (checked), a dropdown menu for 'Select a Region' (set to 0), a text input for 'Sensitivity' (set to 50), and buttons for 'Edit', 'Remove', and 'Save'. Below this is the 'Alarm Action' section, which includes checkboxes for 'Record Video From Pre Alarm', 'Voice Alarm to SIP Phone', 'Upload to Alarm Center', 'Upload to Alarm HTTP Server', 'Record Video and Upload to FTP Server', and 'Email and FTP upload JPEG'. It also has dropdown menus for 'seconds to After Alarm' (set to 1) and a 'Save' button at the bottom.

Figure 15-1: Motion Detection Configuration Page

- **Enable Motion Detection:** When checked, Motion Detection enabled.
- **Show Motion Detection Regions:** When checked, Motion Detection region with number will be displayed in White Rectangle in the screen; when “Edit” clicked, the Rectangle will become Red, as shown in Figure 16-1.
- **Select a Region:** Pull down to select and configure alarm region, altogether 16 alarm region available, from 0 to 15.
- **Sensitivity:** Select configured alarm region number, input number for sensitivity to trigger alarm, 100 is the maximum sensible value.

### Alarm Action:

- **Record Video From.....** Allow user to select how long pre/after Alarm trigger moment, the video be captured.
- **Voice Alarm to SIP Phone:** When checked, a SIP alarm phone call will be made to pre-configured number.
- **Upload to Alarm Center:** When checked, the alarm video will be transferred to Alarm Center, like Grandstream free GSurf VMS software.

### NOTE:

- Grandstream free GSurf VMS software can be downloaded here:  
<http://www.grandstream.com/products/tools/surveillance/Gsurf.exe>

- **Upload to Alarm HTTP Server:**  
When checked, alarm will be transferred to the HTTP server via HTTP API.
- **Record Video and Upload to FTP Server:**  
When checked, the alarm will be recorded and FTP to pre-configured FTP server.
- **Email and FTP upload JPEG and Store it to SD driver:**  
When checked, a snapshot of trigger moment will be generated and email to pre-configured email account, also save to the microSD card in the microSD card slot. (microSD card not provided).

**NOTE:**

➤ *Email/Snapshot storage is mutual exclusive with SD card DVS recording in next section.*

This page allows user to configure Motion Detection Operation Schedule:


Region ID	Date	Start Time	End Time	
0	Everyday	00:00	08:00	Add
0	Everyday	20:00	23:59	<input checked="" type="checkbox"/>
0	Everyday	00:00	08:00	<input checked="" type="checkbox"/>
				<input checked="" type="checkbox"/> Un-Check All
				Delete

**Figure 15-2: Motion Detection Schedule Configuration Page**

- *As shown in Figure 16-2, user can configure the Motion Detection Region with related Start and Stop time to control the motion detection operation.*

## Syslog Settings Page (Troubleshooting)

This page allows user to enable the Syslog to help troubleshooting problems:

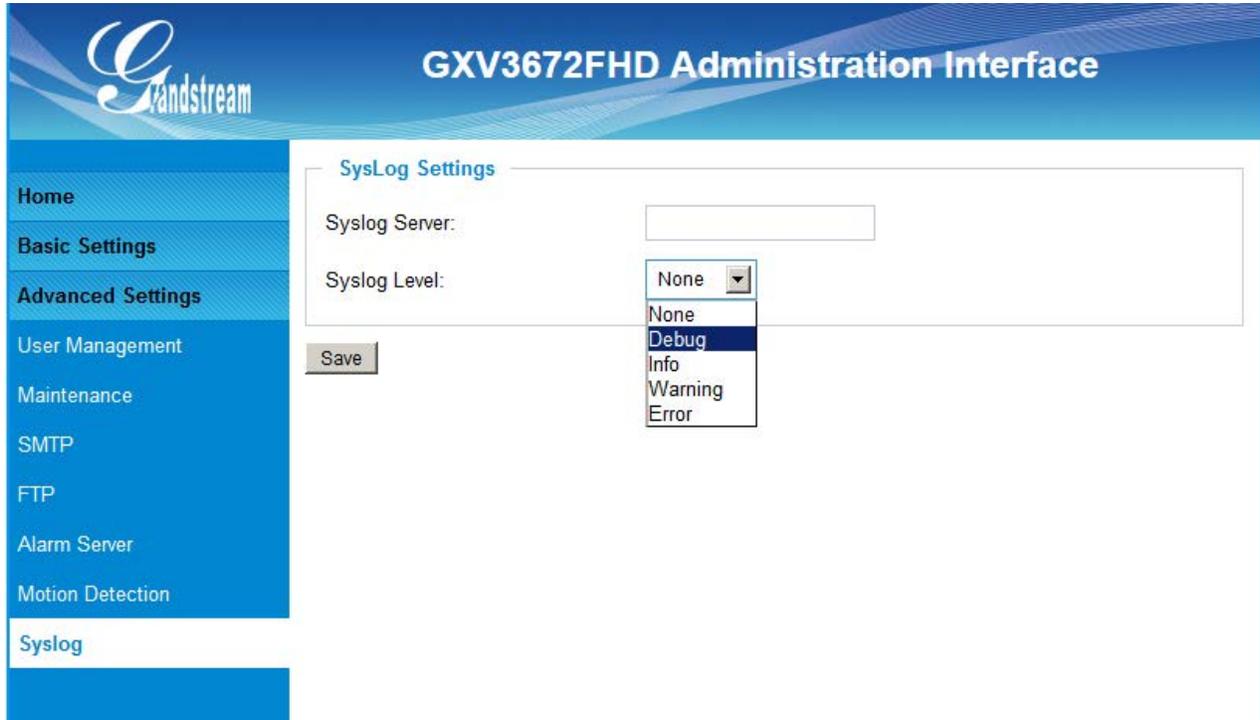

The screenshot shows the 'GXV3672FHD Administration Interface' with the 'Grandstream' logo. A left-hand navigation menu includes 'Home', 'Basic Settings', 'Advanced Settings', 'User Management', 'Maintenance', 'SMTP', 'FTP', 'Alarm Server', 'Motion Detection', and 'Syslog'. The 'Syslog' menu item is highlighted. The main content area is titled 'SysLog Settings' and contains two fields: 'Syslog Server' with an empty text input box, and 'Syslog Level' with a dropdown menu. The dropdown menu is open, showing options: 'None', 'Debug', 'Info', 'Warning', and 'Error'. A 'Save' button is located below the 'Syslog Level' dropdown.

Figure 16: Alarm Server Setting Page


- **Syslog Server:** Syslog server IP or Domain Name
- **Syslog Lever:** Lever of syslog message sent to the syslog server:  
*None, Debug, Info, Warning, Error.*

## Software Upgrade

Software upgrade can be done via either TFTP, HTTP or HTTPS. The corresponding configuration settings are in the ADVANCED SETTINGS configuration page.

### Software Upgrade via TFTP, HTTP or HTTPS

This page allows user to configure firmware upgrade:

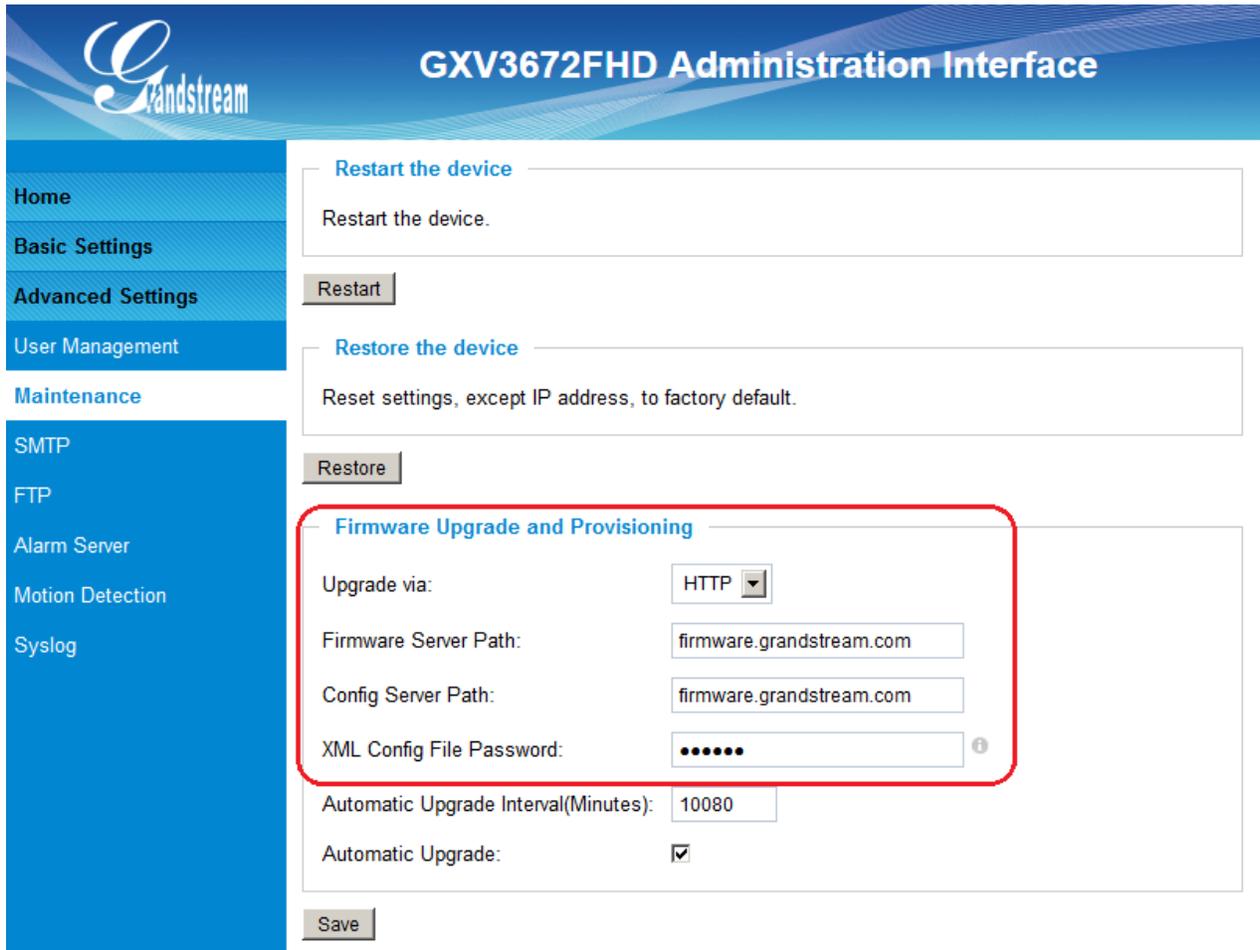

The screenshot displays the Grandstream GXV3672FHD Administration Interface. The left sidebar contains navigation links: Home, Basic Settings, Advanced Settings, User Management, Maintenance, SMTP, FTP, Alarm Server, Motion Detection, and Syslog. The main content area is titled "GXV3672FHD Administration Interface" and contains three sections: "Restart the device" with a "Restart" button, "Restore the device" with a "Restore" button, and "Firmware Upgrade and Provisioning" which is highlighted with a red box. The "Firmware Upgrade and Provisioning" section includes the following fields: "Upgrade via:" (HTTP), "Firmware Server Path:" (firmware.grandstream.com), "Config Server Path:" (firmware.grandstream.com), "XML Config File Password:" (masked with dots), "Automatic Upgrade Interval(Minutes):" (10080), and "Automatic Upgrade:" (checked). A "Save" button is located at the bottom of this section.

Figure 17: Firmware Upgrade and Provisioning

#### NOTES:

- Grandstream recommends end-user use the Grandstream HTTP server. Its address can be found at <http://www.grandstream.com/support/firmware>.
- Currently the HTTP firmware server is **firmware.grandstream.com**. For large companies, we recommend to maintain their own TFTP/ HTTP/HTTPS server for upgrade and provisioning procedures.

### **Instructions for local firmware upgrade using TFTP server:**

1. Unzip the file and put all of them under the root directory of the TFTP server.
2. Put the PC running the TFTP server and the device in the same LAN segment.
3. Please go to File -> Configure -> Security to change the TFTP server's default setting from "Receive Only" to "Transmit Only" for the firmware upgrade.
4. Start the TFTP server, in the phone's web configuration page
5. Configure the Firmware Server Path with the IP address of the PC
6. Update the change and reboot the unit

End users can also choose to download the free HTTP server from <http://httpd.apache.org/> or use Microsoft IIS web server.

### **Configuration File Download**

Grandstream SIP Device can be configured via Web Interface as well as via Configuration File through TFTP or HTTP/HTTPS. "Config Server Path" is the TFTP or HTTP/HTTPS server path for configuration file. It needs to be set to a valid URL, either in FQDN or IP address format. The "Config Server Path" can be same or different from the "Firmware Server Path".

A configuration parameter is associated with each particular field in the web configuration page. A parameter consists of a Capital letter P and 1 to 3 (Could be extended to 4 in the future) digit numeric numbers. i.e., P2 is associated with "Admin Password" in the ADVANCED SETTINGS page. For a detailed parameter list, please refer to the corresponding firmware release configuration template.

When Grandstream Device boots up or reboots, it will issue request for configuration file named "cfgxxxxxxxxxxxx.xml", where "xxxxxxxxxxxx" is the MAC address of the device, i.e., "cfg000b820102ab.xml". The configuration file name should be in lower cases.

**Currently GXV3672\_HD/FHD only support XML configuration.**

# RESTORE FACTORY DEFAULT SETTING

## WARNING!

Restoring the Factory Default Setting will DELETE all configuration information of the camera. Please BACKUP or PRINT out all the settings before approach to following steps. Grandstream will not take any responsibility if you lose all the parameters of setting or cannot connect to your VoIP service provider.

## FACTORY RESET

### Reset from Web Interface

This page allows user to configure dynamic network related parameters:

The screenshot displays the Grandstream GXV3672FHD Administration Interface. On the left is a blue sidebar menu with the following items: Home, Basic Settings, Advanced Settings, User Management, Maintenance, SMTP, FTP, Alarm Server, Motion Detection, and Syslog. The main content area is titled 'GXV3672FHD Administration Interface' and contains three sections:

- Restart the device**: A text box containing 'Restart the device.' and a 'Restart' button.
- Restore the device**: A text box containing 'Reset settings, except IP address, to factory default.' and a 'Restore' button. This section is highlighted with a red rectangular box.
- Firmware Upgrade and Provisioning**: A section with several fields: 'Upgrade via:' (HTTP), 'Firmware Server Path:' (firmware.grandstream.com), 'Config Server Path:' (firmware.grandstream.com), 'XML Config File Password:' (masked with dots), 'Automatic Upgrade Interval(Minutes):' (10080), and 'Automatic Upgrade:' (checked). A 'Save' button is located at the bottom of this section.

Figure 18: Factory Reset from Web Interface

## IP SURVEILLANCE FAQ

### **1. What is the default IP address of the GXV-3651\_FHD?**

The default IP configuration is DHCP.

### **2. Why can I not view the live video stream in Microsoft Internet Explorer?**

Please check whether the IE add-on is installed correctly.

Once you log into the GXV 3651\_FHD web interface, Internet Explorer will indicate that —This website wants to install to following add-on: ‘\_GSViewer.cab’ from Grandstream Networks, Inc. || . Please install this add-on when prompted by IE.

### **3. How do you manually uninstall the Grandstream video viewer add-on for IE?**

Please follow these steps to uninstall the add-on:

1. Delete the *GSViewerX Control* from *C:\WINDOWS\Downloaded Program Files* directory
2. Delete *GSNetClient.dll*, *GS\_Replay.exe*, *GSViewerX.ocx*, *hi\_h264dec\_w.dll*, *lik\_VoiceEngine\_dll.dll* and *GSViewerX.inf* from *C:\WINDOWS\system32*

### **4. Why can't I access the GXV-3651\_FHD web configuration interface?**

Q 1: Is your internet service down?

A 1: Connect a PC to the internet to test the connection.

Q 2: Are the PC and the device in different subnets?

A 2: Check the subnet mask and default gateway of the device and PC.

Q 3: Is there a conflict with another IP address?

A 3: Try to change the IP address of the device.

Q 4: Has the HTTP port been changed?

A 4: Contact the administrator of the device for more information.

### **5. The GXV-3651\_FHD web configuration page is not displayed correctly in Internet Explorer 8?**

In IE8, Compatibility View might need to be enabled for the GXV-3651\_FHD web configuration page to load properly. To enable compatibility view, open IE8, click *Tools, Compatibility View Setting*, and add the GXV-3651\_FHD web configuration pages to the Compatibility View.

**6. Why does IE indicate to install Grandstream Video Viewer add-on after a firmware upgrade? The add-on was properly installed before the firmware upgrade process.**

New firmware will often upgrade the add-on as well. To watch the live video stream, you must install the newest version of the add-on.

**7. How do you watch secondary video stream?**

Login to the home page of the GXV-3651\_FHD web GUI, click Play to watch the video stream. To watch a secondary video stream, right click on the video, and select *Secondary Stream* on the pop-up menu. Try reinstalling the Grandstream Viewer add-on for IE if you cannot see the video stream.

**8. Why is audio missing from the recorded video when an alarm is triggered?**

Please double check whether the device has an audio input connected.  
GXV3651\_FHD has a MIC IN port for an audio input.

**9. What is DDNS? Is it important for IP surveillance product to have DDNS support?**

DDNS is an acronym for Dynamic Domain Name Service. It is important to choose an IP network camera that has DDNS support for dynamic IP addresses.

Chances are that the network has a dynamic IP address (which changes with every log on). A DDNS service makes sure that the camera's IP address always matches up to the current server address. DDNS also allows for a website to be linked to the IP camera that is constantly updated with the correct information and has a reliable feed.

**10. Why is Windows Media Player unable to play the recorded videos files?**

The GXV-3651\_FHD uses the H.264 video codec. Windows Media Player may lack the proper H.264 decoder to play the recorded video. Please download the Microsoft FFDSHOW H.264 decoder from <http://sourceforge.net/projects/ffdshow-tryout/> and install it.

**11. Alarm Triggered Events do not work in GSurf.**

Please double check the Alarm Action on your GXV-3651\_FHD. Login to the web GUI of the GXV3651\_FHD, go to the *Motion Detection* or *Alarm Events* page, and make sure option *Upload to Alarm Center* is checked.

**12. It is recommended that you save your video files in different directories when using GSurf and GS\_NVR.**

GSurf and GS\_NVR are different programs that have the ability to delete recorded video files. It is better to save video files in different directories when using GSurf and GS\_NVR in the event that they automatically delete files that you might want to keep.

### **13. How can I use a cell phone to watch the GXV3651\_FHD video stream?**

You must set the video resolution to QCIF to watch the GXV3651\_FHD video stream from a cell phone. Make sure to set the bit rate to 64kbps to ensure the best video quality.

### **14. Why doesn't the IP address of the device reset when I click the "Restore" button on the Maintenance page?**

The GXV3651\_FHD could be installed in areas that are not easy to access. For example, it could be installed on the roof of a building or the ceiling of an office. This makes it difficult to reinstall the device, therefore the —Restore || function will not clear the IP address. Press the RESET button on the device for at least 6 seconds until you hear a beep to perform a factory reset of all parameters (including the IP address).

### **15. Why can't the live video stream be viewed using a mobile phone or GSurf after changing the HTTP Port of the device?**

Make sure that the RTSP port of the device is set to 2000 plus the HTTP Port number. For example, if the HTTP port is 88, then the RTSP port of the device that you configured on GSurf / mobile phone should be 2088.

### **16. Some notes on using SD cards**

1. The GXV3651\_FHD only supports FAT32 formatted SD cards
2. The GXV3651\_FHD supports SD and SDHC
3. It takes 10-15 seconds to read SDHC cards with large memory capacities. Please wait 15 seconds to unplug the SD card after you plug them into the device.
4. If there are many files (ie. 1800 or more image batch files) on the SD card, it can take up to 5 minutes to read them. Please do not refresh the web interface at this time as the GXV3651\_FHD will restart reading the SD card. Grandstream is currently working on a fix for this issue.

### **17. Port forwarding**

Two ports must be forwarded on your router to watch video from a GXV3651\_FHD that is located on a private network from a PC in a public network. The web port (HTTP) and the RTSP port. Please make note that the RTSP port number changes according to the web port. If the web port is 80, then the RTSP port is 554. If the web port is not 80, then the RTSP port equals the web port +2000. For example, if the web port is 88, then the RTSP port will be 2088.

**18. Tested PC display adapters.**

<b>Display Adapter</b>	<b>Test Result</b>
SiS 650/651/740/661 FX/741/760 Series	Works normally
Intel(R) 82945R Express Chipset Family	Works normally

VIA/S3G UniChrome Pro IGP	Works normally
NVIDIA Geforce 7300GS	Works normally
SiS 661FX	Works normally
SiS Mirage Graphics	Works normally
SiS 661 Series	Works normally
Intel(R) G33/G31 Express	Works normally
SiS Mirage3 Graphics	Works normally
SiS 661FX/GX Mirage Graphics	Works normally
S3 Graphics ProSavageDDR(Microsoft Corporation)	Works normally
XGI Velari Z7/Z9/Z9S V1.08.12	There is some delay when playing videos.
Intel 965 Express Chipset Family	Works normally
ATI Mobility Radeon X1300	Works normally
Intel( R ) G45/G43 Express Chipset	Works normally
Mobile Intel 965 Express Chipset Family	Works normally
Mobile Intel(R) 4 Series Express Chipset Family	Works normally
Mobile Intel® 945GM Express Chipset Family	Works normally
Mobile intel® 915GM/GMS, 910GML Express Chipset Family	Works normally
Intel® G45/G43 Express Chipset	Works normally
ATI Technologies, RAGE XL PCI	This display adapter cannot display videos.