




Astribank 8™

The First Channel Bank Designed Specifically for Asterisk

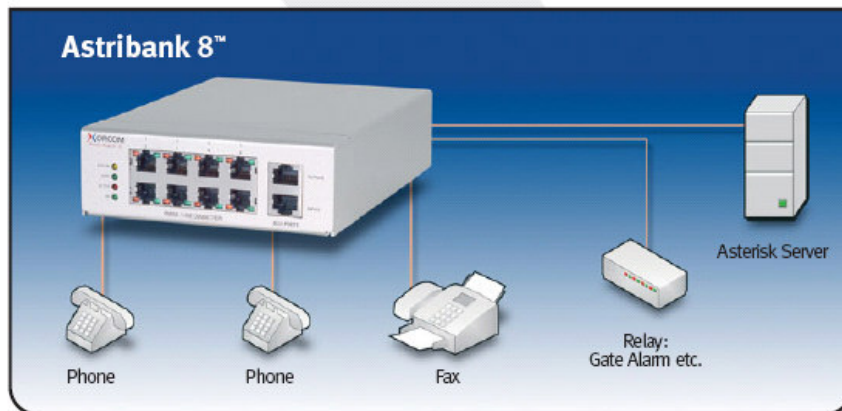

The smart and easy way to connect your Asterisk server to analog telephony

- 8 FXS ports
- 2 relay output ports for peripheral devices (alarm, gate, etc.)
- 4 input ports for peripheral devices
- USB-2 direct connection to Asterisk server – no PRI card required
- Full support of Asterisk conference capability
- High quality analog telephony
- "Plug & Play" installation using Xorcom Rapid™
- Caller ID, message waiting indicator, individual ring patterns
- Supports international impedance and any analog telephone
- Indicator lights
- USB "Plug and Play" operation
- Automatic configuration and setup with Xorcom Rapid™ distribution