



An Axis company

# **2N<sup>®</sup> LTE Verso**

## **Modular LTE Intercom**



## **Installation Manual**

**Version: 1.0**

**[www.2n.cz](http://www.2n.cz)**

The 2N TELEKOMUNIKACE a.s. is a Czech manufacturer and supplier of telecommunications equipment.



The product family developed by 2N TELEKOMUNIKACE a.s. includes GSM gateways, private branch exchanges (PBX), and door and lift communicators. 2N TELEKOMUNIKACE a.s. has been ranked among the Czech top companies for years and represented a symbol of stability and prosperity on the telecommunications market for almost two decades. At present, we export our products into over 120 countries worldwide and have exclusive distributors on all continents.



2N<sup>®</sup> is a registered trademark of 2N TELEKOMUNIKACE a.s. Any product and/or other names mentioned herein are registered trademarks and/or trademarks or brands protected by law.



2N TELEKOMUNIKACE a.s. administers the FAQ database to help you quickly find information and to answer your questions about 2N products and services. On [www.faq.2n.cz](http://www.faq.2n.cz) you can find information regarding products adjustment and instructions for optimum use and procedures „What to do if...“.



2N TELEKOMUNIKACE a.s. hereby declares that the 2N<sup>®</sup> product complies with all basic requirements and other relevant provisions of the 1999/5/EC directive. For the full wording of the Declaration of Conformity see the CD-ROM (if enclosed) or our website at [www.2n.cz](http://www.2n.cz).



The 2N TELEKOMUNIKACE a.s. is the holder of the ISO 9001:2009 certificate. All development, production and distribution processes of the company are managed by this standard and guarantee a high quality, technical level and professional aspect of all our products.

# Content:

---

- 1. Product Overview
  - 1.1 Components and Associated Products
  - 1.2 Terms and Symbols
- 2. Description and Installation
  - 2.1 Before You Start
  - 2.2 Mechanical Installation
    - 2.2.1 One Module Box
    - 2.2.2 Two Modules Boxes
    - 2.2.3 More Two Modules Boxes
    - 2.2.4 Three Modules Box
    - 2.2.5 More Than Three Modules Boxes
    - 2.2.6 Tamper and I/O Module
    - 2.2.7 Module dimensions
  - 2.3 Electric Installation
  - 2.4 Extending Module Connection
  - 2.5 Completion
- 3. Function and Use
  - 3.1 Configuration
  - 3.2 Intercom Control as Viewed by External User
  - 3.3 Touch Display Intercom Control As Viewed by External User
  - 3.4 Intercom Control as Viewed by Internal User
  - 3.5 Maintenance
  - 3.6 Downloads
- 4. Technical Parameters
- 5. Supplementary Information
  - 5.1 Troubleshooting
  - 5.2 Directives, Laws and Regulations
  - 5.3 General Instructions and Cautions

# 1. Product Overview

---

Here is what you can find in this section:

- 1.1 Components and Associated Products
- 1.2 Terms and Symbols

---

## Basic Features

---

**2N<sup>®</sup> LTE Verso** is an elegant and reliable LTE intercom equipped with lots of useful functions, which are not quite common in this category of devices. A mobile LTE connection makes it possible to install devices where no LAN cable connection is available. The My2N portal helps make calls to mobile phones and appropriate 2N devices without complex configuration. Thanks to SIP support and compatibility with major brands of PBX manufacturers, it can benefit from using VoIP networks. **2N<sup>®</sup> LTE Verso** can be used as a door or special purpose intercom for office buildings, residential areas and other applications.

**2N<sup>®</sup> LTE Verso** is a modular system: the user determines its configuration according to the needs of the particular installation. Unlike other intercoms, **2N<sup>®</sup> LTE Verso** is not delivered as a compact unit. After choosing the installation mode and particular modules, the user gets separate parts to be assembled using the plug&play connections. This approach allows for unique individual combinations and also leaves space for adding of additional modules later on.

**Wide angle HD camera** - allows the tenant to see the calling person on his or her videophone or PC screen in high resolution. The camera itself is hidden behind a darkened glass, so it is not visible. The intercom is equipped with night vision, which automatically selects the night/day mode according to light.

**Quick dial buttons** - there are 146 quick dial buttons in total in multiple button modules. For each button, up to three separate phone numbers plus substitute users can be defined, which ensures that the called user is reached whenever needed. The buttons are backlit with a clear mechanical response. The nametag surface is scratch resistant.

**Keypad** - is a keypad module that allows the user to use the intercom as a code lock and dial a phone number or phonebook position of the called user.

**RFID card reader** - the card reader module brings the access control functionality according to the RFID card or keyfob. With the advanced features, other functions can be RFID card controlled too.

**Electric lock control** - as part of the access system, the electrical lock can be controlled by a code entered on the keypad or the called phone, with the RFID card, via a PC application, etc. When necessary, more electrical outputs can be added. Numerous parameters allow for a wide spectrum of applications.

---

**Robustness** - 2N<sup>®</sup> **LTE Verso** is designed as a vandal resistant intercom, which withstands mechanical or weather conditions with no need to purchase extra accessories.

**Audio quality** - using the automatic echo cancelling system, full duplex communication is available at any time.

**2N<sup>®</sup> LTE Verso installation** - simply assemble the modules, insert a SIM card and connect a power supply. The modules are plug&play, so you do not have to configure them manually. The intercom is fed from a 12V power supply.

**2N<sup>®</sup> LTE Verso configuration** - use a PC equipped with any Internet browser.

---

## Advantages of Use

---

- Easy connection via LTE data network without LAN cabling
- Elegant design
- Weather resistant
- Various modes of installation (flush, surface, plasterboard)
- Sensitive microphone and loud speaker
- Both-way audio communication – acoustic echo cancellation
- Integrated colour HD camera with wide-angle lense and hidden night vision
- Selectable number of quick dial buttons with nametags and backlight
- Optional numeric keypad with backlight
- Option to have multiple modules of the same kind – for example, card reader for both entering and leaving the building
- Integrated switches of electric locks with wide setting options
- Optional integrated RFID card reader module
- 12 V DC power supply
- Configuration using web interface
- VoIP standard SIP 2.0 support
- 1999 Phone Book positions
- 20 user time profiles
- Video codecs (H.263, H.263+, H.264, MPEG-4, MJPEG)
- Audio codecs (G.711, G.729, G.722, L16/16kHz)
- HTTP server for configuration
- SNTP client for time synchronisation
- SMTP client for email sending, Picture to Email feature
- TFTP/HTTP client for automated firmware and configuration upgrade and update

# 1.1 Components and Associated Products

## Main Units

Part No. 9155401C-E



- Main unit LTE<sup>®</sup> Verso
- European LTE support
- HD camera
- There may be just one main unit in every installation. The main unit installation requires two frame/box positions one of which is left for additional installation of a module or internal antenna stuck to a plastic blind.

Part No. 9155401CB-E



- Main unit LTE<sup>®</sup> Verso
- European LTE support
- HD camera
- There may be just one main unit in every installation. The main unit installation requires two frame/box positions one of which is left for additional installation of a module or internal antenna stuck to a plastic blind.
- Exposure to direct sunlight is not recommended.

### Caution

- There may be just one main unit (with/without a camera) in every installation. The main unit installation requires two frame/box positions one of which is left for additional installation of a module or internal antenna stuck to a plastic blind.
- One blind module with a stuck LTE antenna is supplied with the main unit.



## External Antennas

Part No. 9155048



- 2N® LTE Verso - external antenna
- optional accessories for weak signals with an internal antenna in a blind

## Frames

Part No. 9155011



- Flush mounting frame, 1 module

Part No. 9155011B






- Flush mounting frame, 1 module

Part No. 9155012






- Flush mounting frame, 2 modules

<p>Part No. 9155012B</p> 	<ul style="list-style-type: none"><li>• Flush mounting frame, 2 modules</li></ul>
<p>Part No. 9155013</p> 	<ul style="list-style-type: none"><li>• Flush mounting frame, 3 modules</li></ul>

<p>Part No. 9155013B</p> 	<ul style="list-style-type: none"><li>• Flush mounting frame, 3 modules</li></ul>
<p>Part No. 9155021</p> 	<ul style="list-style-type: none"><li>• Surface mounting frame, 1 module</li></ul>

<p>Part No. 9155021B</p> 	<ul style="list-style-type: none"><li>• Surface mounting frame, 1 module</li></ul>
<p>Part No. 9155022</p> 	<ul style="list-style-type: none"><li>• Surface mounting box, 2 modules</li></ul>

<p>Part No. 9155022B</p> 	<ul style="list-style-type: none"><li>• Surface mounting box, 2 modules</li></ul>
<p>Part No. 9155023</p> 	<ul style="list-style-type: none"><li>• Surface mounting box, 3 modules</li></ul>

<p>Part No. <b>9155023B</b></p> 	<ul style="list-style-type: none"> <li>• Surface mounting box, 3 modules</li> </ul>
---	---

✔ **Tip**

- The 1-module frame is used when another module is added to the existing installation or when the module is mounted to an extended interconnecting cable for an outgoing reader, for example.

✔ **Tip**

- Be sure to order the covering frame for the flush or plasterboard mounting box together with the flush mounting box
  - 1-module frame (Part No. **9155011**) – 1-module flush mounting box (Part No. **9155014**)
  - 2-module frame (Part No. **9155012**) – 2-module flush mounting box (Part No. **9155015**)
  - 3-module frame (Part No. **9155013**) – 3-module flush mounting box (Part No. **9155016**)

## Extending Modules

Part No. 9155030



- 2N<sup>®</sup> IP/LTE Verso - Infopanel
- The Infopanel module helps you place such information into the intercom installation as house number, opening hours and similar data. The Infopanel backlight is software controlled.

Part No. 9155031



- 2N<sup>®</sup> IP/LTE Verso - Keypad
- The numeric keypad module helps you dial users via their phonebook positions or phone numbers, control the lock and use other code-accessible functions. The keypad digits and symbols are backlit.

Part No. 9155031B






- 2N<sup>®</sup> IP/LTE Verso - Keypad
- The numeric keypad module helps you dial users via their phonebook positions or phone numbers, control the lock and use other code-accessible functions. The keypad digits and symbols are backlit.

Part No. 9155047



- 2N<sup>®</sup> IP/LTE Verso - Touch keypad
- The numeric touch keypad module helps you dial users via their phonebook positions or phone numbers, control the lock and use other code-accessible functions. The keypad digits and symbols are backlit.



<p>Part No. 9155032</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> IP/LTE Verso - RFID reader, 125 kHz</li> <li>• The card reader module provides you with access control via contactless cards or keyfobs. The module supports the 125 kHz EM-41xx or HID Proximity cards.</li> </ul>
<p>Part No. 9155033</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> IP/LTE Verso - RFID reader, 13.56 MHz</li> <li>• The card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 13.56 MHz cards or other carriers (only card serial number is read):</li> <li>• ISO/IEC 14443A Mifare Classic 1k &amp; 4k, DESFire EV1, Mini, Plus S&amp;X, Ultralight, Ultralight C</li> <li>• ISO/IEC 14443B CEPAS, HID iCLASS</li> <li>• JIS X 6319 Felica</li> </ul>
<p>Part No. 9137422E</p> 	<p>2N<sup>®</sup> IP/LTE external Bluetooth reader (USB interface)</p> <p>An external Bluetooth reader connecting to your computer via USB.</p> <p>It can be used to pair new users who want to use their SmartPhones and 2N<sup>®</sup> Mobile Key application for access to controlled areas.</p> <p>A USB driver is required for the external reader to work properly.</p>

Part No. 9155034







- 2N<sup>®</sup> IP/LTE Verso - I/O
- The module provides logical inputs and outputs for sensor integration or door control. The module is installed under another module, i. e. needs no separate position.
- Inputs and outputs
  - RELAY1 - RELAY1 terminals with accessible 30 V / 1 A AC/DC NO/NC contact
  - RELAY2 - RELAY2 terminals with accessible 30 V / 1 A AC/DC NO/NC contact
  - IN1 - IN1 terminals for input in passive/active mode (-30 V to +30 V DC)  
OFF = open OR  $U_{IN} > 1.5 \text{ V}$   
ON = closed contact OR  $U_{IN} < 1.5 \text{ V}$
  - IN2 - IN2 terminals for input in passive /active mode (-30 V to +30 V DC)  
OFF = open OR  $U_{IN} > 1.5 \text{ V}$   
ON = closed contact OR  $U_{IN} < 1.5 \text{ V}$
  - TAMPER - Tamper switch (9155038) input





Part No. 9155035





- 2N<sup>®</sup> IP/LTE Verso - 5 buttons
- A module with 5 mechanical quick dial buttons. The buttons are backlit and can include nametags.

<p>Part No. 9155036</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> IP/LTE Verso - Touch display</li> <li>• The touchscreen module allows visitors to dial users in a smartphone-like way. It features a structured phonebook and a keypad.</li> </ul>
<p>Part No. 9155037</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> IP/LTE Verso - Wiegand</li> <li>• The module helps you interconnect your system with other systems via the Wiegand interface. The module is installed under another module, i.e. needs no separate position.</li> </ul>
<p>Part No. 9155038</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> IP/LTE Verso - Tamper switch</li> <li>• The module secures your system against tampering by detecting intercom opening or top frame removing. The module is installed on a special place and needs no separate position.</li> </ul>
<p>Part No. 9155039</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> IP/LTE Verso - Blind</li> <li>• One blind module is supplied with the main unit.</li> </ul>

<p>Part No. 9155040</p> 	<ul style="list-style-type: none"> <li>• <b>2N<sup>®</sup> IP/LTE Verso</b> – RFID reader NFC support, 13.56 MHz</li> <li>• The card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 13.56 MHz cards or other carriers (only card serial number is read):</li> <li>• <b>ISO/IEC 14443A</b> Mifare Classic 1k &amp; 4k, DESFire EV1, Mini, Plus S&amp;X, Ultralight, Ultralight C</li> <li>• <b>ISO/IEC 14443B</b> CEPAS, HID iCLASS</li> <li>• <b>JIS X 6319</b> Felica</li> <li>• <b>ISO/IEC 18092</b> SmartPhone with NFC/HCE support, since Android version 4.3</li> </ul>
<p>Part No. 9155041</p> 	<ul style="list-style-type: none"> <li>• <b>2N<sup>®</sup> IP/LTE Verso</b> – Induction loop</li> <li>• The induction loop module is used to transmit an audio signal directly into a hearing aid via a magnetic field.</li> </ul>
<p>Part No. 9155042</p> 	<ul style="list-style-type: none"> <li>• <b>2N<sup>®</sup> IP/LTE Verso</b> – Secured RFID card reader NFC support, 13.56 MHz</li> <li>• Compatible with firmware 2.13 and higher</li> <li>• The card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 13.56 MHz cards or other carriers (optionally card serial number or PAC ID is read):</li> <li>• <b>ISO/IEC 14443A</b> Mifare Classic 1k &amp; 4k, DESFire EV1, Mini, Plus S&amp;X, Ultralight, Ultralight C</li> <li>• <b>ISO/IEC 14443B</b> CEPAS, HID iCLASS</li> <li>• <b>JIS X 6319</b> Felica</li> <li>• <b>ISO/IEC 18092</b> SmartPhone with NFC/HCE support, since Android version 4.3</li> </ul>

<p>Part No. 9155046</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> IP/LTE Verso - Bluetooth reader</li> <li>• The Bluetooth reader is used for reading users' secure IDs from Android and iOS SmartPhone applications.</li> </ul>
<p>Part No. 9155045</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> IP/LTE Verso - Fingerprint reader</li> <li>• The Fingerprint reader is used for verification of human fingers for access control and intercom control.</li> </ul>
<p>Part No. 9155050</p> 	<ul style="list-style-type: none"> <li>• 1 m extension cable</li> <li>• Only one extension cable is allowed.</li> <li>• Maximum bus length is 7 m.</li> </ul>
<p>Part. No. 9155051</p> 	<ul style="list-style-type: none"> <li>• Blind button</li> </ul>

<p><b>Part No. 9155054</b></p> 	<ul style="list-style-type: none"><li>• 3 m extension cable</li><li>• Only one extension cable is allowed.</li><li>• Maximum bus length is 7 m.</li></ul>
<p><b>Part No. 9155055</b></p> 	<ul style="list-style-type: none"><li>• 5 m extension cable</li><li>• Only one extension cable is allowed.</li><li>• Maximum bus length is 7 m.</li></ul>

## Mounting Accessories

Part No. 9155014



- Flush mounting box
- 1 module
- Designed for flush or plasterboard mounting of 1-module sets and delivered including accessories for multiple box assemblies

Part No. 9155015




- Flush mounting box
- 2 modules
- Designed for flush or plasterboard mounting of 2-module sets and delivered including accessories for multiple box assemblies

Part No. 9155016



- Flush mounting box
- 3 modules
- Designed for flush or plasterboard mounting of 3-module sets and delivered including accessories for multiple box assemblies

<p>Part No. 9155061</p> 	<ul style="list-style-type: none"> <li>• Backplate, 1 module</li> <li>• For glass or uneven surface installations</li> </ul>
<p>Part No. 9155062</p> 	<ul style="list-style-type: none"> <li>• Backplate, 2 modules</li> <li>• For glass or uneven surface installations</li> </ul>
<p>Part No. 9155063</p> 	<ul style="list-style-type: none"> <li>• Backplate, 3 modules</li> <li>• For glass or uneven surface installations</li> </ul>
<p>Part No. 9155064</p> 	<ul style="list-style-type: none"> <li>• Backplate, 2 (w) x 2 (h) modules</li> <li>• For glass or uneven surface installations</li> </ul>



<p>Part No. 9155065</p> 	<ul style="list-style-type: none"> <li>• Backplate, 3 (w) x 2 (h) modules</li> <li>• For glass or uneven surface installations</li> </ul>
<p>Part No. 9155066</p> 	<ul style="list-style-type: none"> <li>• Backplate, 2 (w) x 3 (h) modules</li> <li>• For glass or uneven surface installations</li> </ul>
<p>Part No. 9155067</p> 	<ul style="list-style-type: none"> <li>• Backplate, 3 (w) x 3 (h) modules</li> <li>• For glass or uneven surface installations</li> </ul>

Choose the proper frame and, if necessary, mounting box type depending on your particular 2N<sup>®</sup> LTE Verso installation needs. 2N<sup>®</sup> LTE Verso is designed for outdoor applications and requires no additional roof.

## Internal Units and Accessories

Part Numbers:

91378365

91378366



- 2N<sup>®</sup> Indoor Touch - black
- WiFi version (latter Part No.)
- 2N<sup>®</sup> Indoor Touch, an elegant internal touch panel, is suitable for all the **2N IP/LTE intercoms**. You can display and start conversation with the person standing at the door, unlock the door or turn on the entrance hall light.

Part No. 91378382



- 2N<sup>®</sup> Indoor Touch desk stand - black

Part Numbers:

91378365WH



91378366WH






- 2N<sup>®</sup> Indoor Touch - white
- WiFi version (the latter Part No.)
- 2N<sup>®</sup> Indoor Touch, an elegant internal touch panel, is suitable for all the **2N IP/LTE intercoms**. You can display and start conversation with the person standing at the door, unlock the door or turn on the entrance hall light.

<p>Part No. 91378382W</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> Indoor Touch desk stand - white</li> </ul>

## VoIP Phones

<p>Part No. 91378357</p> 	<ul style="list-style-type: none"> <li>• Grandstream GXV3240 VoIP video telephone</li> <li>• GXV3240 is the successor to the popular GXV3140 model, which allows comfortable video calls in the IP network. Touchscreen and keypad control.</li> </ul>
<p>Part No. 91378358</p> 	<ul style="list-style-type: none"> <li>• Grandstream GXV3275 VoIP telephone</li> <li>• GXV3275 is the successor to the popular GXV3175 model, which allows comfortable video calls in the IP network. Touchscreen control.</li> </ul>

## Electric Locks

<p>Part No. 932071E</p> 	<ul style="list-style-type: none"> <li>• BEFO 11211</li> <li>• 12 V / 230 mA DC</li> <li>• Low consumption</li> </ul>
<p>Part No. 932081E</p> 	<ul style="list-style-type: none"> <li>• BEFO 11221 with momentum pin</li> <li>• 12 V / 230 mA DC</li> <li>• Low consumption</li> <li>• A short electrical pulse is sufficient to unlock and open the door. The lock then remains open until someone closes the door.</li> </ul>
<p>Part No. 932091E</p> 	<ul style="list-style-type: none"> <li>• BEFO 11211MB with mechanical blocking</li> <li>• 12 V / 230 mA DC</li> <li>• Low consumption</li> <li>• Enables to close or open the lock mechanically. Once opened, the lock remains so all the time. Once closed, the lock behaves as a standard electrical lock.</li> </ul>

<p><b>Part No. 932061E</b></p> 	<ul style="list-style-type: none"> <li>• 211211 door signalling, low consumption</li> <li>• 12 V / 230 mA</li> <li>• A regular lock with a built-in contact to indicate whether the door is open or closed.</li> </ul>
<p><b>Part No. 932072E</b></p> 	<ul style="list-style-type: none"> <li>• 31211 fail-safe</li> <li>• 12 V / 170 mA DC</li> <li>• The fail-safe lock is closed when electricity is switched on. When electricity is interrupted, the lock is opened.</li> </ul>
<p><b>Part No. 932062E</b></p> 	<ul style="list-style-type: none"> <li>• 321211 fail-safe, door signalling</li> <li>• 12 V / 170 mA</li> <li>• The fail-safe lock is closed when electricity is switched on. When electricity is interrupted, the lock is opened.</li> <li>• It contains a built-in contact to indicate whether the door is open or closed.</li> </ul>

 **Tip**

- FAQ: Electric locks - Difference between locks in 2N IP/LTE intercom accessories

## Power Supply

Part No. 91341481E



- Stabilised 12 V / 2 A power supply needs to be used where no PoE is available.

Part No. 932928



- For 12 V AC external power supply of the lock.

## 13 MHz RFID

Part No. 9159031



- External 13.56 MHz Mifare RFID card reader, Wiegand
- Secondary reader for connection to an internal reader. Allows for card entry control from both sides of the door. IP68 cover, also suitable for exteriors. Reads Mifare cards.

Part No. 9137421E



- External RFID reader, 13.56 MHz, 125 kHz + NFC/HCE (USB interface)
- External RFID card reader for PC connection via a USB interface. Suitable for system administration and addition of 13.56 MHz/125 kHz cards and Android platform devices supporting NFC/HCE using a web interface or the **2N<sup>®</sup> Access Commander** application. It reads the same types of cards and devices as the card readers in **2N IP/LTE intercoms**.
  - ISO/IEC 14443A Mifare Classic 1k & 4k, DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C
  - ISO/IEC 14443B CEPAS, HID iCLASS (CSN only)
  - JIS X 6319 Felica
  - ISO/IEC 18092 SmartPhone with NFC/HCE support, since Android version 4.3 (2N<sup>®</sup> Mobile Key app required)
  - EMarine



<p>Part No. 9137424E</p> 	<ul style="list-style-type: none"> <li>• Ext. secured RFID Reader 13.56 MHz, 125 kHz + NFC/HCE (USB interface)</li> <li>• External secured RFID card reader for connection to PC using a USB interface. Suitable for system administration and adding 13.56 MHz, 125 kHz cards and Android platform devices supporting NFC/HCE using a web interface or the <b>2N<sup>®</sup> Access Commander</b> application. It reads the same types of cards and devices as card readers in <b>2N IP intercoms</b>. <ul style="list-style-type: none"> <li>• ISO/IEC 14443A Mifare Classic 1k &amp; 4k, DESFire EV1, Mini, Plus S&amp;X, Ultralight, Ultralight C</li> <li>• ISO/IEC 14443B CEPAS, HID iCLASS (CSN or PAC ID)</li> <li>• JIS X 6319 Felica</li> <li>• ISO/IEC 18092 SmartPhone with NFC/HCE support, since Android version 4.3 (<b>2N<sup>®</sup> Mobile Key</b> app required)</li> <li>• EMarine</li> </ul> </li> </ul>
<p>Part No. 9134173</p> 	<ul style="list-style-type: none"> <li>• Mifare Classic 1k RFID card, 13.56 MHz</li> </ul>
<p>Part No. 9134174</p> 	<ul style="list-style-type: none"> <li>• Mifare Classic 1k RFID fob, 13.56 MHz</li> </ul>

## 125 kHz RFID

Part No. 9159030



- External 125 kHz RFID card reader
- Secondary reader for connection to an internal reader. Allows for card entry control from both sides of the door. IP67 cover, also suitable for exteriors. Reads EM4100 and EM4102 cards.

Part No. 9137420E



- USB RFID card reader, 125 kHz
- External RFID card reader for PC connection via a USB interface. Suitable for system management and addition of EM41xx cards via the 2N<sup>®</sup> Access Commander PC application.

Part No. 9134165E



- EM4100 RFID card, 125 kHz

Part No. 9134166E



- EM4100 RFID fob, 125 kHz




## Biometry

Part No. 9137423E



- 2N<sup>®</sup> IP intercom - external fingerprint reader (USB interface)

## External Switches

<p>Part No. 9159010</p> 	<ul style="list-style-type: none"> <li>• 2N<sup>®</sup> Security Relay</li> <li>• A handy add-on that significantly enhances door entry security as it prevents tampering with the intercom and forced lock opening. To be installed between the intercom and lock, powered by the intercom.</li> </ul>
<p>Part No. 9137410E</p> 	<ul style="list-style-type: none"> <li>• External IP relay - 1 output</li> <li>• Standalone IP device which can be controlled by the <b>2N IP/LTE intercom</b> HTTP commands, which can thus control devices over an unlimited distance.</li> </ul>
<p>Part No. 9137411E</p> 	<ul style="list-style-type: none"> <li>• External IP relay - 4 outputs, PoE</li> <li>• Standalone IP device which can be controlled by the <b>2N IP/LTE intercom</b> HTTP commands, which can thus control devices over an unlimited distance.</li> </ul>

## Induction Loop

Part No. 9155043






- Induction loop module - antenna
- External antenna boosts the range of usability of the induction loop so that a hearing impaired user with a telecoil hearing aid can receive the audio signal in a wider area. It has to be used with **Part No. 9155041**. A 40 cm long interconnecting cable is included.
- Dimensions: 233 (W) x 233 (H) mm

### Tip

- [FAQ: Induction loop - How to connect it with 2N IP/LTE intercom](#)

## Sensors and switches

<p>Part No. 9159013</p> 	<ul style="list-style-type: none"><li>• Exit button</li><li>• Connection button to a logic input for opening a door inside a building.</li></ul>
<p>Part No. 9154004</p> 	<ul style="list-style-type: none"><li>• Water-proof metal button</li></ul>
<p>Part No. 9159012</p> 	<ul style="list-style-type: none"><li>• Magnetic door contact</li><li>• Door installation set that enables the door opening status to be ascertained. Used where the intercom is used for door protection, to detect open door or door violation.</li></ul>

## Additional Modules

Part No. 9159011



- The **2N<sup>®</sup> Wiegand Isolator** is designed for galvanic isolation of two devices separately power supplied and interconnected via the Wiegand bus. The **2N<sup>®</sup> Wiegand Isolator** protects the interconnected devices against communication errors and/or damage.

### Tip

- For more accessories and specific advice please contact your local distributor of 2N products.

## 1.2 Terms and Symbols

---

The following symbols and pictograms are used in the manual:

### **Safety**

- Always abide by this information to prevent persons from injury.

### **Warning**

- Always abide by this information to prevent damage to the device.

### **Caution**

- Important information for system functionality.

### **Tip**

- Useful information for quick and efficient functionality.

### **Note**

- Routines or advice for efficient use of the device.



## 2. Description and Installation

---

Here is what you can find in this section:

- 2.1 Before You Start
- 2.2 Mechanical Installation
- 2.3 Electric Installation
- 2.4 Extending Module Connection
- 2.5 Completion

## Product Completeness Check

---

Before you start please check whether the contents of the package of your new 2N<sup>®</sup> LTE Verso complies with the following list.

- 1x 2N<sup>®</sup> LTE Verso

---

## 2.2 Mechanical Installation

---

### Mounting Types Overview

Refer to the table below for a list of mounting types and necessary components. You can assemble multiple units in all mounting types.

#### Flush mounting – classic bricks

- incl. hollow bricks, thermally insulated walls, etc.


What you need for mounting:

- a properly cut hole as instructed in the box package
- Plaster, mounting glue, mounting foam or mortar as necessary
- 2N<sup>®</sup> IP/LTE Verso , flush mounting boxes and frames
  - 1x module: box Part No. **9155014**, frame Part No. **9155011**
  - 2x modules: box Part No. **9155015**, frame Part No. **9155012**
  - 3x modules: box Part No. **9155016**, frame Part No. **9155013**

#### Flush mounting – plasterboard

What you need for mounting:

- a properly cut hole as instructed in the box package
- 2N<sup>®</sup> IP/LTE Verso, flush mounting boxes and frames
  - 1x module: box Part No. **9155014**, frame Part No. **9155011**
  - 2x modules: box Part No. **9155015**, frame Part No. **9155012**
  - 3x modules: box Part No. **9155016**, frame Part No. **9155013**

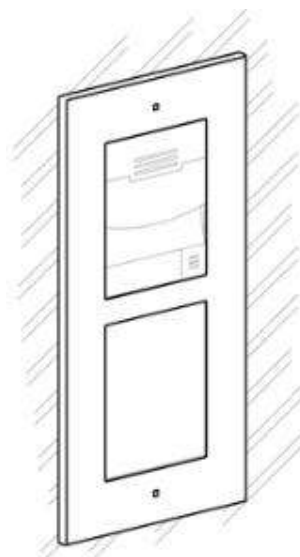


## Surface mounting

- concrete and steel structures, entry barrier columns, interior, etc.

What you need for mounting:

- 2N<sup>®</sup> IP/LTE Verso plus the respective frames
  - 1x module: frame Part No. **9155021**
  - 2x modules: frame Part No. **9155022**
  - 3x modules: frame Part No. **9155023**

For not flat surface use according to the module number backplate Part No **9155061-9155067**.

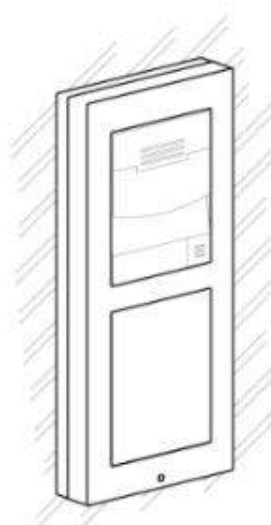

 **Caution**

- The warranty does not apply to the product defects and failures arisen as a result of improper mounting (in contradiction herewith). The manufacturer is neither liable for damage caused by theft within an area that is accessible after the attached electric lock is switched. The product is not designed as a burglar protection device except when used in combination with a standard lock, which has the security function.
- When the proper mounting instructions are not met, water might get in and destroy the electronics. It is because the communicator circuits are under continuous voltage and water infiltration causes an electro-chemical reaction. The manufacturer's warranty shall be void for products damaged in this way!
- Do not remove the plastic film on the seal inside the frame, otherwise water may leak and damage the electronic components.


## General Mounting Principles

 **Tip**

- Select flush mounting where possible to make your product elegant looking, more vandal resistant and more secure.
- You are advised to buy the flush mounting boxes in advance and commission your building company to do the masonry for you. This approach helps you put your intercom exactly in the vertical position.

### **Caution**

- Make sure that the diameter of the dowel holes is accurate to avoid falling out of the dowels! Use the mounting glue to secure the dowels if necessary.
- Make sure that the depth of the dowel holes is accurate!
- Do not use low-quality dowels to avoid their pulling out of the wall!
- Having removed the front panel, make sure that no dirt gets inside the product (especially onto the sealing surface).
- Never turn **2N<sup>®</sup> LTE Verso** to align the box assembly after mounting. Make sure that the flush mounting boxes have been installed accurately.
- Check the plasterboard wall and room interior pressure values. If the difference between the values is too great (as a result, e.g., of overpressure ventilation), separate the intercom using, for example, the mounting box enclosed and seal the cable passage to avoid speaker damage.
- Surface mounting may cause problems on places exposed to potential vandalism (such as public garages, etc.). In this case, use steel anchoring elements instead of the dowels and screws included in the delivery.
- The place for surface mounting must be flat with maximum inequality of 0.5 mm. (e.g. desk materials, glass, cutted stone etc). If the place is not flat, use flush mounting, backplate **Part No 9155061-9155067** or equal the wall surface.

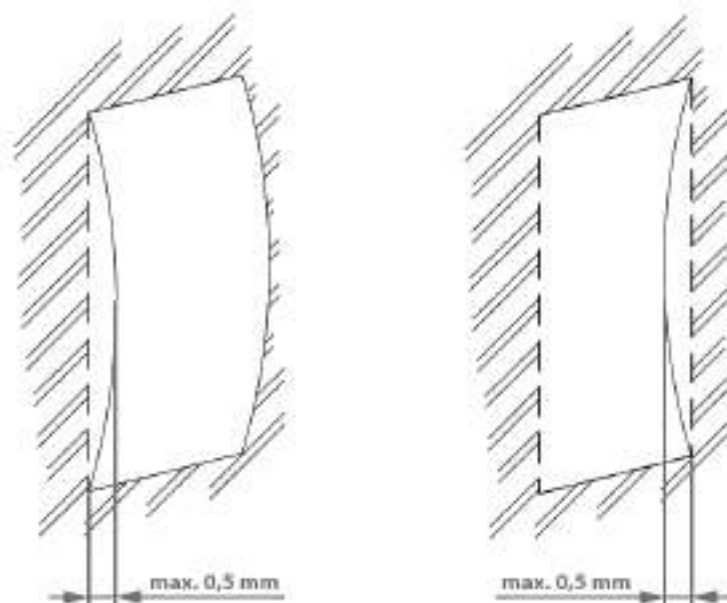

### **Safety**



- Eliminate the risk of personal injury! Surface mounting is not recommended for narrow passages or places where people's attention is distracted by something else. The manufacturer shall not be liable for injuries in such cases!

## **Module Installation**



- 2.2.1 One Module Box
- 2.2.2 Two Modules Boxes
- 2.2.3 More Two Modules Boxes
- 2.2.4 Three Modules Box
- 2.2.5 More Than Three Modules Boxes
- 2.2.6 Tamper and I/O Module
- 2.2.7 Module dimensions

### **2.2.1 One Module Box**



#### **Flush mounting box mounting - classics bricks**

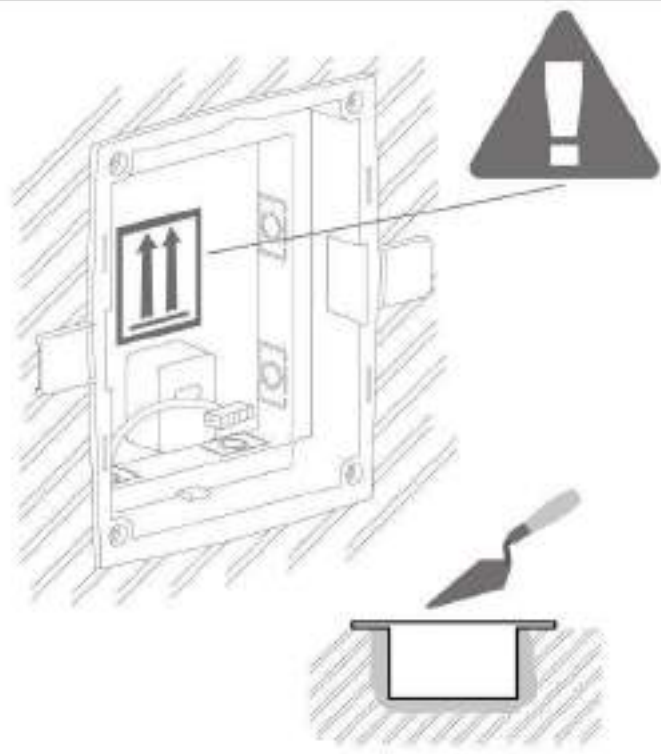
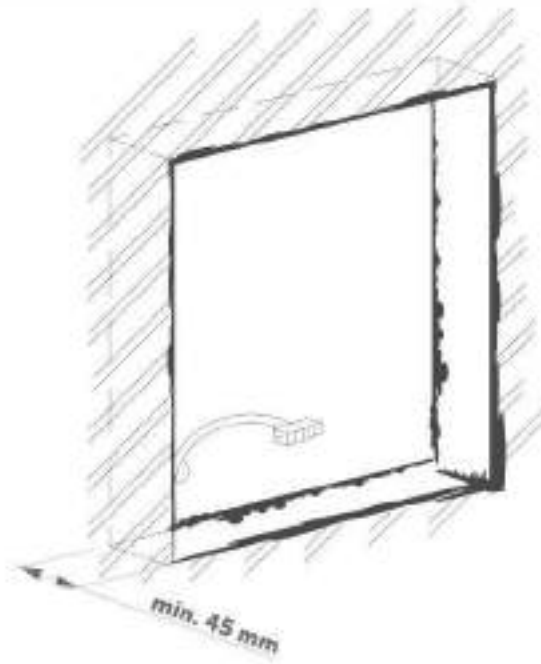





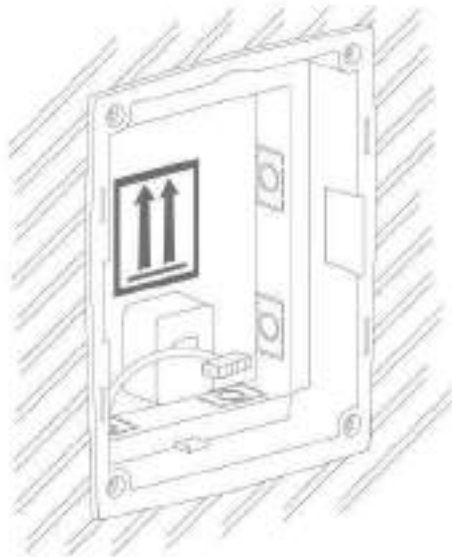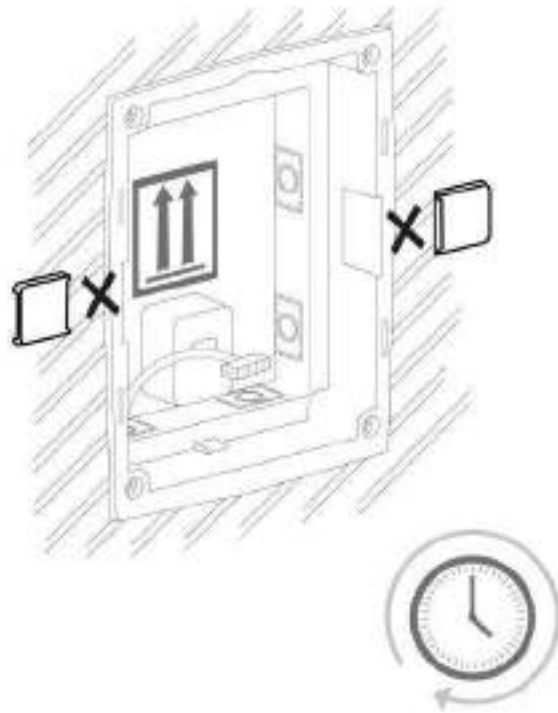

## Flush mounting box mounting - plasterboard

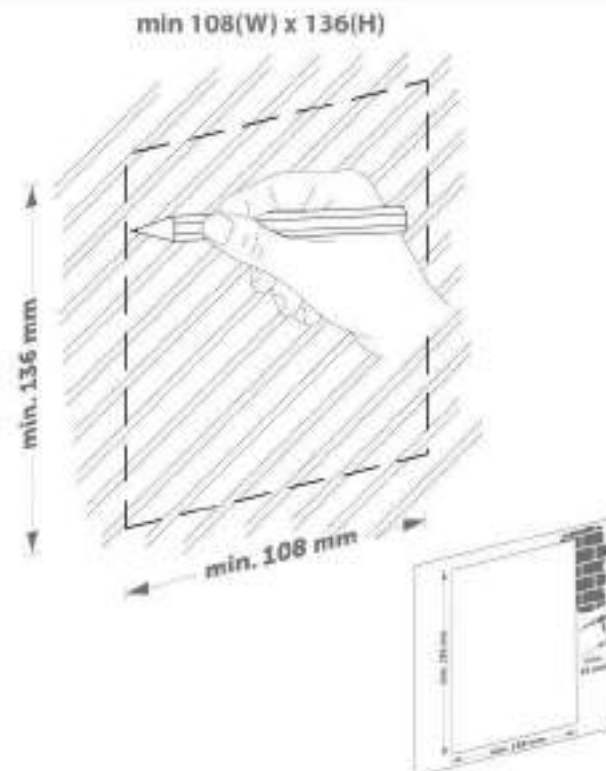
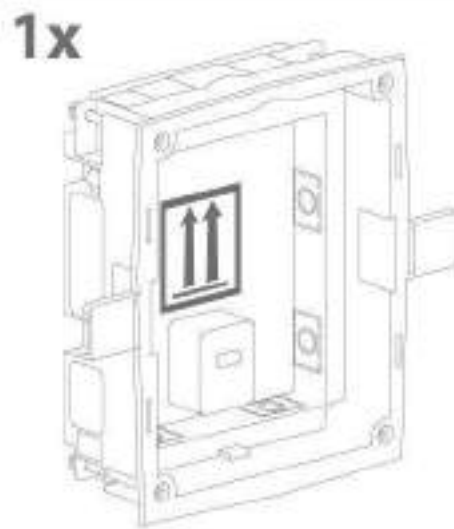


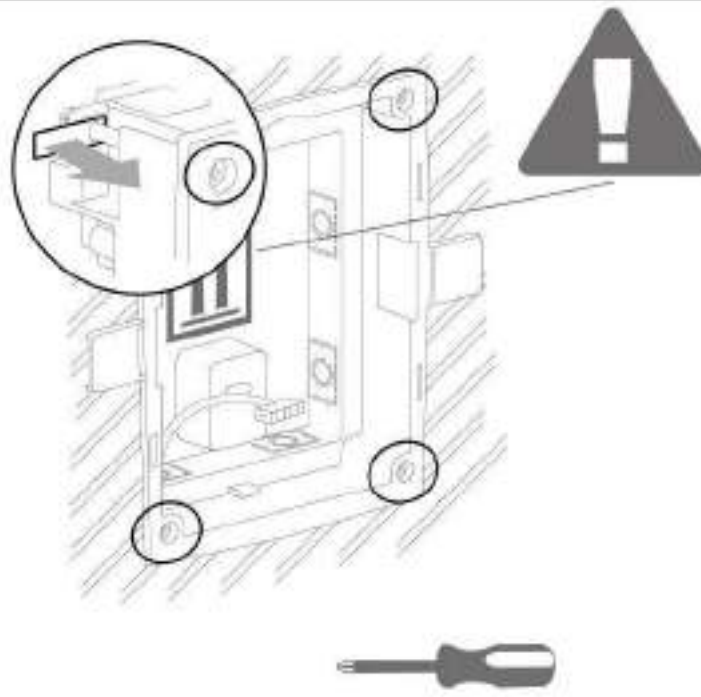
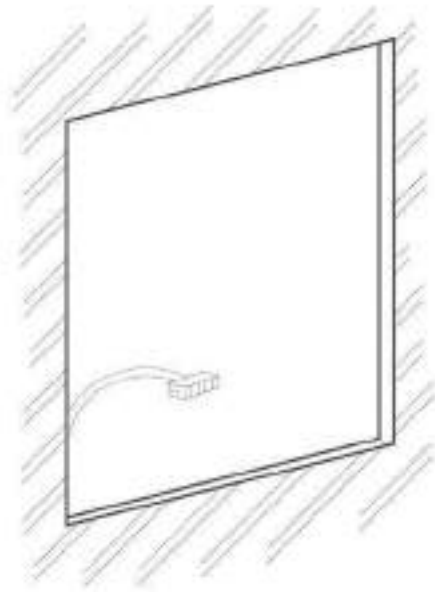



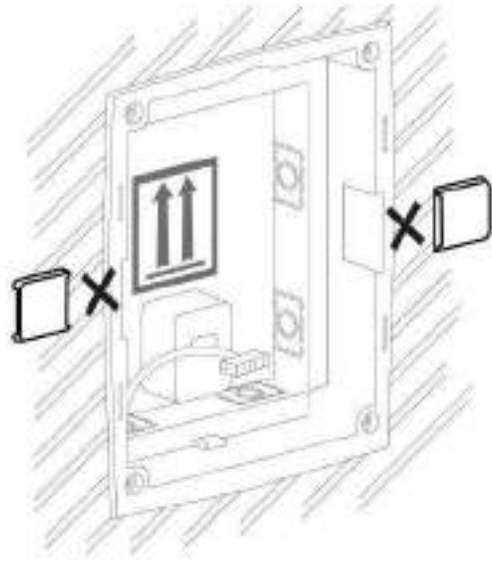




## Flush module mounting

---

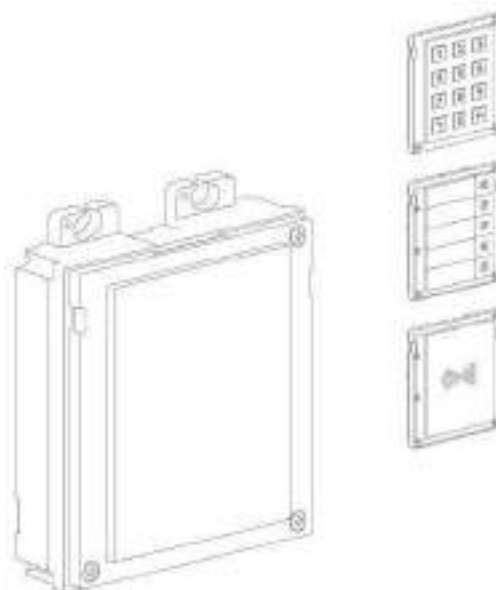
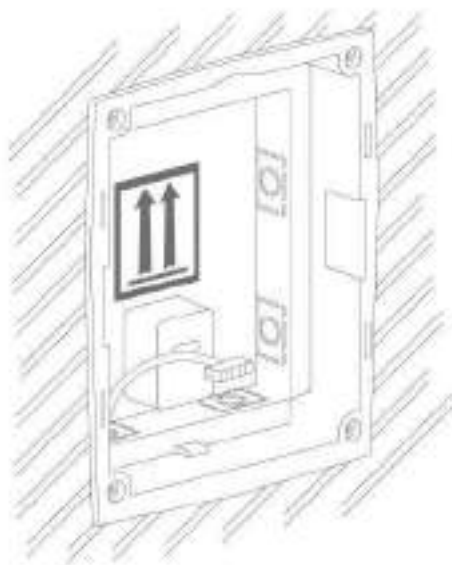


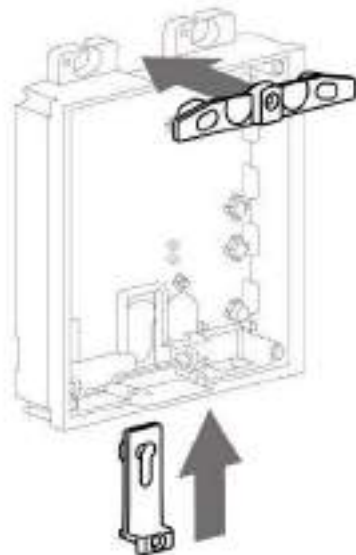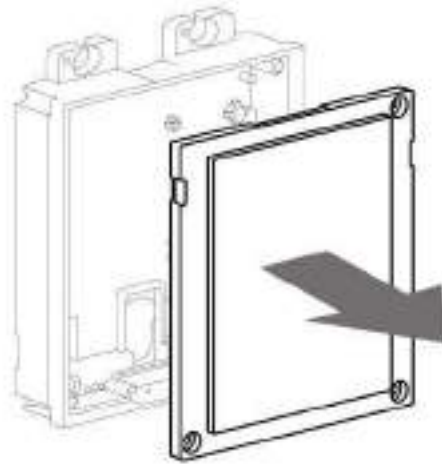

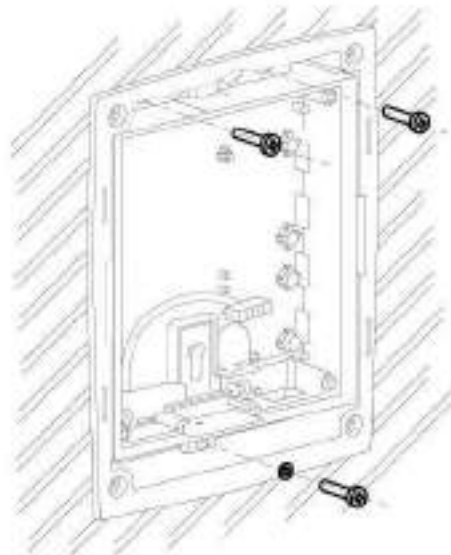
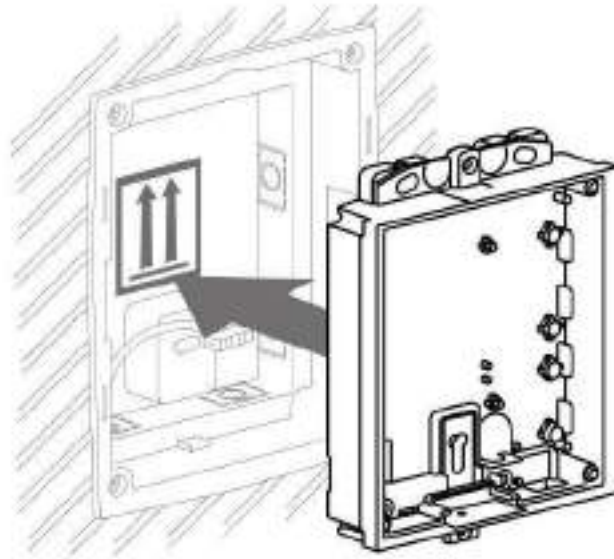


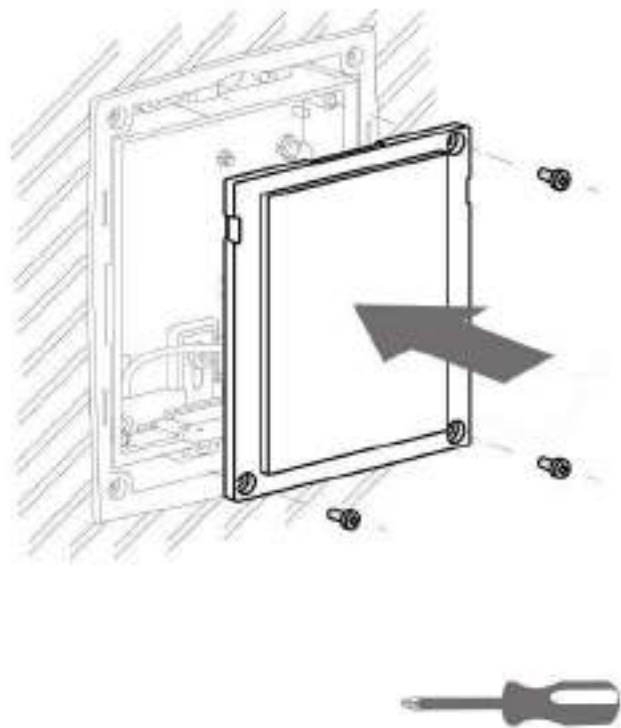
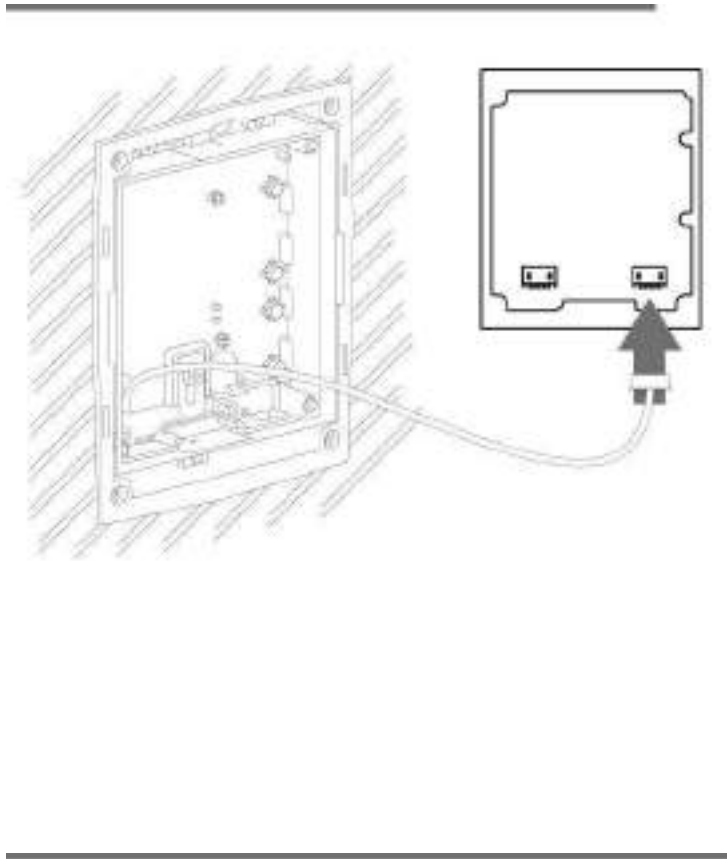






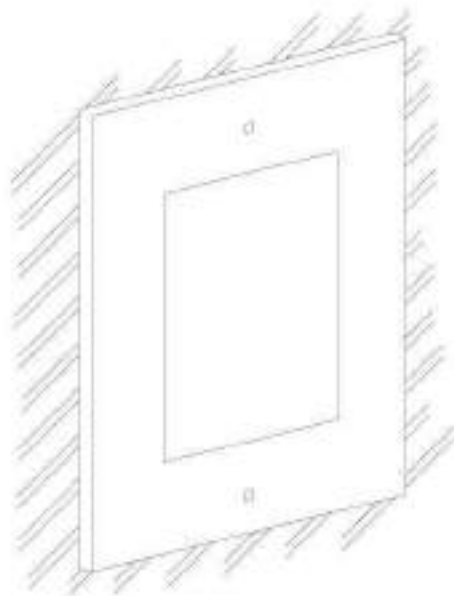
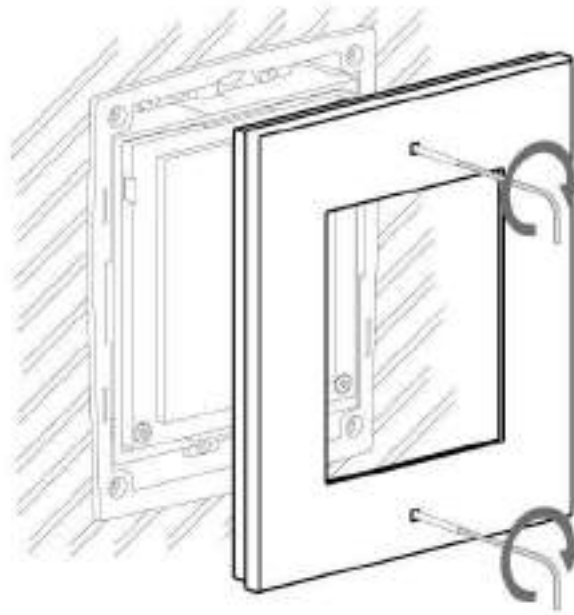



## Surface module mounting

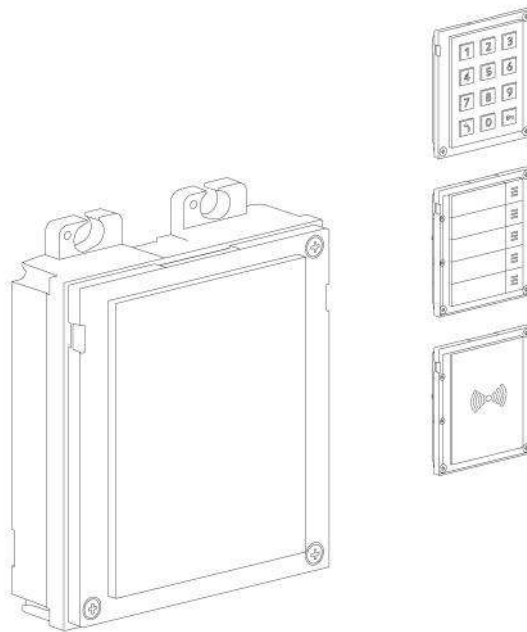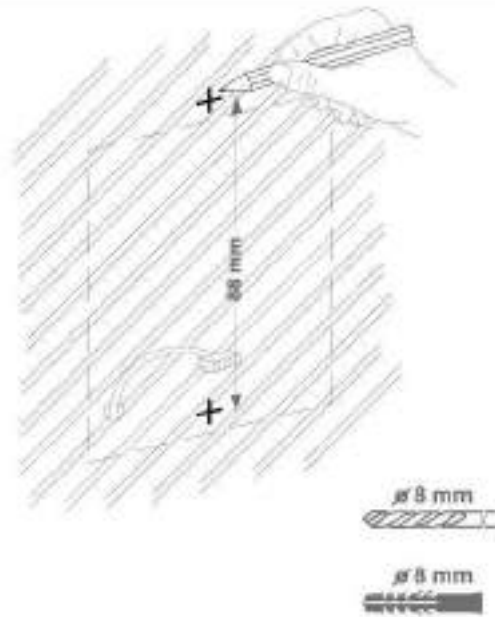

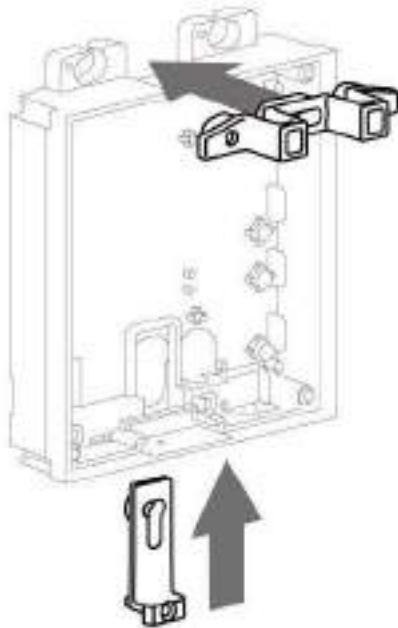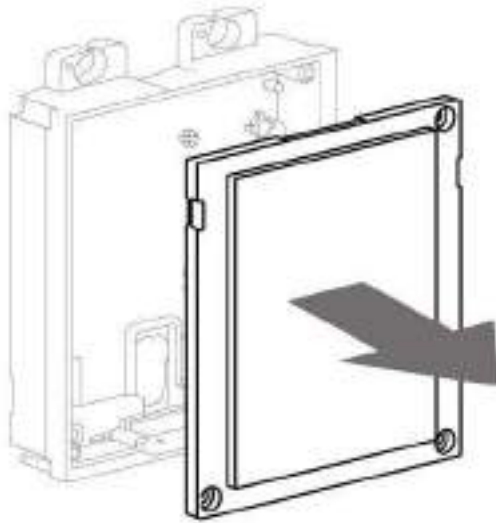

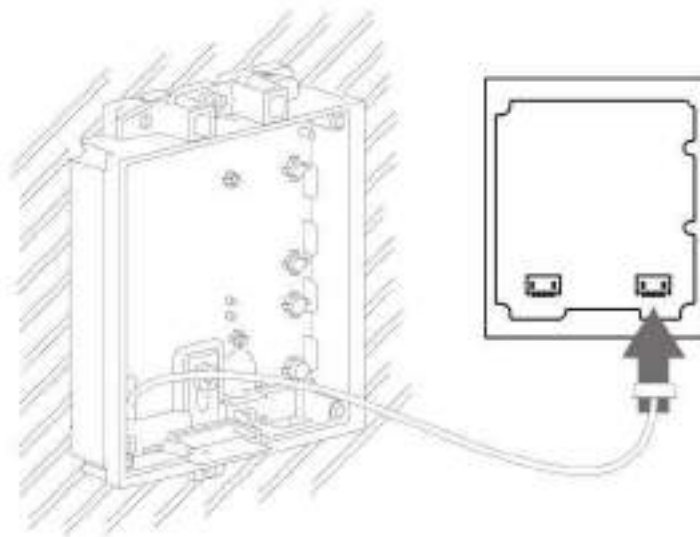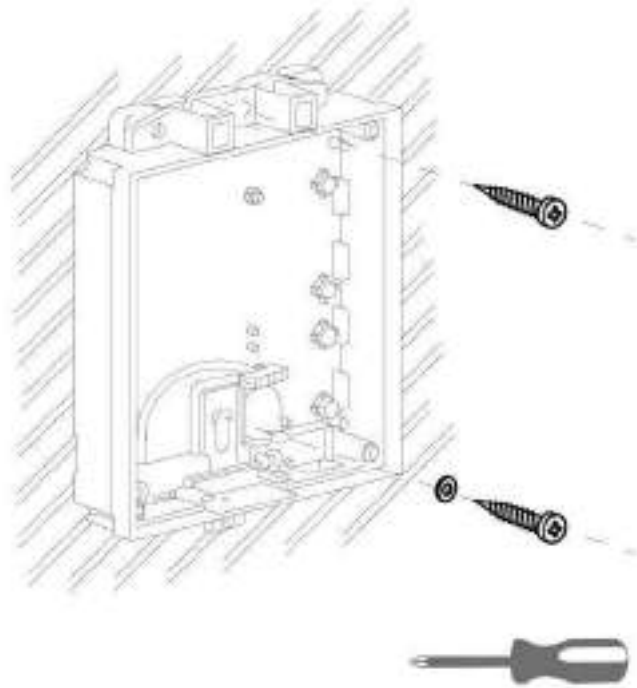


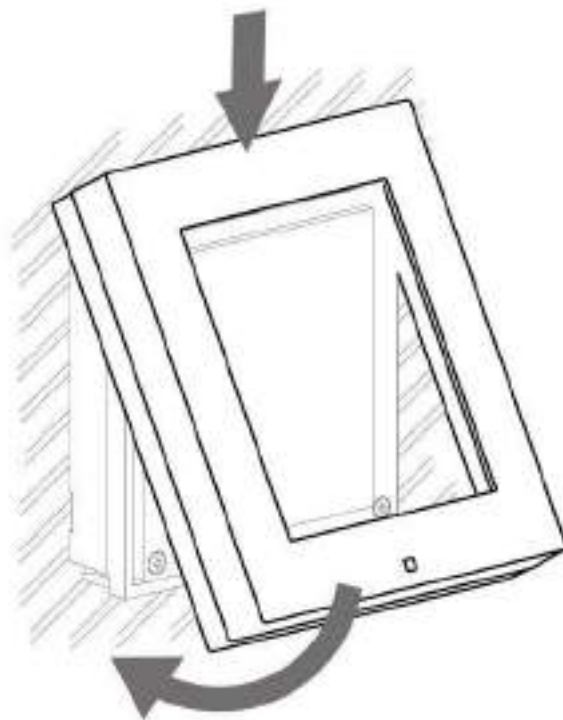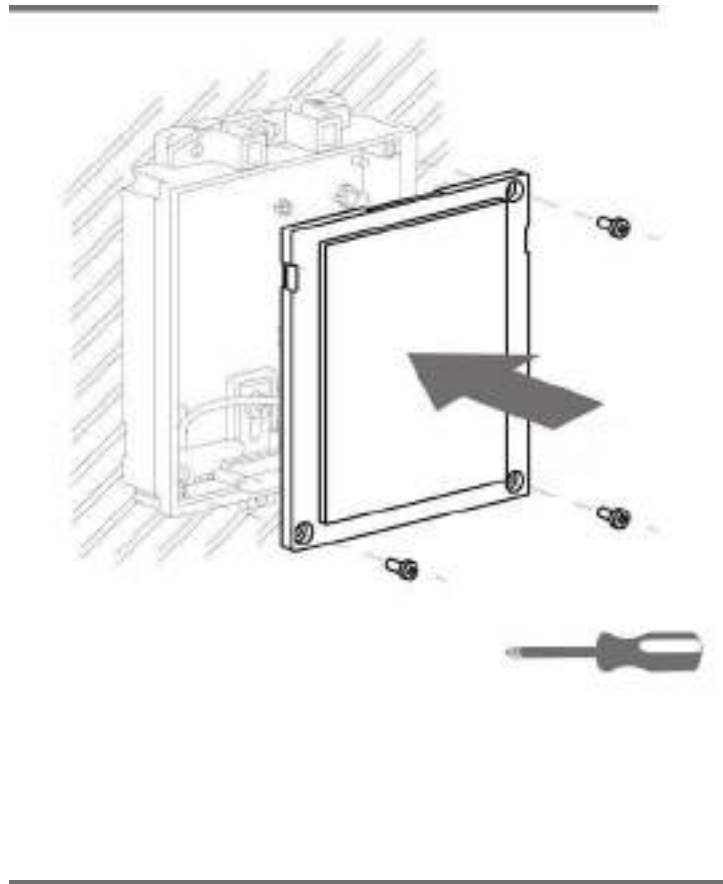

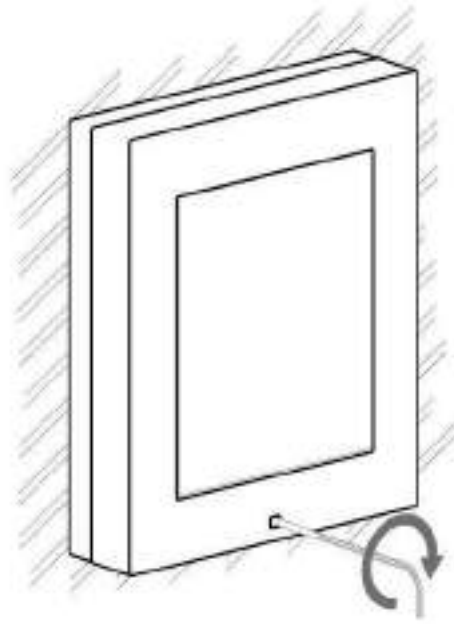



## 2.2.2 Two Modules Boxes

### Flush mounting box mounting - classic bricks

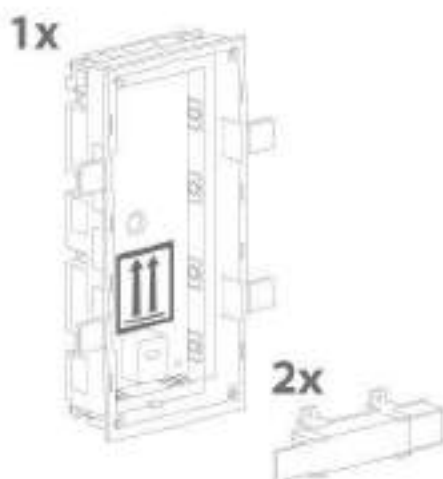

min 108(W) x 238(H) x 45(D) mm

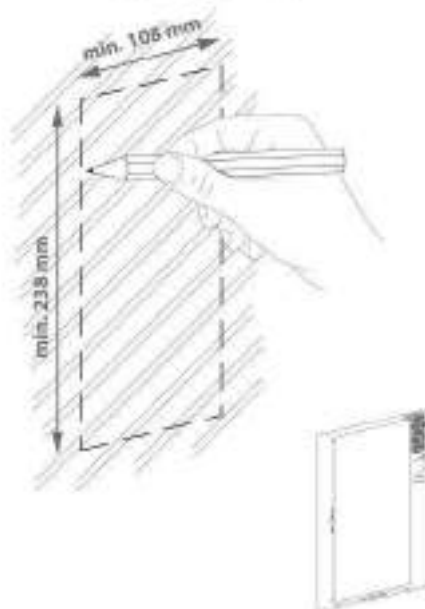

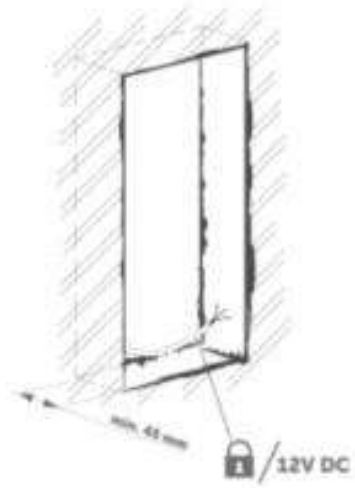












## Flush mounting box mounting - plasterboard




min 108(W) x 238(H) mm


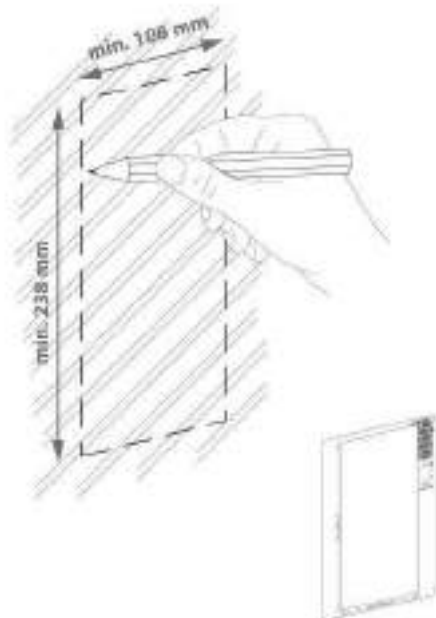


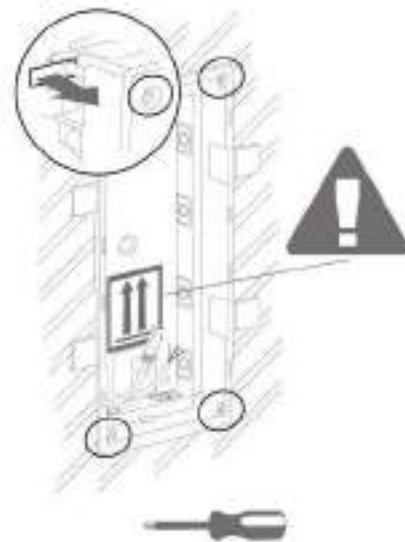
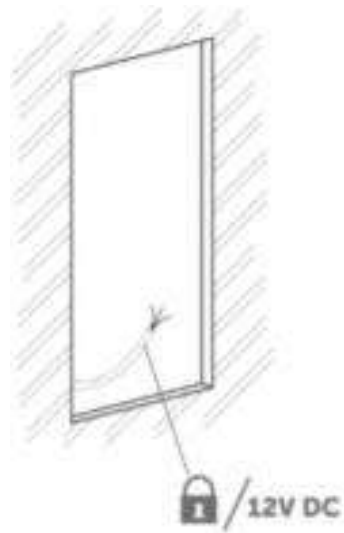


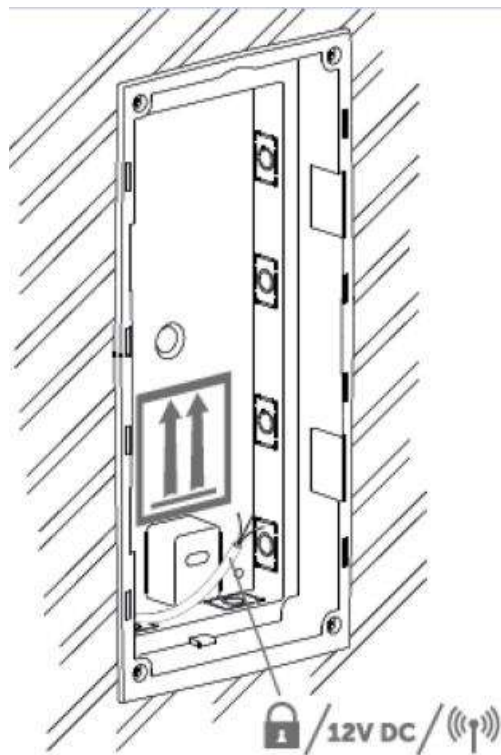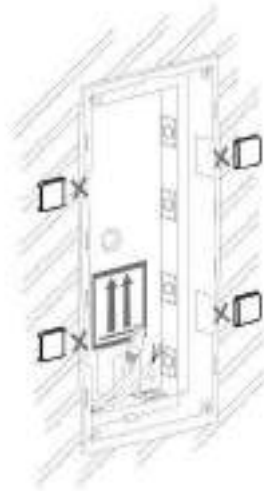



## Flush module mounting

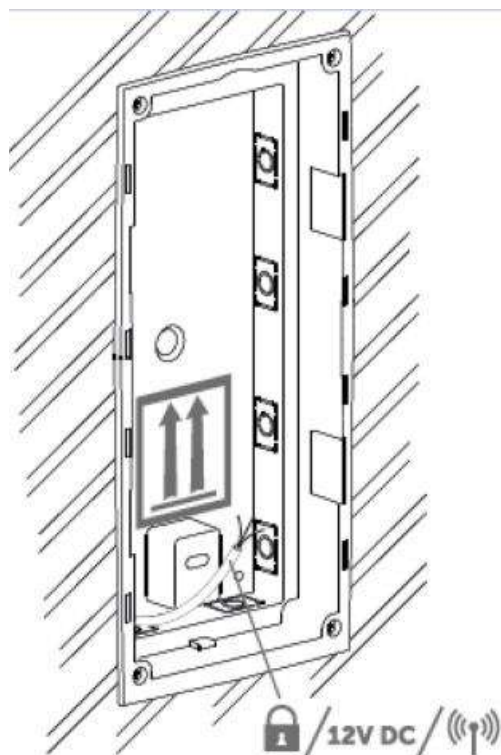

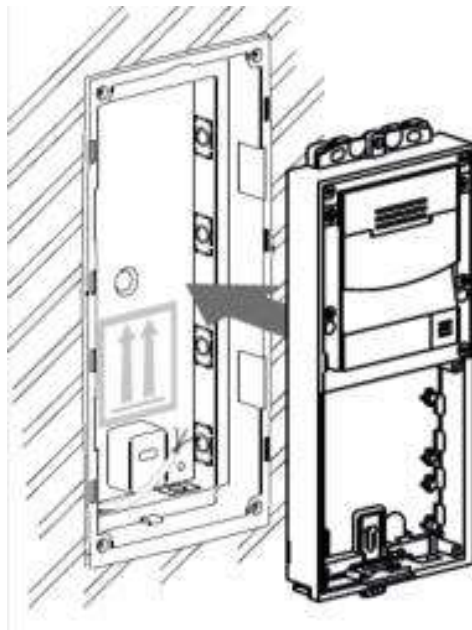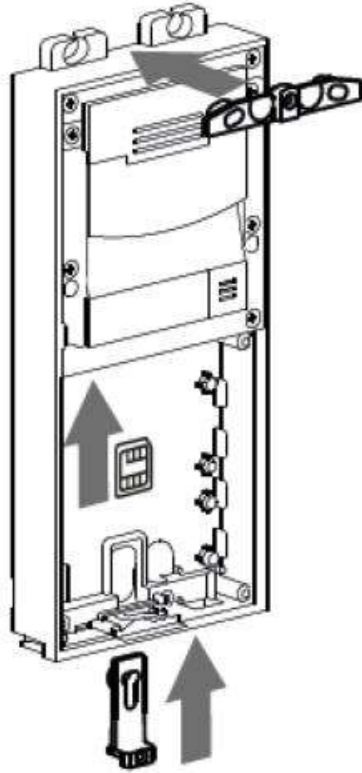

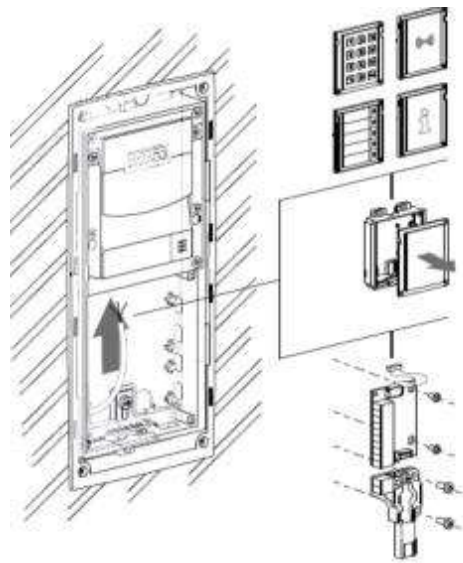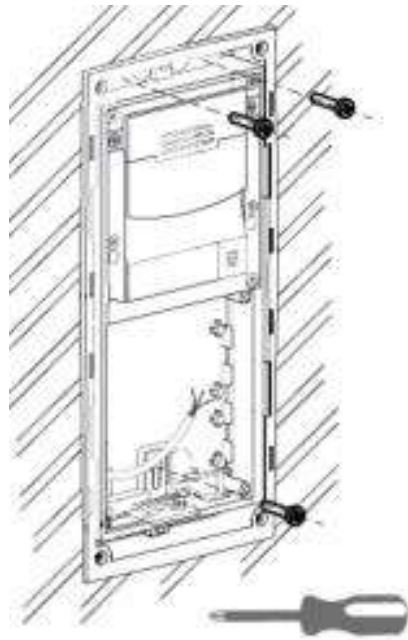




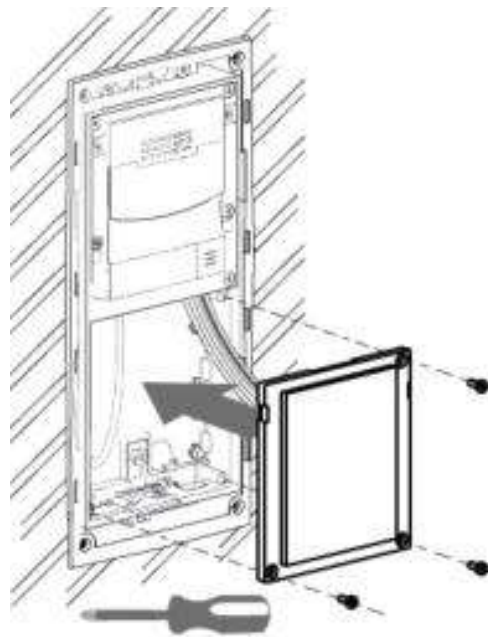
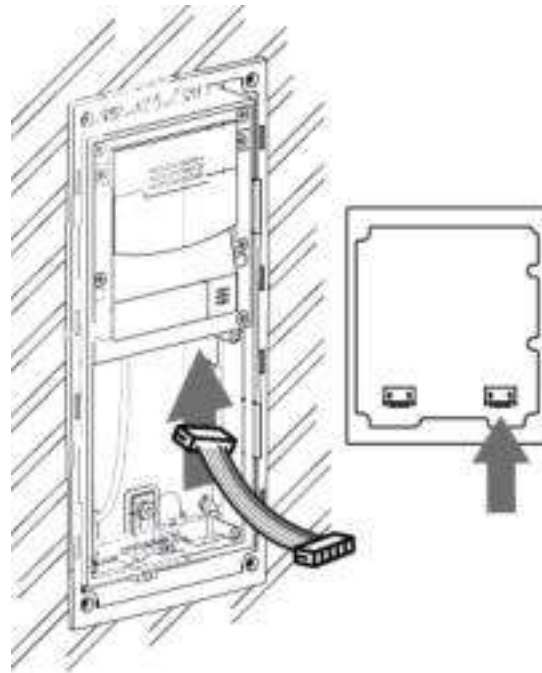







## Surface module mounting

---

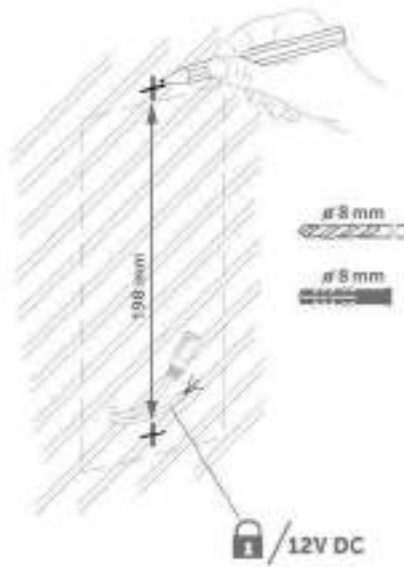

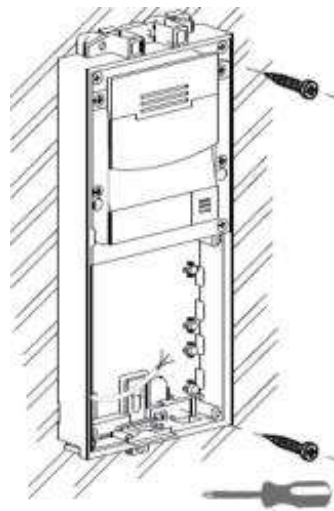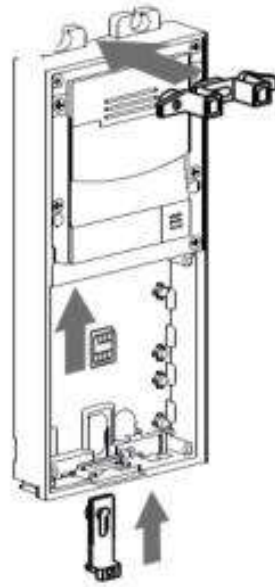

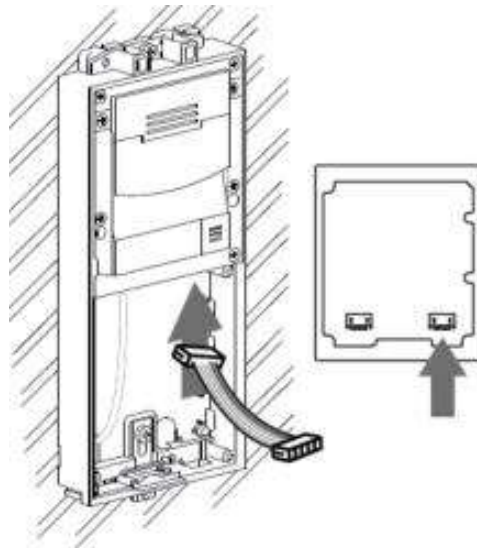
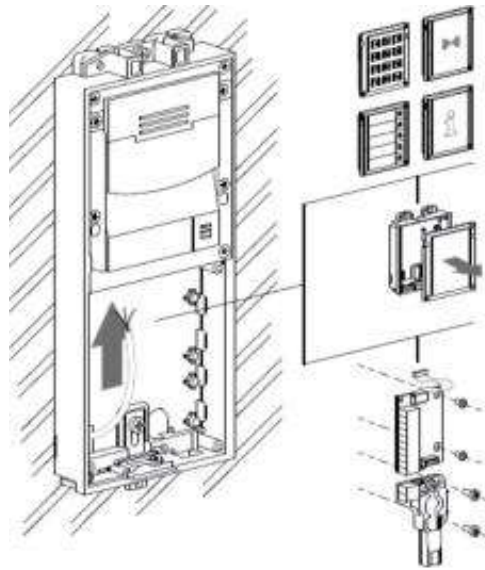


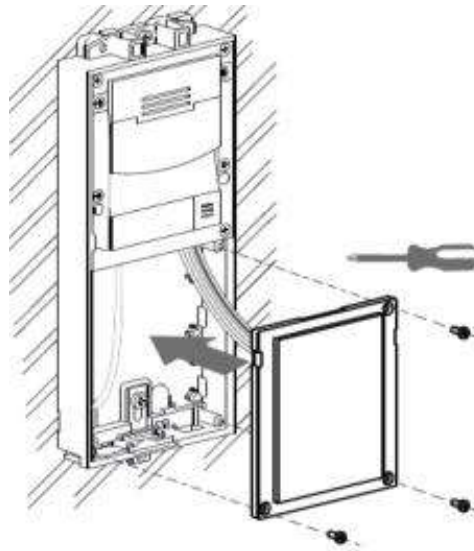







## 2.2.3 More Two Modules Boxes


### Flush mounting box mounting - classics bricks

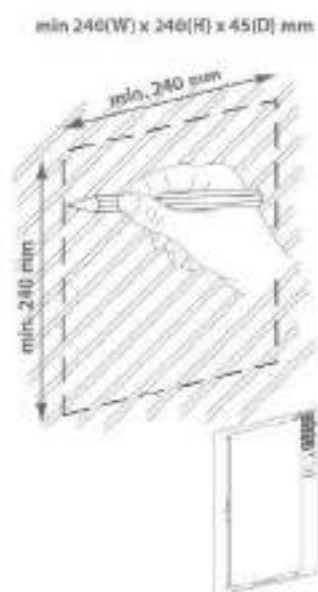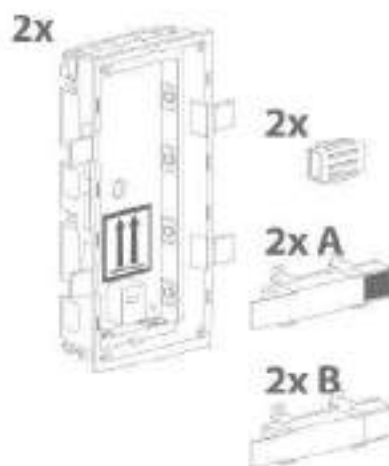



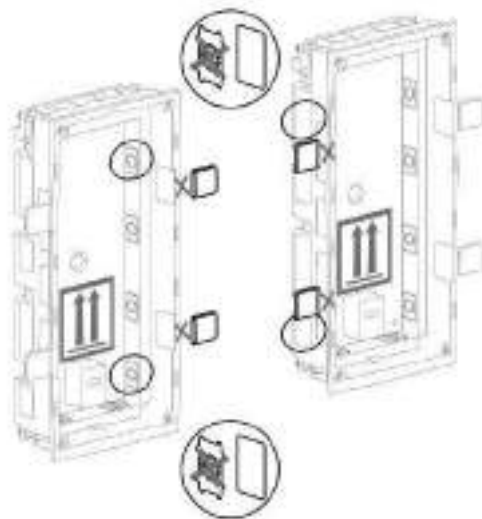
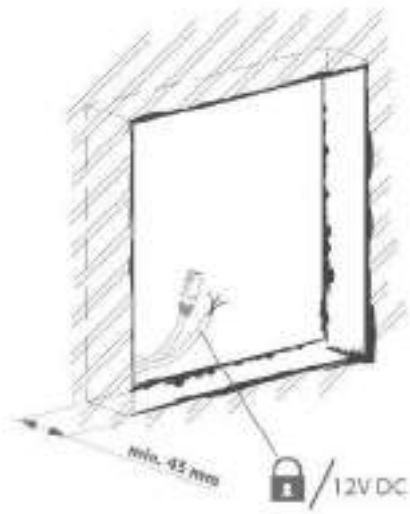


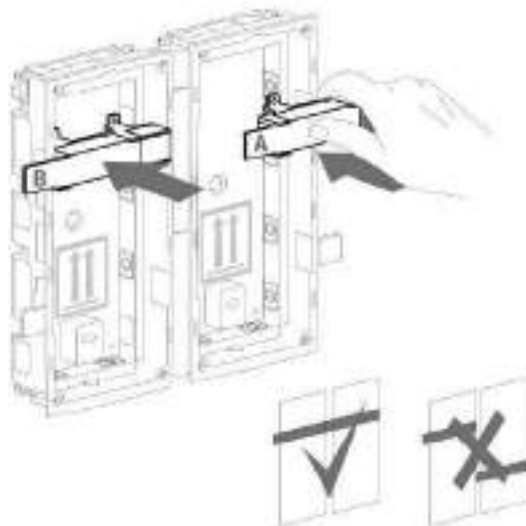
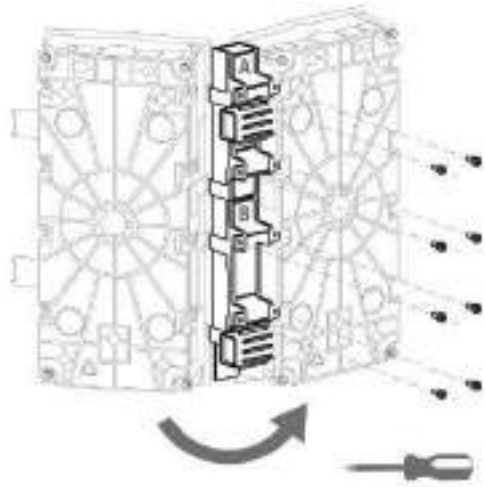



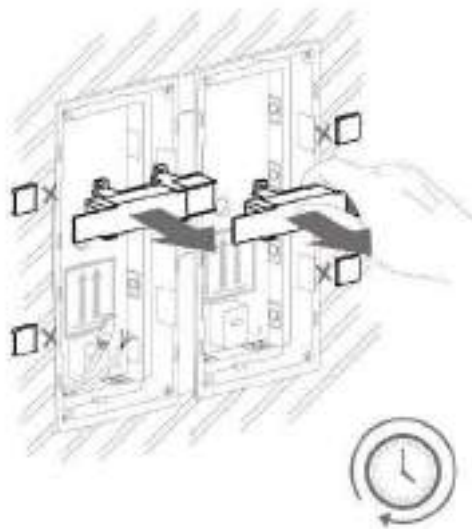




## Flush mounting box mounting - plasterboard

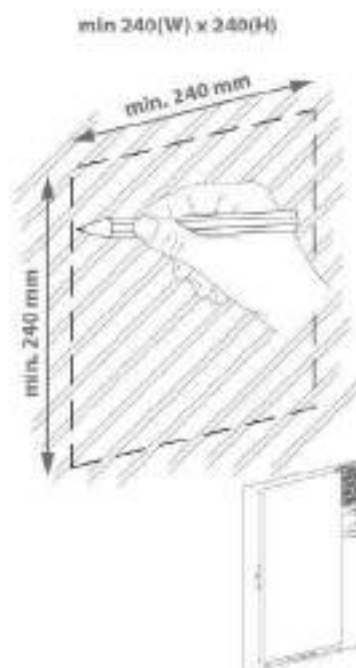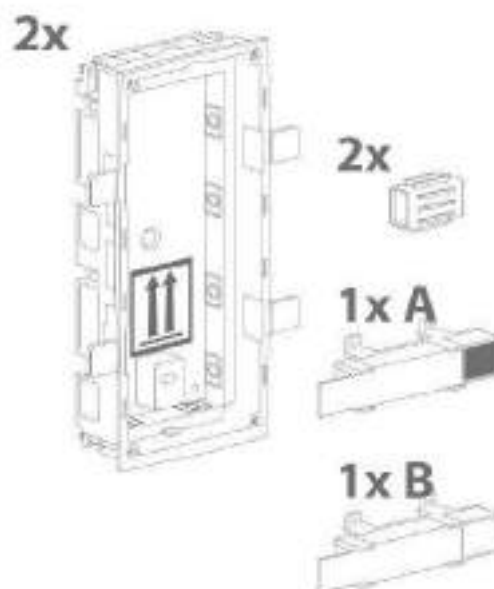

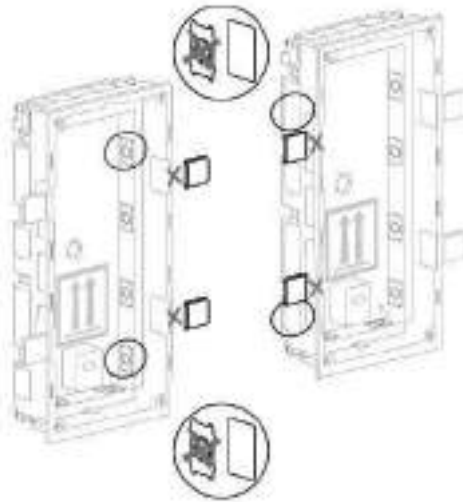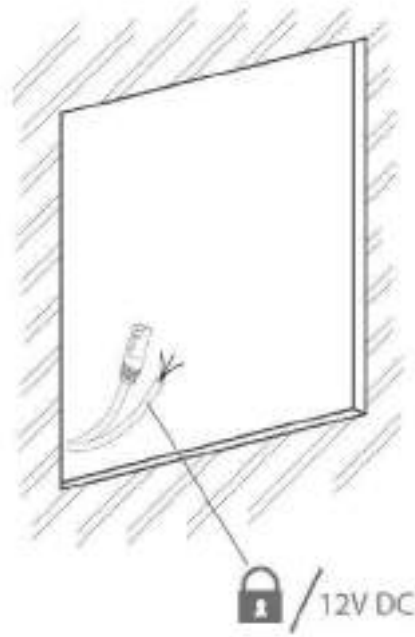

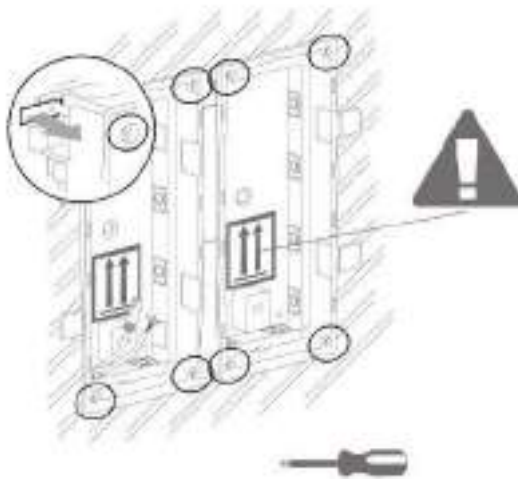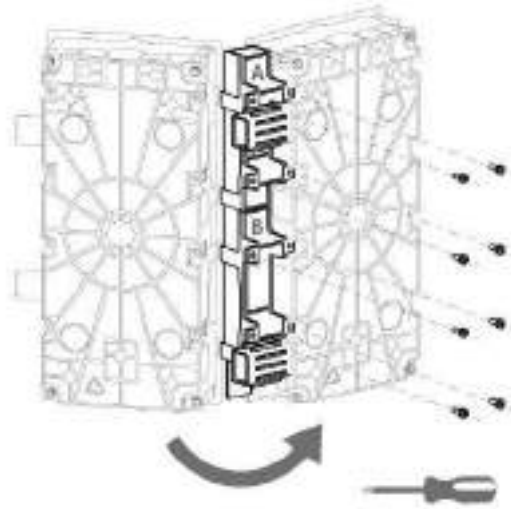











## Flush module mounting


---


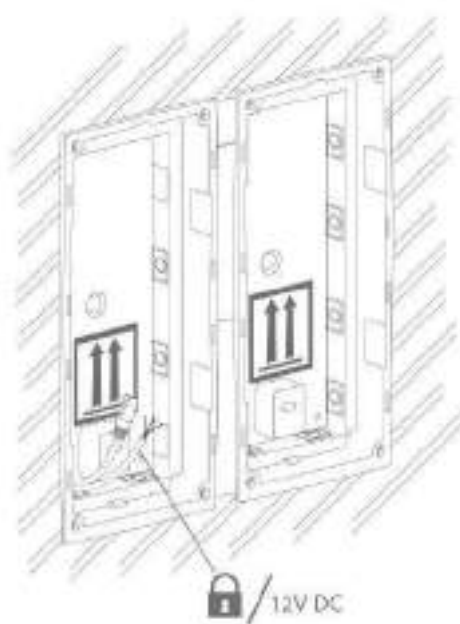


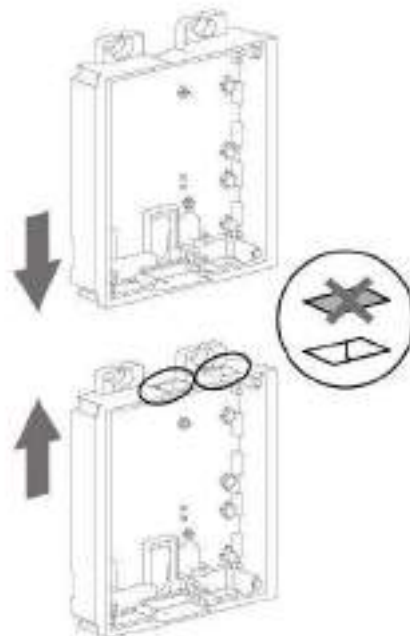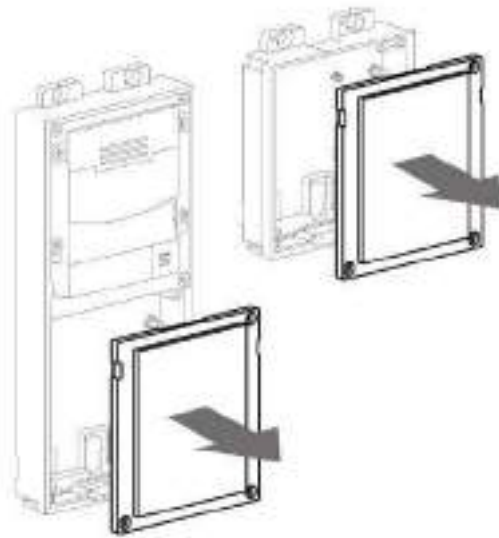


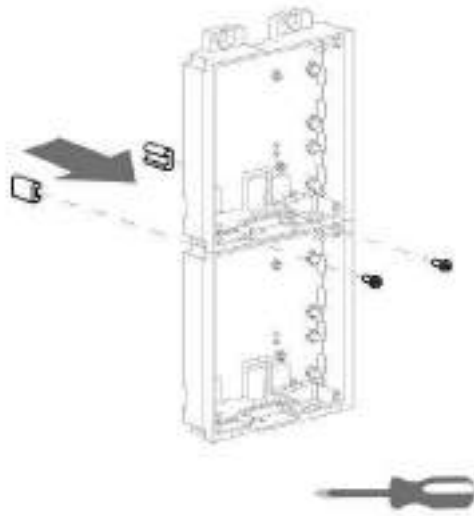

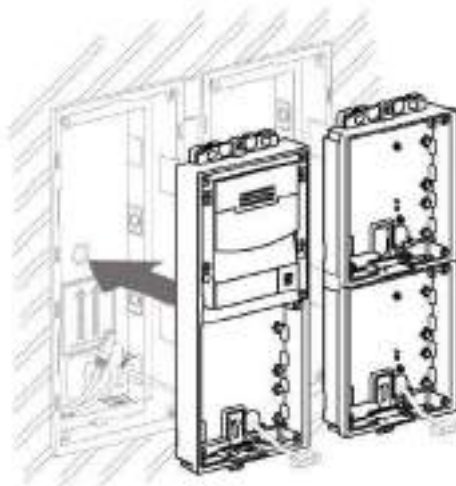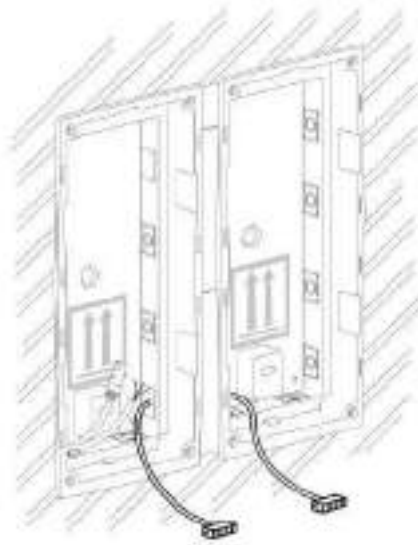

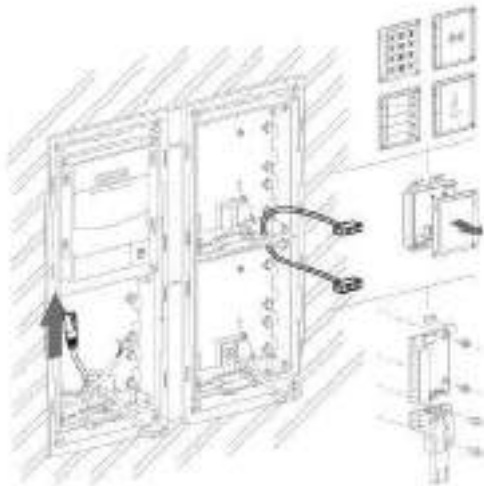


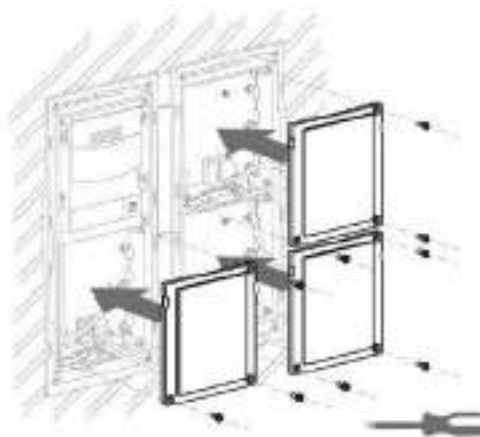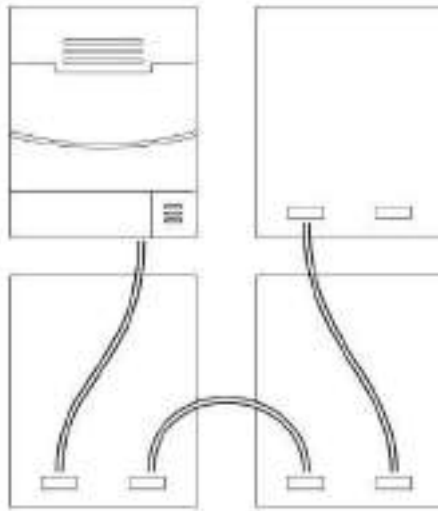


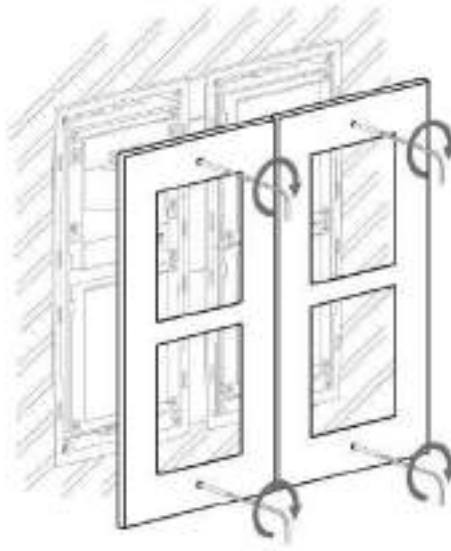




## Surface module mounting


---

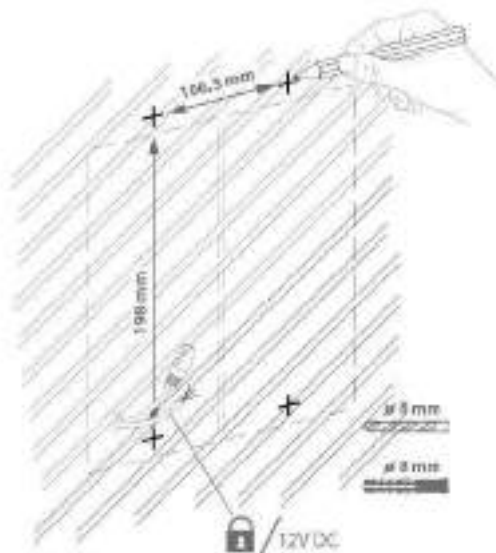




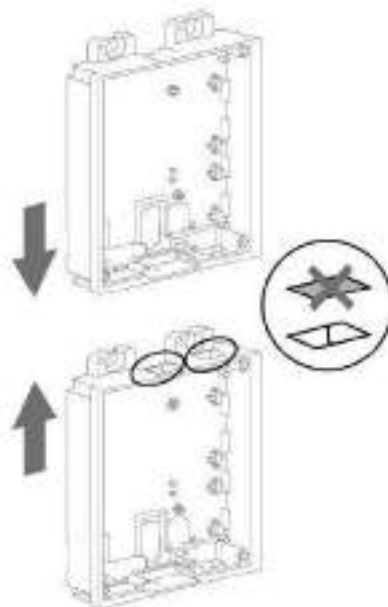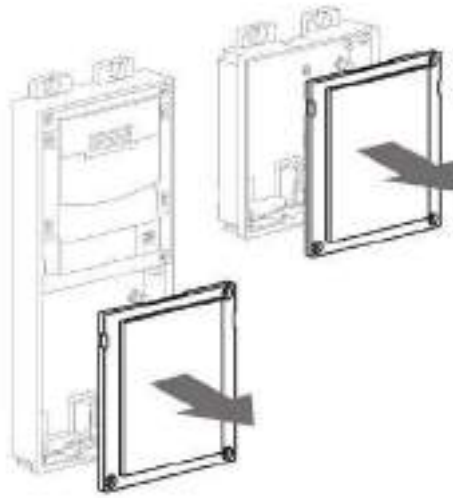

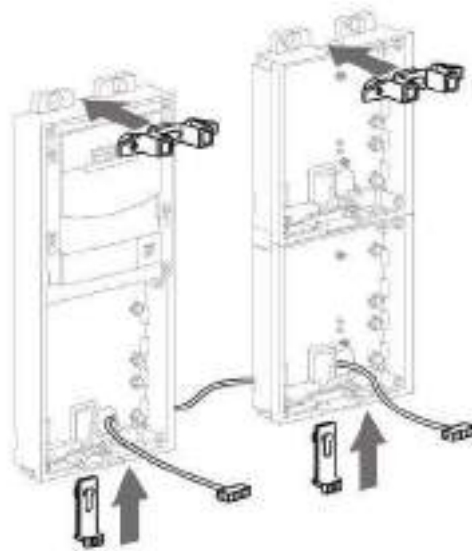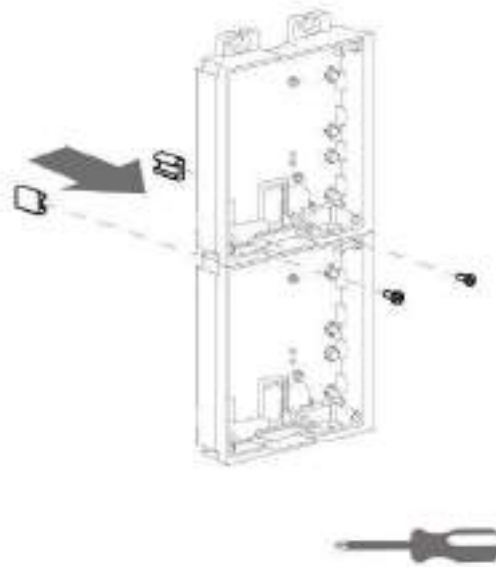

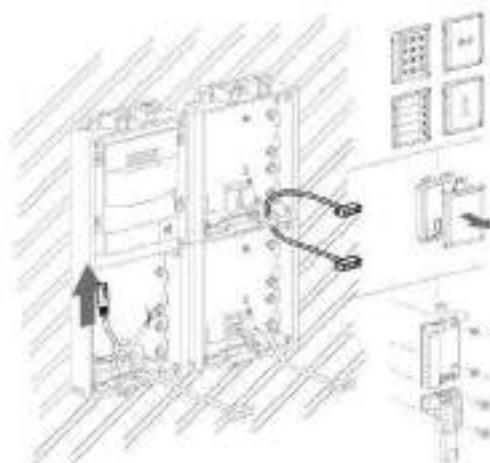


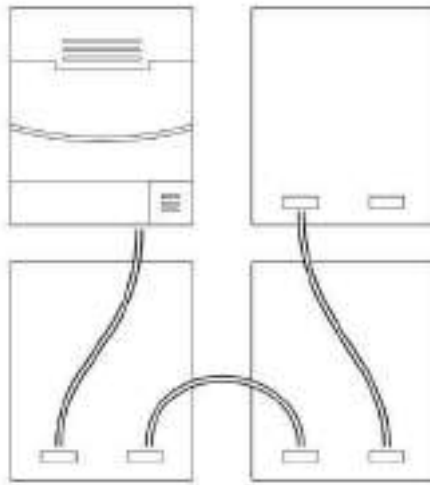





## 2.2.4 Three Modules Box

### Flush mounting box mounting - classics bricks

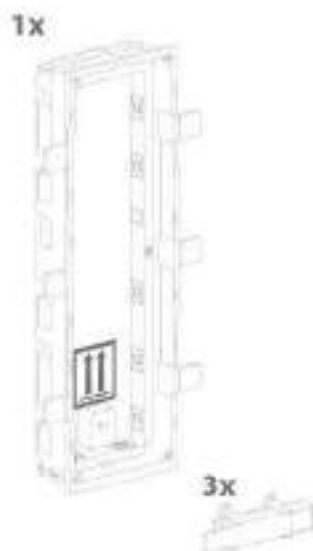


min 109(W) x 346(H) x 45(D) mm



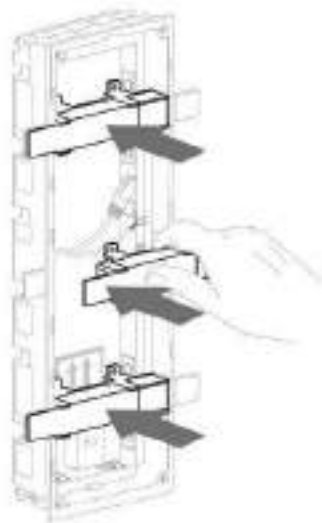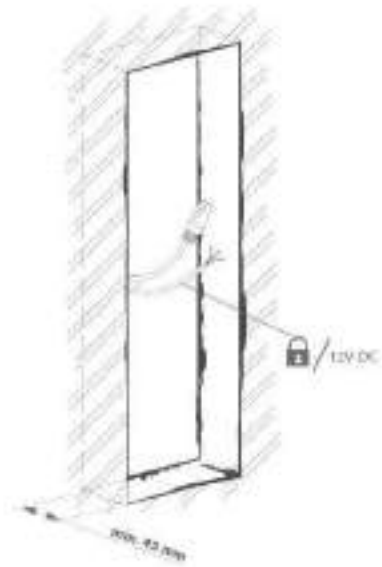






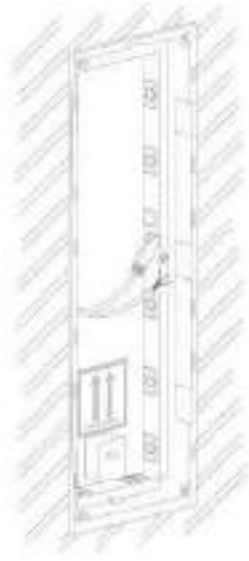




## Flush mounting box mounting - plasterboard

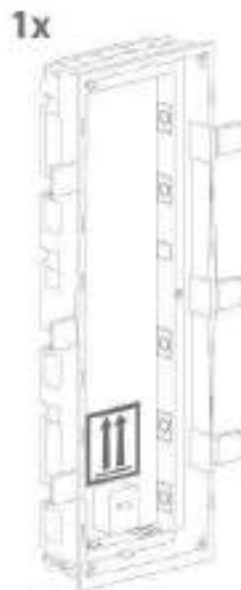


min 108(W) x 346(H) mm



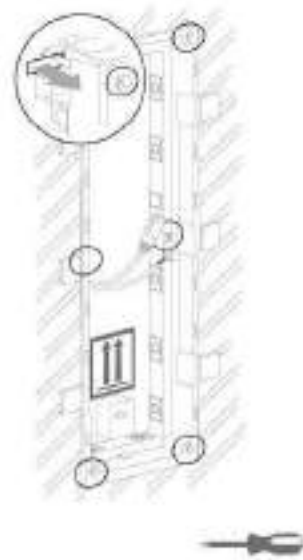

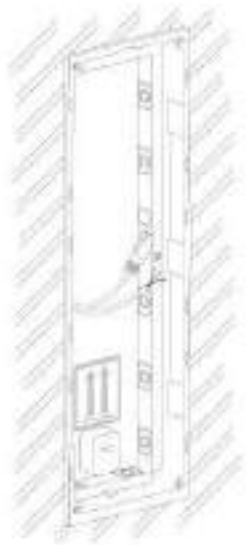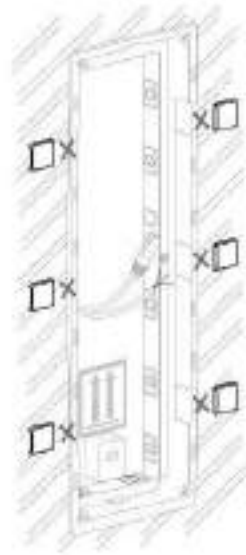

## Flush module mounting

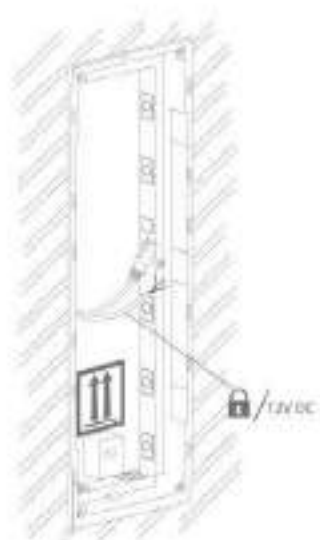

















## Surface module mounting


---

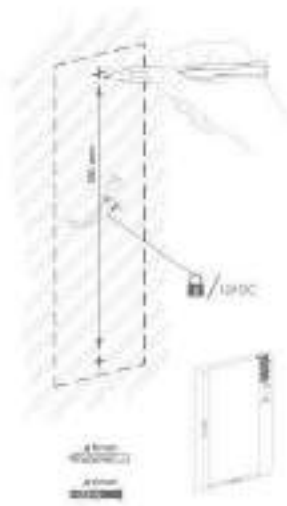

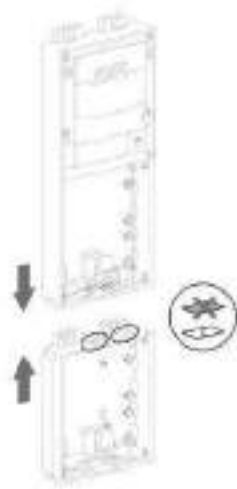





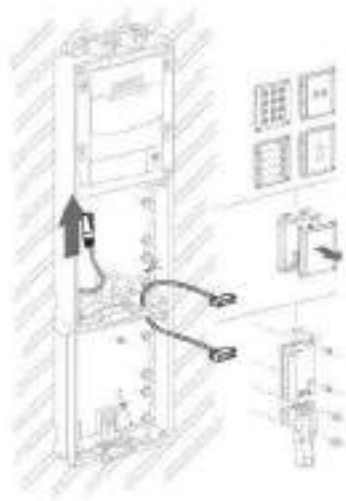











## 2.2.5 More Than Three Modules Boxes


### Flush mounting box mounting - classics bricks


---

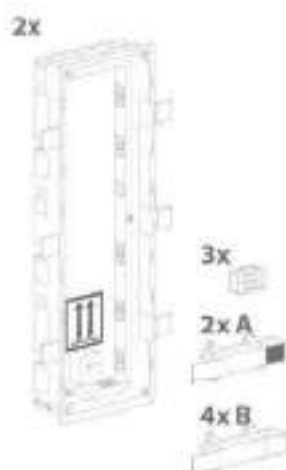

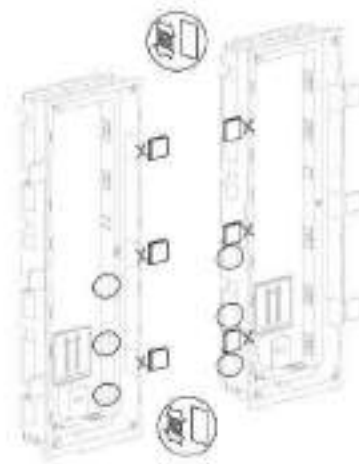


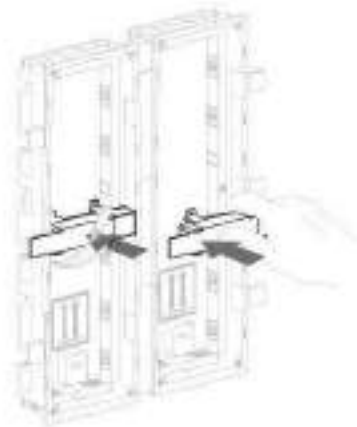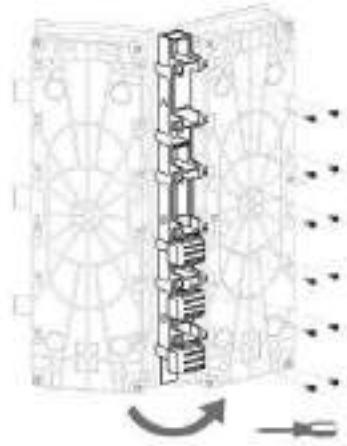

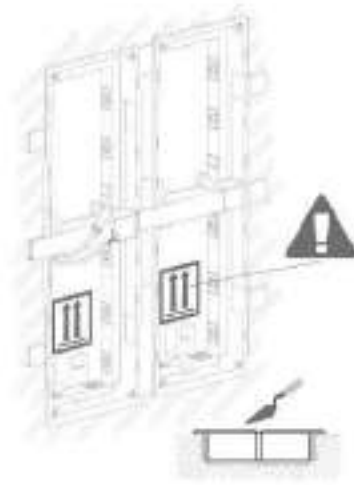



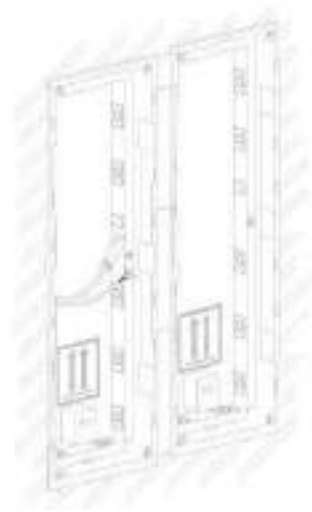




## Flush mounting box mounting - plasterboard

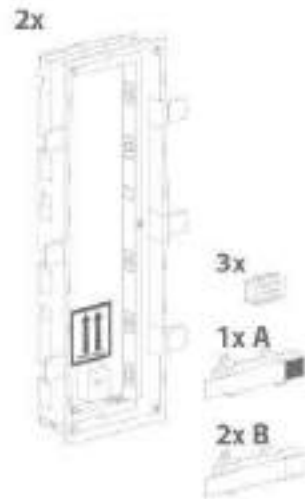



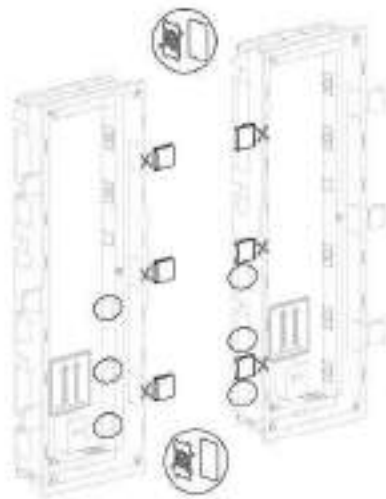


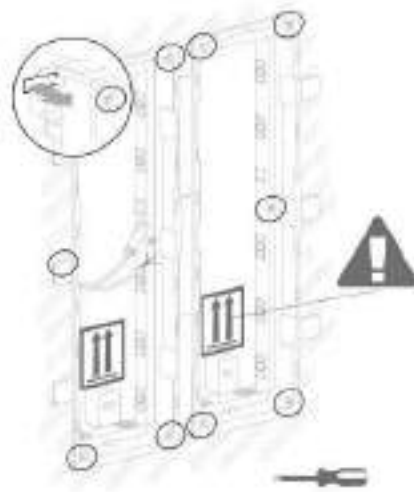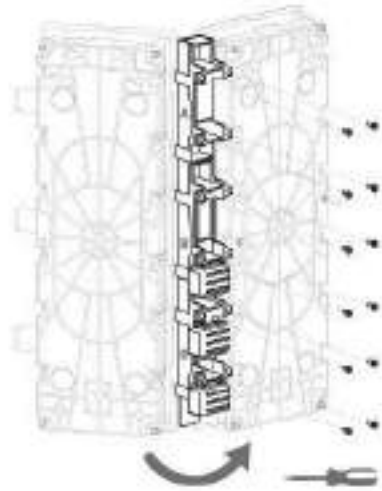


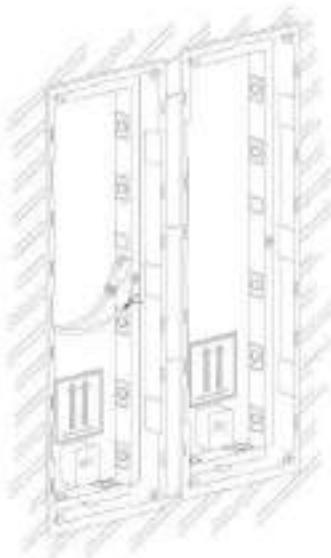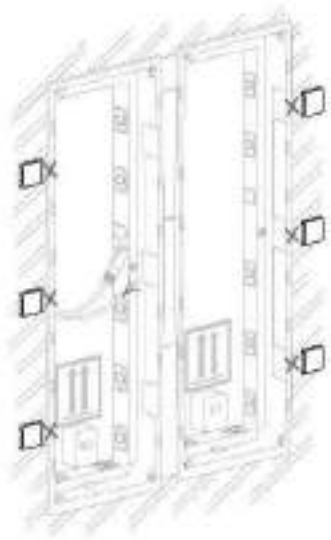


## Flush module mounting


---

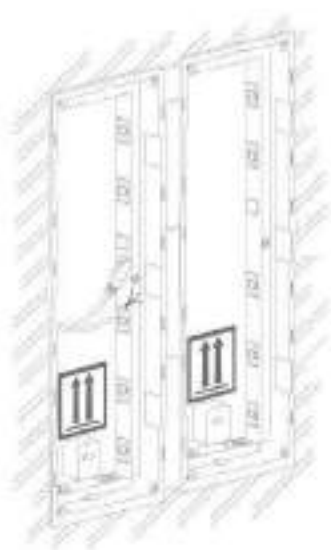

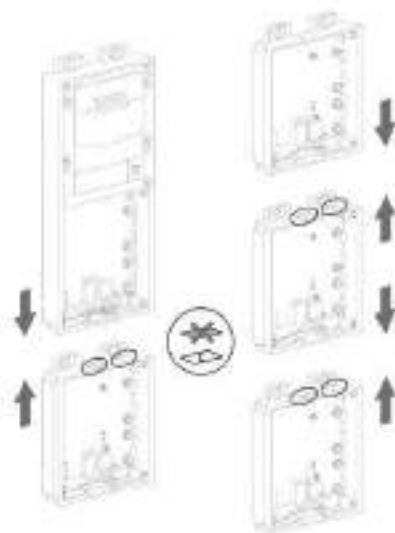


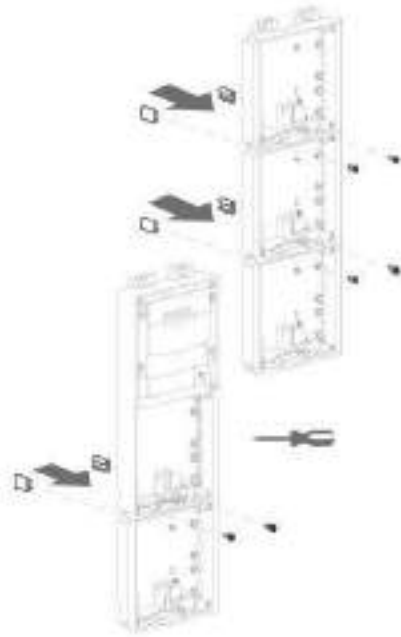




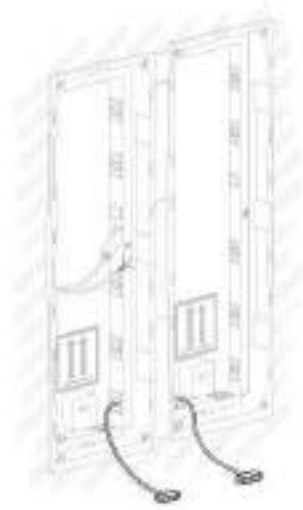



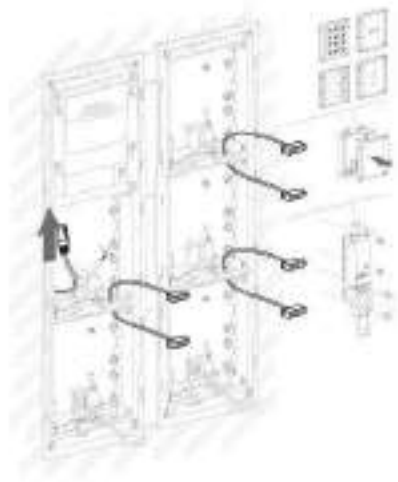


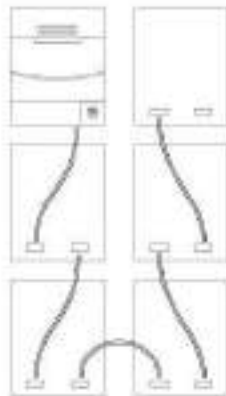



## Surface module mounting



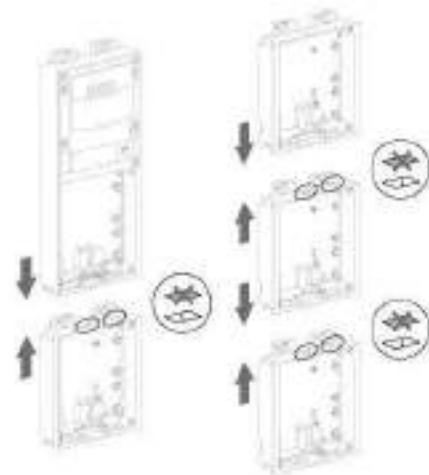














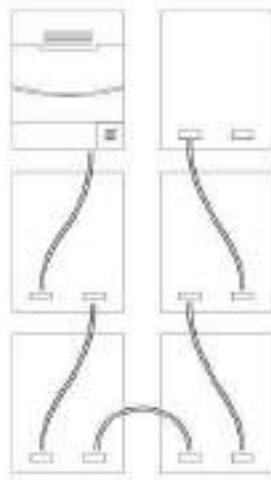



## 2.2.6 Tamper and I/O Module

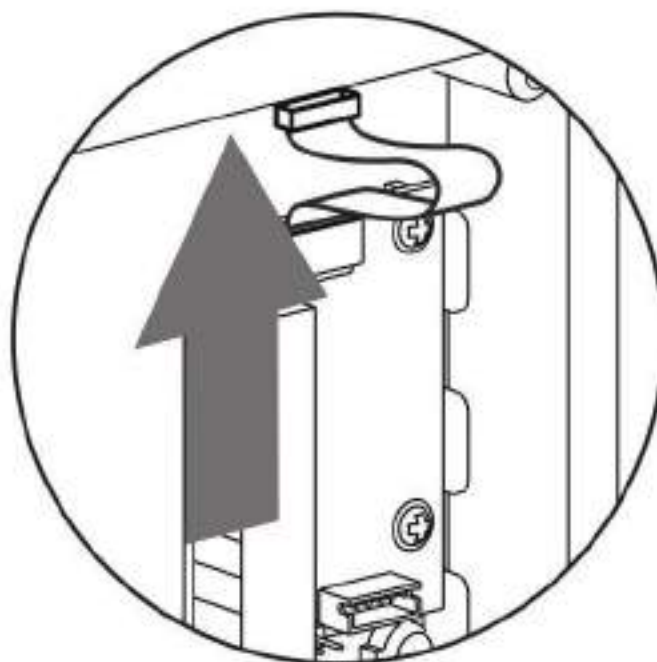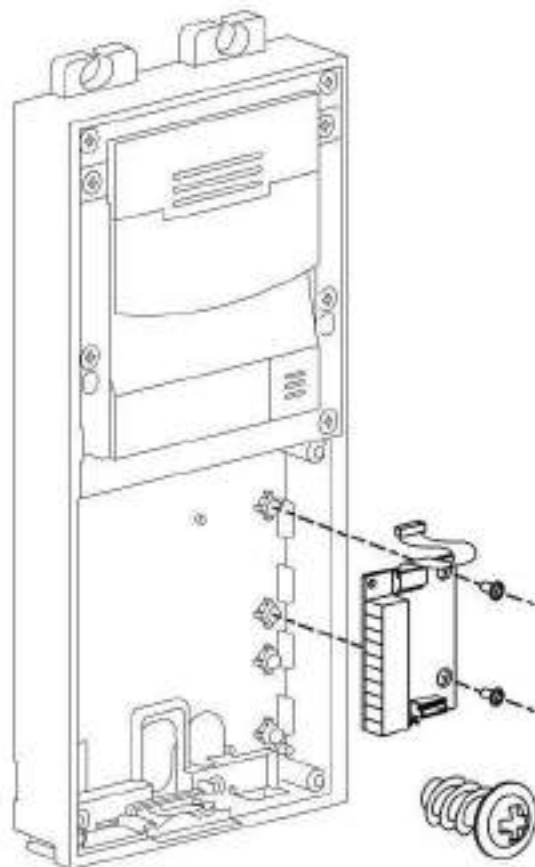

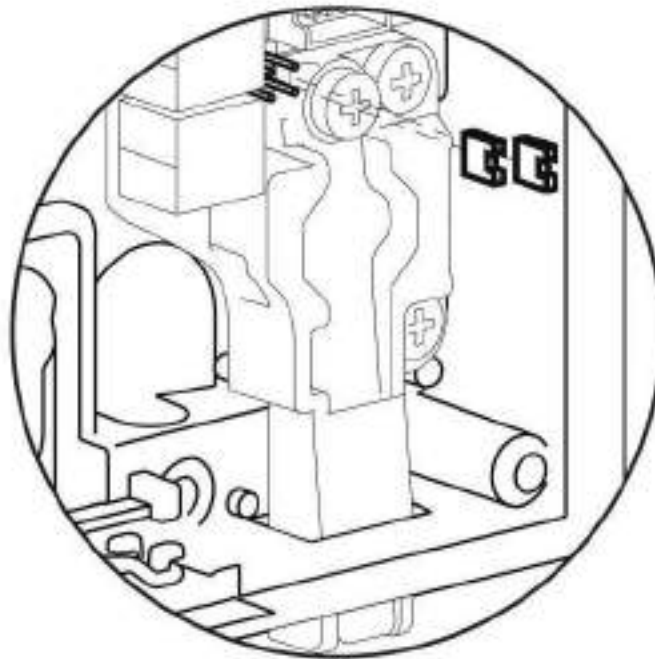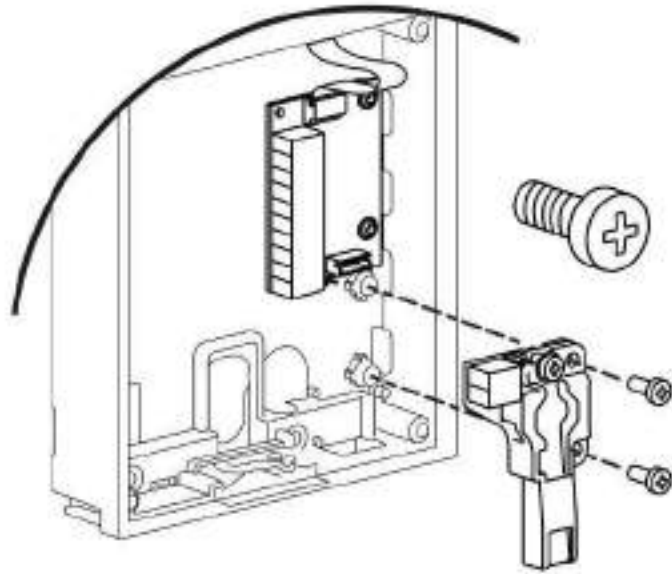

## 2.2.7 Module dimensions

### Frames

- 9155011 - Flush mounting frame, 1 module
- 9155012 - Flush mounting frame, 2 modules
- 9155013 - Flush mounting frame, 3 modules
- 9155021 - Surface mounting frame, 1 module
- 9155022 - Surface mounting frame, 2 modules
- 9155023 - Surface mounting frame, 3 modules

### Backplates

- 9155061 - 1 module
- 9155062 - 2 modules
- 9155063 - 3 modules
- 9155064 - 2x2 modules
- 9155065 - 3x2 modules
- 9155065 - 2x3 modules
- 9155067 - 3x3 modules

## 2.3 Electric Installation

---

This subsection describes how to install the modules, how to connect the 2N<sup>®</sup> LTE Verso main unit to the power supply and how to connect other elements.



The device must be part of the electrical system of the building.

### Mounting Preparation

1. Unscrew the second module cover on the main unit base.
2. Use a flat screwdriver to take out the module cover.

### Version A - 2-Module Base

1. Place the base on the flush mounting box / predrilled holes with dowels and pull the cables through the bottom holes.
2. Insert the metal fitting elements up and down and screw the base plate tight. You can level the base slightly if you are mounting just one base.

### Version B - 3-Module Base

1. Unscrew the cover of the additional base.
2. Use a flat screwdriver to take out the cover.
3. Slide the additional base to the main unit base and secure its position with the small side wedges and screws.
4. Remove the microphone from the main unit base and loosen the microphone cable.
5. Lead the microphone to the third module base as shown in the figure.
6. Place the joined bases on the flush mounting box / predrilled holes with dowels and pull the cables through the bottom holes.

### Version C - Additional Columns

1. Unscrew the cover of the additional bases and take it out with a flat screwdriver.
2. Insert the bases into each other as projected and secure their position with the small side wedges and screws.

3. Place the cover on the flush mounting box / predrilled holes with dowels and pull the cables if any through the bottom holes.
4. Pull the bus using the cable bushing available in the flush mounting box.

## Main Unit

### LTE Mobile Connection

Insert a PIN-less MicroSIM card with an active data service. The SIM card is not included in the package, so use data services of your preferred LTE provider (the device requires the 4G/LTE technology and cannot be operated in 2G or 3G networks). Connect the antenna provided stuck to the inner blind side. Use an external antenna when mounting another module in the blind position (Part No. 9155048).


### Power Supply Connection

2N<sup>®</sup> LTE Verso is powered from an external 12 V / 2 A DC source.

### External power supply

Use a 12 V  $\pm 15\%$  SELV supply dimensioned to the minimum current consumption of 2 A (Part No. 91341481E) to make your system work reliably. This power supply provides 2N<sup>®</sup> LTE Verso with 24 W for feeding of the main unit and connected modules.

### Main Unit Connector Configuration

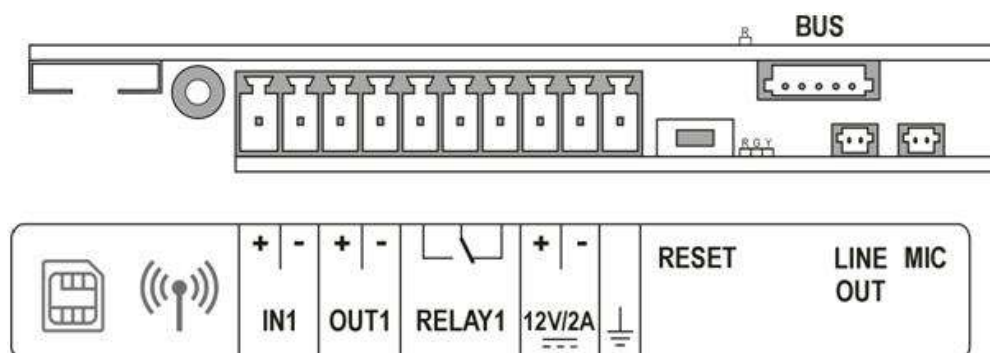

#### Note


- We recommend you to use a grounding cable of the cross-section of 1.5 mm<sup>2</sup>.

Legend	
MicroSIM	MicroSIM card slot
MMCX antenna connector	LTE mobile network antenna connector
IN1	IN1 terminals for input in passive/ active mode (-30 V to +30 V DC) OFF = open OR $U_{IN} > 1.5 \text{ V}$ ON = closed contact OR $U_{IN} < 1.5 \text{ V}$
OUT1	OUT1 terminals of active input for <b>2N<sup>®</sup> Security Relay</b> or electric lock connection 8 up to 12 V DC depending on power supply (PoE: 10 V; adapter: power supply voltage minus 2 V), max 400 mA
RELAY1	RELAY1 terminals with accessible 30 V / 1 A AC/DC NO/NC contact
12V/2A	External 12 V / 2 A DC supply terminals
GND	Grounding terminal
RESET	RESET / FACTORY RESET button
RGY	LED indicators (red/green/yellow)
R	LED indicator on the upper board (red)
LINE OUT	LINE OUT connector ( $1 \text{ V}_{\text{RMS}}$ )
MIC	MIC connector for microphone connection
BUS	<b>2N<sup>®</sup> IP/LTE Verso</b> bus connector




✓ **Tip**

- Wiring Diagram of IN1 connector in active mode

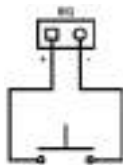

- Wiring Diagram of IN1 connector in passive mode

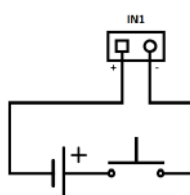

## LTE Connection Verification

Having connected the power supply, make sure that 2N<sup>®</sup> LTE Verso has been connected to the LTE data network successfully. A red LED (R) located to the left of the BUS connector on the upper board provides basic diagnostics: flashing means connecting, if the LED goes off, the device is connected to the data network. If it is illuminated for 5 seconds, there is a SIM card error (SIM not inserted, PIN request enable or no active data service). When this 5s timeout is over, another connection attempt is made and the LED starts flashing again, i.e. the LED does not shine permanently if there is a problem. If it keeps flashing only, the LTE signal is insufficient. In this case, check the area LTE signal coverage and antenna connection. If the LTE signal is low, use an appropriately placed external antenna (optional accessory, Part No. 9155048). Caution – do not stick the external antenna to a metal surface!

You can also use the diagnostic SMS commands described in **3.1 Configuration** for troubleshooting.


## Device Restart

### Factory Reset

2N<sup>®</sup> LTE Verso is equipped with a RESET button. Press the button shortly (< 1 s) to restart the system without changing configuration.

Follow the instructions below to **reset the factory default values**:

- Press the RESET button.
- Wait until the red and green LEDs on the device come on simultaneously (approx. 20 s).
- Wait until the red LED goes off (approx. 5 s).
- Wait until the green LED goes off and the red LED comes on again (approx. 5 s).
- Wait until the red LED goes off (another 5 s).
- Release the RESET button.

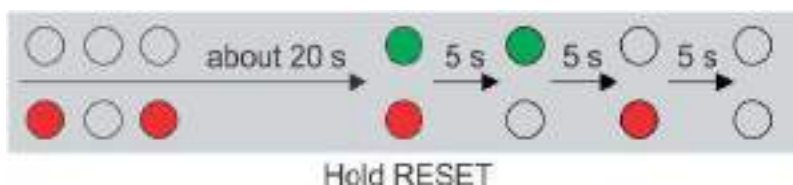

#### Caution

- In case of resetting the factory default settings on a device with a version of firmware 2.18 or higher it is necessary to reprogram the 2N<sup>®</sup> Security Relay using the instructions from section 2.4.

### Available Switches


Location	Name	Description
Main Unit	Relay 1	<b>Passive switch:</b> NO/NC contact, up to 30 V / 1 A AC/DC
	Output 1	<b>Active switch output:</b> 8 up to 12 V DC depending on power supply (power supply voltage minus 2 V), max 400 mA

Location	Name	Description
I/O Module*	ext. relay1	Passive relay switch: NO and NC contacts, up to 30 V / 1 A AC/DC
(Part No. 9155034)	ext. relay2	Passive relay switch: NO and NC contacts, up to 30 V / 1 A AC/DC

More modules marked by \* can be used.

**⚠ Warning**

When you connect a device containing a coil, such as a relay or an electromagnetic lock, it is necessary to protect the intercom against voltage peak while switching off the induction load. For this way of protection we recommend a diode 1 A / 1000 V (e.g., 1N4007, 1N5407, 1N5408) connected antiparallel to the device.

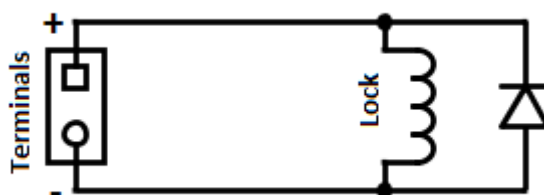

---

## 2.4 Extending Module Connection

---

2N<sup>®</sup> LTE Verso allows you to connect the following extending modules:

- Infopanel
- Keypad
- Touch Keypad
- RFID Card Reader 125 kHz
- RFID Card Reader 13.56 MHz
- RFID Card Reader 13.56 MHz NFC Support
- Secured RFID Card Reader 13.56 MHz NFC Support
- Bluetooth
- Touch Display
- Induction Loop
- Fingerprint Reader
- I/O Module
- 5-Button
- Wiegand Module
- Tamper Switch
- Blind
- Security Relay

### Module Bus Interconnection

All the 2N<sup>®</sup> LTE Verso modules, except for the Tamper Switch, are interconnected via a bus. The bus starts on the main unit and goes over all the modules. The order of modules on the bus is irrelevant. And it also irrelevant which bus connector on the module is used as the input and which is used as the output.

The modules include a 220 mm long interconnecting cable; the Wiegand (9155037) and I/O modules (9155034) include an 80 mm long interconnecting cable.

You can order a separate 1 m long bus cable (9155050) for remote installation of the 2N<sup>®</sup> LTE Verso modules. Typically, it helps install an RFID card reader on the opposite side of the wall on which the 2N<sup>®</sup> LTE Verso intercom is installed.

The modules can be combined in each base as follows:

Module	Externally mounted (visible module)	Internally mounted (invisible module)	Internally mounted on bottom base edge
Infopanel	X		
Keypad	X		
Touch keypad	X		
RFID card reader 125 kHz	X		
RFID card reader 13.56 MHz	X		
RFID card reader 13.56 MHz NFC support	X		
Secured RFID card reader 13.56 MHz NFC	X		
Bluetooth reader	X		
Touch display	X		
Induction loop	X		
Fingerprint reader	X		
I/O module		X	
5-button	X		
Wiegand		X	
Tamper switch			X
Blind	X		

## Module Power Supply

Except for the protection switch module, all the **2N<sup>®</sup> LTE Verso** modules are powered from the bus. The available bus power output depends on the power supply type. Main units 571v3 and higher can use a 3A power supply to increase the bus power available for the modules connected.

Power supply	Specification	Available power
External supply	12 V $\pm$ 15% / 2 A (3 A)	24 W (36 W)

The count of the modules on the bus is limited by the available power supply output. The maximum count is 30.

Main unit (571v3)	Consumption [W] (Maximum value)
At relax	3.12
Call via LTE	2.29
Infrared illumination	3.06
LED - call	0.072
LED - ringing	0.072
LED - lock	0.072
LED - secured	0.096
Button backlight	0.072
Name tag backlight	0.072
Unit backlight	0.072
Relay 1	0.132
OUT 1	4.8

Main unit (571v3)	Consumption [W] (Maximum value)
Audio	2.94
<b>Total</b>	<b>16.87</b>

Module	Idle consumption [W] (Minimum value)	Full load [W] (Maximum value)	Special elements [W]
Main unit with camera	?	?	
Infopanel	0.17	0.35	
Keypad	0.19	1.16	
RFID card reader 125 kHz	0.52	1.31	
RFID card reader 13.56 MHz	0.44	0.82	
RFID card reader 13.56 MHz NFC	0.44	0.82	
Secured RFID card reader 13.56 MHz NFC	0.44	0.82	
Bluetooth reader	0.20	0.67	
Touch display	0.19	1.70	
Induction loop	0.18	0.84	
I/O	0.31	0.65	Closed relay 0.13
5-button	0.19	1.16	
Wiegand	0.46	0.46	
Tamper switch	0.31	0.65	

## Specimen configuration consumption computation

Module	Minimum consumption [W]	Maximum consumption [W]
Main unit with camera	?	?
RFID card reader 13.56 MHz	0.44	0.82
I/O	0.31	0.65
5-button	0.19	1.16
Touch display	0.19	1.70
I/O	0.31	0.65
Tamper switch	0.31	0.65
Wiegand	0.46	0.46
Bluetooth reader	0.20	0.67
<b>Total</b>	<b>4.77</b>	<b>22.29</b>

It is obvious from the specimen configuration that all the modules have sufficient outputs when an external power supply is used.

Some modules need a specific power output for their specific activities: the I/O module, e.g., requires 0.13 W for relay closing (not calculated for minimum consumption).

## Infopanel

The Infopanel (Part No. 9155030) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and is used for inserting and backlighting printed information.

- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.



- Nametag dimensions: 69,2 (W) x 86,7 (H) mm (dimensional tolerance: +0; -0,5 mm).
- Refer to [www.2n.cz](http://www.2n.cz) for printing template.

## Keypad

The Keypad (Part No. 9155031) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and provides a numerical input in the system.

- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

## Touch Keypad

The Touch keypad (Part No. 9155047) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and provides a numerical input in the system.

- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

## RFID Card Reader Module 125 kHz

The 125 kHz RFID card reader (Part No. 9155032) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and is used for reading RFID card Ids in the 125 kHz band.

- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read:

- EM4100, EM4102, HID Proximity

## RFID Card Reader 13.56 MHz

The 13.56 MHz RFID card reader (Part No. 9155033) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and is used for reading RFID card Ids in the 13.56 MHz band.

- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read (only the card serial number is read):

- **ISO/IEC 14443A** Mifare Classic 1k & 4k, DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C
- **ISO/IEC 14443B** CEPAS, HID iCLASS
- **JIS X 6319** Felica

## RFID Card Reader 13.56 MHz NFC support

The 13.56 MHz RFID card reader (Part No. 9155040) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and is used for reading RFID card Ids in the 13.56 MHz band.

- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read (only the card serial number is read):

- **ISO/IEC 14443A** Mifare Classic 1k & 4k, DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C
- **ISO/IEC 14443B** CEPAS, HID iCLASS
- **JIS X 6319** Felica
- **ISO/IEC 18092** SmartPhone with NFC/HCE support, since Android version 4.3

## Secured RFID Card Reader 13.56 MHz NFC support

The Secured RFID card reader 13.56 MHz NFC support (Part No. 9155042) is one of the 2N<sup>®</sup> IP/LTE Verso intercom elements and is used for reading RFID card IDs in the 13.56 MHz band.

- The module contains two 2N<sup>®</sup> IP/LTE Verso bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read (optionally the card serial number or PAC ID is read):

- **ISO/IEC 14443A** Mifare Classic 1k & 4k, DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C
- **ISO/IEC 14443B** CEPAS, HID iCLASS
- **JIS X 6319** Felica
- **ISO/IEC 18092** SmartPhone with NFC/HCE support, since Android version 4.3

## Induction Loop

The Induction loop is one of the 2N<sup>®</sup> IP/LTE Verso intercom elements and is used to transmit an audio signal directly into a hearing aid via a magnetic field.

- The module contains two 2N<sup>®</sup> IP/LTE Verso bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.
- Used mode: Telecoil (also referred to as t-switch or t-coil)
- Maximum power: 2W
- Frequency range: 100 Hz - 5 kHz /  $\pm 3$  dB
- External antenna can be connected - Part No. **9155043**
- Short circuit resistance: without limitation

## Fingerprint Reader

The **Fingerprint reader** is one of the Verso intercom modules and is used for automated verification of human fingers for access control and intercom control.

- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

Important module properties:

- FBI PIV and Mobile ID certification - FAP20
- Durable glass touch surface
- Rejects spoof fingerprints
- -20 to 55 °C operating temperature range
- 0-90% relative humidity, noncondensing

## Bluetooth Reader

- The Bluetooth reader (**Part No. 9155046**) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and helps authenticate and subsequently open doors using Android and iOS based smartphones via the Bluetooth protocol 4.0 as RFID card replacement. Install the **2N<sup>®</sup> Mobile Key** application from **Google Play** and **Appstore** to make authentication work properly. The application requires phones with Android OS 4.4 and higher and iOS 9 and higher.
- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- The two connectors are fully interchangeable and can be used both as inputs from the main unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The package includes a 220 mm long interconnecting cable.
- The module uses the 2.4 GHz frequency.


IDs from the following smart phones can be read:

- Android 4.4 and higher
- iPhone 4S and higher with iOS 8 and higher

## I/O

The I/O (Part No. 9155034) is one of the 2N<sup>®</sup> IP/LTE Verso intercom elements and is used for extending the number of inputs and outputs.

- The module contains two 2N<sup>®</sup> IP/LTE Verso bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes an 80 mm long interconnecting cable.
- The inputs / outputs are addressed as follows: **<module\_name>.<input/output\_name>**, e.g. module5.relay1. The module name is configured in the Module name parameter in the Hardware / Extenders menu.

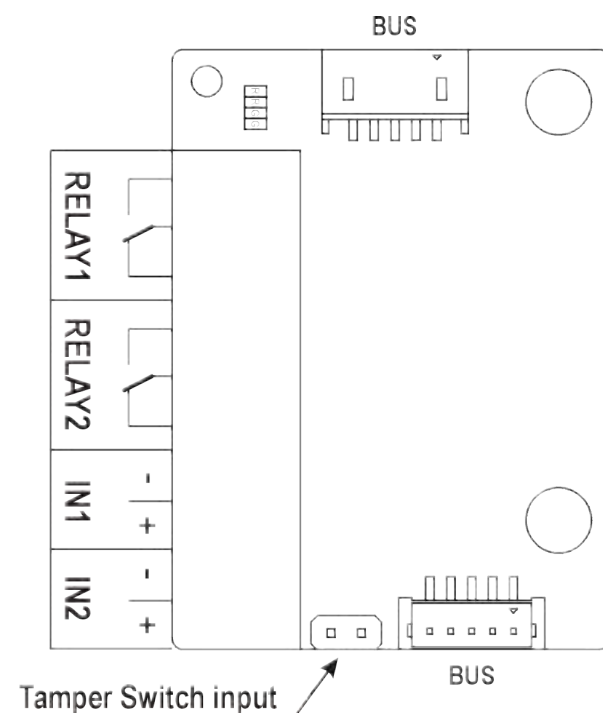

RELAY1	RELAY1 terminals with accessible 30 V / 1 A AC/DC NO/NC contact
RELAY2	RELAY2 terminals with accessible 30 V / 1 A AC/DC NO/NC contact
IN1	IN1 terminals for input in passive/ active mode (-30 V to +30 V DC) OFF = open OR $U_{IN} > 1.5 \text{ V}$ ON = closed contact OR $U_{IN} < 1.5 \text{ V}$

IN2	IN2 terminals for input in passive/active mode (-30 V to +30 V DC) OFF = open OR $U_{IN} > 1.5 \text{ V}$ ON = closed contact OR $U_{IN} < 1.5 \text{ V}$
TAMPER	Tamper switch (9155038) input

## 5-Button

The 5-button (Part No. 9155035) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and is used for extending the number of buttons.

- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.
- Nametag dimensions:
  - 1 button: 52,0 (W) x 15.2 (H) mm (dimensional tolerance: +0; -0.5 mm).
  - 5 buttons: 57.5 (W) x 89.0 (H) mm (dimensional tolerance: +0; -0.5 mm).
- Refer to [www.2n.cz](http://www.2n.cz) for nametag printing template.

## Touch Display

The **Touch display** (Part No. 9155036) module is designed for the **2N<sup>®</sup> IP/LTE Verso** communicator. This module can be used as:

- Infopanel module - displays user defined image sequences
- Keypad module - virtual touch keypad
- Button module - virtual phone directory

Module connection options:

- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the basic unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.


Technical specification:

- Resolution: 320 px x 214 px H x V
- Resolution slideshow: 214 px x 214 px
- Contrast ratio: 400
- Brightness: 350 cd/m<sup>2</sup>
- Weight: 280 g
- Working temperature: -20 °C - 60 °C
- Resistance level: IK07

## Wiegand

The Wiegand module (Part No. 9155037) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and is used for connecting an external Wiegand device (RFID card reader, fingerprint or other biometric data reader) and/or connecting the **2N<sup>®</sup> IP/LTE Verso** system to an external security exchange. All the inputs and outputs are galvanically isolated from the **2N<sup>®</sup> IP/LTE Verso** system with insulation strength of 500 V DC. It is necessary to feed +U IN on Wiegand OUT from the Control Panel.

- Reader – connects an external Wiegand-supporting reader. The reader sends the intercom card ID.
- Control Panel – connects a security PBX or the access system to which the intercom sends the card ID.
- The module contains two **2N<sup>®</sup> IP/LTE Verso** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes an 80 mm long interconnecting cable.
- The module name is configured in the Module name parameter in the Hardware / Extenders menu.
  - The input LED IN is addressed as follows: **<module\_name>.<input1>**, e.g. module2.input1.
  - The input Tamper is addressed as follows: **<module\_name>.<tamper>**, e.g. module2.tamper.
  - The output LED OUT (negated) is addressed as follows: **<module\_name>.<output1>**, e.g. module2.output1.

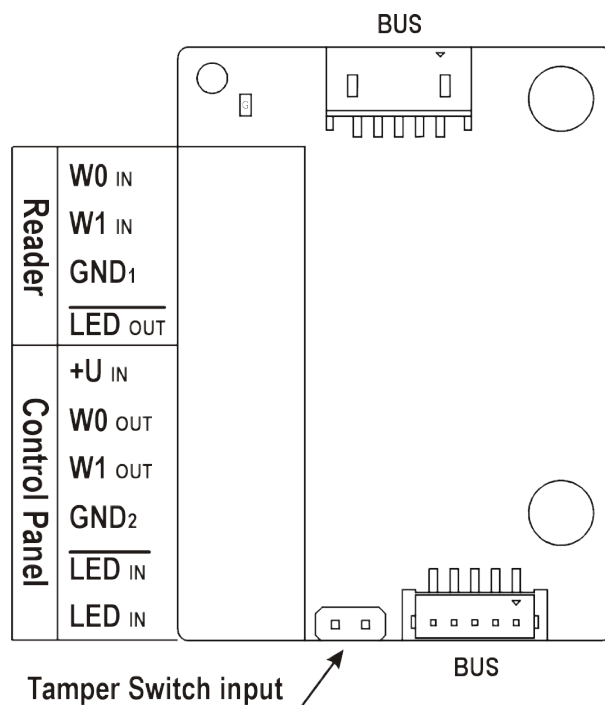

Reader	WO IN, W1 IN, GND1	Isolated 2-wire WIEGAND IN
	LED OUT	Isolated open LED OUT switched against GND1 on WIEGAND IN side (up to 24 V / 50 mA)
Control Panel	+U IN	+U <sub>IN</sub> (5 to 15 V DC) WIEGAND OUT power supply input
	WO OUT, W1 OUT, GND2	Isolated 2-wire WIEGAND OUT
	LED IN (negated)	Isolated input for open LED IN, input activated by GND2
	LED IN	Isolated input for open LED IN, input activated by +U
	G	+U IN WIEGAND OUT active supply LED indicator
	TAMPER	Tamper switch (Part No. <b>9155038</b> ) input



## Tamper Switch

The **Tamper switch** (Part No. 9155038) is one of the **2N<sup>®</sup> IP/LTE Verso** intercom elements and helps secure the system against tampering.

- The module contains two switches that open whenever the front frame is removed:
  - One switch leads directly to the terminal board and is designed for connection to an external security exchange (32 V DC / 50 mA max).
  - The other switch, together with the **I/O module (9155034)** or **Wiegand module (9155037)**, can be used for alarm signalling via the Automation interface in the **2N<sup>®</sup> IP/LTE Verso** configuration.
- This module is not connected to the bus.



Tamper Switch Mounting

## Blind

The **Blind module** (Part No. 9155039) is used for covering an empty position.

## Security Relay

The 2N<sup>®</sup> Security Relay (Part No. 9159010) is used for enhancing security between the intercom and the connected electric lock. The 2N<sup>®</sup> Security Relay is designed for any 2N IP/LTE intercom model with firmware versions 1.15 and higher. It significantly enhances security of the connected electric lock as it prevents lock opening by forced intercom tampering.



### Function:

The 2N<sup>®</sup> Security Relay is a device installed between an intercom (outside the secured area) and the electric lock (inside the secured area). The 2N<sup>®</sup> IP Security Relay includes a relay that can only be activated if the valid opening code is received from the intercom.

### Specifications:

- Passive switch: NO and NC contacts, up to 30 V / 1 A AC/DC
- Active switch output: 12 V / 700 mA DC
- Dimensions: (56 x 31 x 24) mm
- Weight: 20 g

### Installation:

Install the 2N<sup>®</sup> Security Relay onto a two-wire cable between the intercom and the electric lock inside the area to be secured (typically behind the door). The device is powered and controlled via this two-wire cable and so can be added to an existing installation. Thanks to its compact dimensions, the device can be installed into a standard mounting box.

## Connection:

Connect the 2N<sup>®</sup> Security Relay to the intercom as follows:

- To the intercom active output (OUT1 or OUT2), or
- To the intercom relay output with a 12 V DC serial external power supply.

Connect the electric lock to the 2N<sup>®</sup> Security Relay output as follows:

- To the active 12 V / 700 mA DC output, or
- To the relay output with a serial external power supply.

The device also supports a Departure button connected between the 'PB' and '- Helios IP / intercom' terminals. Press the Departure button to activate the output for 5 seconds.

## Status signalling:

Green LED	Red LED	Status
blinking	off	Operational mode
on	off	Activated output
blinking	blinking	Programming mode - waiting for initialisation
on	blinking	Error - wrong code received

## Configuration:

- Connect the 2N<sup>®</sup> Security Relay to the properly set intercom switch output; refer to the **Configuration Manual** for 2N IP/LTE intercoms. Make sure that one LED at least on the 2N<sup>®</sup> Security Relay is on or blinking.
- Press and hold the 2N<sup>®</sup> IP Security Relay Reset button for 5 seconds to put the device in the programming mode (both the red and green LEDs are blinking).
- Activate the intercom switch using the keypad, telephone, etc. The first code sent from the intercom will be stored in the memory and considered valid. After code initialisation, the 2N<sup>®</sup> Security Relay will pass into the operational mode (the green LED is blinking).

### **Caution**

- In case of resetting the factory default settings on a device with a version of firmware 2.18 or higher it is necessary to reprogram the 2N<sup>®</sup> Security Relay using the instructions above.


### **Tip**

- [FAQ: 2N<sup>®</sup> Security Relay - What is it and how to use it with 2N IP/LTE intercom?](#)

### **Tip**

- [Video Tutorial: Door intercoms 2N<sup>®</sup> Security Relay](#)

## Connection:

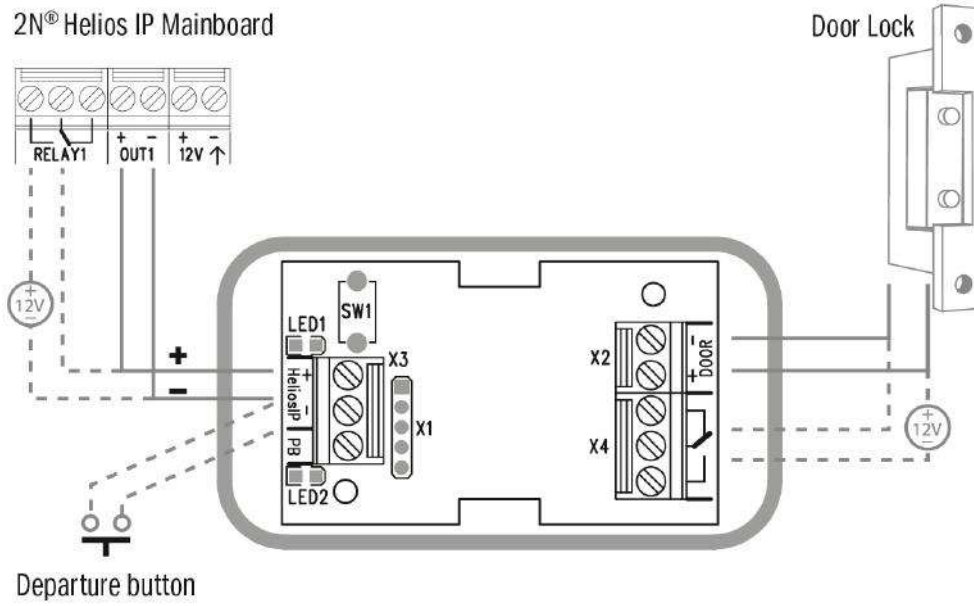

## 2.5 Completion

### Installation Completion

Check all the wire and antenna connectors on the board.

#### Caution

- All unused connectors have to have tightened screws in order to avoid vibration caused by sound.

Make sure before mounting that the black sealing ring is placed properly. We recommend you to fit the microphone with the screw included in the delivery.



### Nametag Placing

Every intercom package includes a piece of transparent foil, which can be laser printed. Cut the printed foil and insert the nametags in the buttons.

We recommend you to use separate foil for every button in the 5-button module. Refer to section download for the nametag printing template.

Nametag dimensions for 5-button module:

- 1 button: 52.0 (W) x 15.2 (H) mm (dimensional tolerance: +0; -0.5 mm)
- 5 buttons: 57.5 (W) x 89.0 (H) mm (dimensional tolerance: +0; -0.5 mm)

Infopanel nametag dimensions: 69.2 (W) x 86.7 (H) mm (dimensional tolerance: +0; -0.5 mm).

### **Caution**

- The area where nametags are placed is called a wet zone. After heavy rain, water can penetrate to the nametag. Water in this area does not affect the intercom functionality in any way and evaporates soon.
- Always use waterproof foil (enclosed or other) for the nametags. Never use paper or ink jet printing to avoid damage due to water leakage!

Nametag inserting/replacing:

1. Remove the frame.
2. Lift up the button door. The 5-button module buttons have just one door.
3. Remove the used nametag and insert a new one.
4. Close the button door.
5. Replace the frame.

## **Frame Replacement**

Check the frame sealing before replacing the frame.

### **Version A**

- Screw the flush mounting frame in the upper and bottom parts.

### **Version B**

- Hang the surface mounting frame on the hook in the upper part and then screw it tight in the bottom part.

### **Caution**

- Improper mounting may deteriorate the intercom waterproofness and water may damage the electronic part.
- Make sure that all holes are filled with some waterproof material - the top part, around the cables and the screws.
- Use silicone or some other sealant to seal the box against the wall if uneven to avoid water leakage and wall damping..


## Most Frequent Mounting Errors

At first, mount the metal bolts, level the bases on an even surface and tighten the screws.

### Caution

- Make sure that the bases are levelled properly to avoid water leakage and electronic damage.

The examples in the figures below show incorrectly assembled bases. This happens, in particular, where the screws are tightened first.

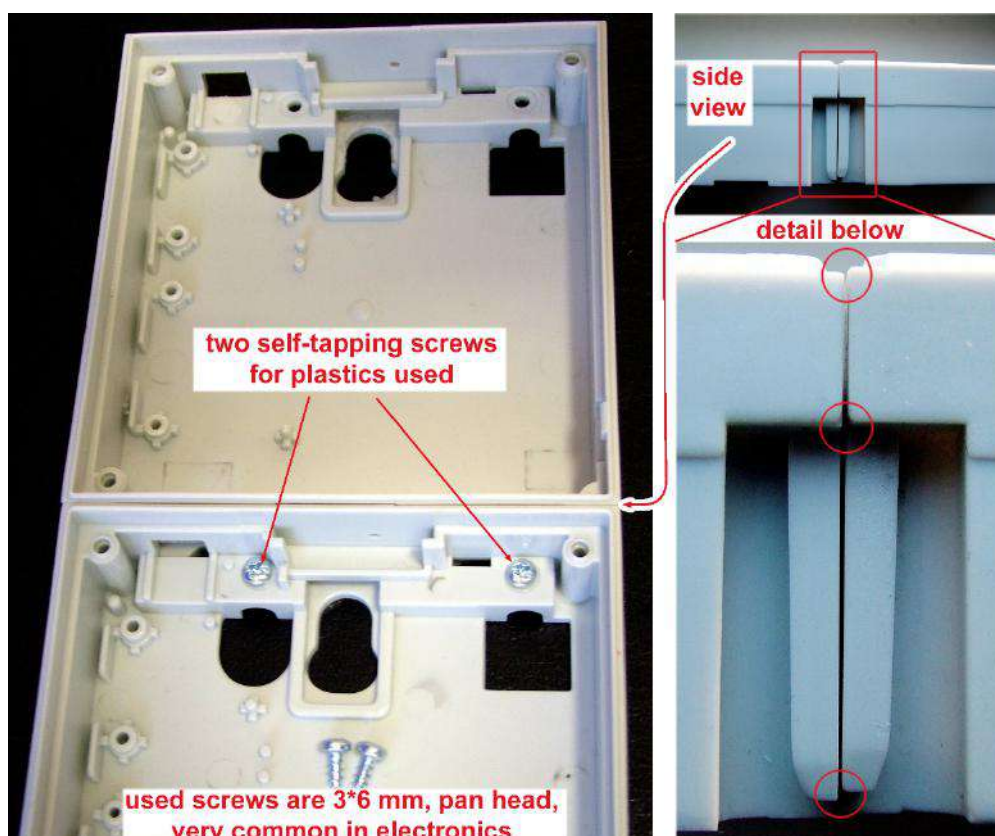





---

## 3. Function and Use

---

This section describes the basic and extending functions of the the 2N<sup>®</sup> LTE Verso product.

Here is what you can find in this section:

- **3.1 Configuration**
- **3.2 Intercom Control as Viewed by External User**
- **3.3 Touch Display Intercom Control As Viewed by External User**
- **3.4 Intercom Control as Viewed by Internal User**
- **3.5 Maintenance**
- **3.6 Downloads**

## 3.1 Configuration

---

### Configuration via SMS Commands

2N<sup>®</sup> LTE Verso includes a set of SMS commands that help you identify the device state and configure the basic mobile data connection parameters. For example, you can use an SMS command to set an APN other than that selected automatically after the first power up. Make sure that all the SMS commands are admin authorised by `pwd=<password>`. The password is always identical with the device web interface login password. If the password is missing or wrong, the device ignores the command, fails to process data and does not respond. Also make sure that the device is registered with the LTE network (SMS commands, however, work without data connection too).

### STATE command - current device state info

SMS format: `state pwd=<password>`

The device sends the following response:

- state - current device state: REGISTERED (registered without data connection), DATA\_CONNECTING (registered, trying to establish data connection), DATA\_CONNECTED (registered, data connection established)
- operator - connected provider
- network - current data network type (NONE, 2G, 3G, 4G)
- signal - signal strength
- ipaddr - device IP address

Example of SMS: `state pwd=2n`

### GET command - parameter reading

SMS format: `get pwd=<password> <parameter>`

Available parameters:

- name - device name
- my2nid - My2N ID
- serial - serial number
- apn - APN, parameters `ausr` and `apwd` are returned in the response
- ausr - APN authorisation name

- apwd – APN authorisation password
- iccid – SIM card ICCID
- fwver – current firmware version

The device sends the following response: "ok <parameter>=<value>" or "error" including error description.

Example of SMS: **get pwd=2n fwver**

## **SET command – parameter setting**

SMS format: **set pwd=<password> <parameter>=<value>**

Available parameters:

- name – device name
- my2nid – My2N ID

The device sends the following response: "ok" or "error" including error description.

Example of SMS: **set pwd=2n name=Brana01**

## **SET command – APN parameter setting**

SMS format: **set pwd=<password> apn=<apnName> ausr=<apnUser> apwd=<apnPwd>**

- apnName – mobile provider's APN
- apnUser – APN user name
- apnPwd – APN password

Examples of SMS:

**set pwd=2n apn= internet.t-mobile.cz ausr=wap apwd=wap**

**set pwd=2n apn=internet ausr= apwd=**

## **LOCATE command – device beeps and flashes after command receipt**

SMS format: **locate pwd=<password>**

The device sends the following response: "ok".

---

## Access to Device Web Configuration Interface

Once logged into the LTE mobile network, 2N<sup>®</sup> LTE Verso gets automatically connected to the My2N portal. Log in to My2N at <https://my2n.com> and add the intercom to your account. The 2N<sup>®</sup> Mobile Video service helps you set basic parameters and make calls to mobile phones or 2N communicators. The 2N<sup>®</sup> Remote Configuration service makes the intercom web configuration interface accessible to you.

---

## 3.2 Intercom Control as Viewed by External User


---

### Quick Dial Buttons

Press the quick dial button on the main unit to dial the first position in the phone directory (Phone Book) depending on the model type. Use extending modules to extend the number of quick dial buttons to up to 146.

By pressing the quick dial buttons you dial the phone numbers assigned to the particular Phone Book position. Call setup is signalled by a long intermittent or any other tone depending on the configuration of the PBX connected.



Repeated pressing of one and the same quick dial button during call setup may initiate call hangup or call termination plus dialling the next phone number of the called subscriber, or may be assigned no function; refer to the Intercom Configuration / Hardware / Keypad subsection of Configuration Manual.

You can also press the  button anytime to hang up if enabled so in the **Button Function During Call** parameter; refer to the Intercom Configuration / Hardware / Keypad subsection of Configuration Manual.

### Calling to Phone Book Position

The 2N<sup>®</sup> LTE Verso Phone Book can contain up to 1999 programmable positions. The quick dial buttons can only be used for positions 1 through 146, depending on the number of actually installed buttons. You can dial the other positions using the numeric keypad if the **Dial by Numeric Keypad** function is enabled; refer to the Intercom Configuration / Hardware / Keypad subsection of Configuration Manual.




#### Procedure:

- Enter the position number using the numeric keypad (05, 15, 200, e.g. – two digits at least and four digits at most) and press the  button for confirmation.
- You can also press the  button anytime to hang up if enabled so in the **Button Function During Call** parameter; refer to the Intercom Configuration / Hardware / Keypad subsection of Configuration Manual.



### Calling to User-Defined Phone Number

If the **Telephone function enabled** (refer to the Intercom Configuration / Hardware / Keypad subsection of Configuration Manual) parameter is selected, you can dial a user-defined phone number using the 2N<sup>®</sup> LTE Verso numeric keypad.

## Procedure:

1. Press .
2. You will hear a continuous tone from the speaker.
3. Enter the phone number via the numeric keypad and press  again to confirm your dialling.
4. You can also press the  button anytime to hang up if enabled so in the **Button Function During Call** parameter; refer to the Intercom Configuration / Hardware / Keypad subsection of Configuration Manual.



## Incoming Call Answering/Rejecting

If the automatic incoming call answering function is disabled (refer to the Intercom Configuration / Services / Phone / Calls subsection of Configuration Manual), the incoming call to 2N<sup>®</sup> LTE Verso is signalled with loud ringing. Press  to answer the call and  to reject the call.

## Door Opening (Switch Activation) by Code

2N<sup>®</sup> LTE Verso is equipped with a door unlocking switch. Enter the valid code (refer to the Intercom Configuration / Hardware / Switches subsection of Configuration Manual) using the numeric keypad to activate this switch.

### Procedure:

- Enter the switch activating numerical code using the numeric keypad and press  for confirmation.
- A valid code is notified visually and by a continuous switch activation tone or a predefined unlocking user sound. An invalid code or interruption longer than as defined in Timeout for Entering Numbers is signalled by the  sound or a user sound.

## Door Opening (Switch Activation) by Biometric Reader

A biometric reader helps authenticate human fingerprints for control and management of access and third party devices. Refer to Directory / Users for how to load a fingerprint into a user profile.

### Procedure:

- Apply your finger to the reader scanning area.
- Reader authentication light signalling:
  - Green - the fingerprint has been recognised successfully.

- Green flashes to red - the fingerprint has been recognised but access is denied. Check the user time profile setting state and multiple authentication setting. Access can also be blocked by a previous tamper switch blocking.
- Red - the fingerprint has not been recognised .





 **Note**

- A higher moisture may deteriorate finger papillary line scanning. You are advised to dry your finger and the reader scanning surface for successful authentication.

## Profile Activation/Deactivation

Activate/deactivate a profile using the numeric keypad in order to route calls directly to the phone numbers tied with the profile; refer to the Intercom Configuration / Directory / Time Profiles subsection of Configuration Manual subsection for details.

### Procedure:

- Enter the profile activating/deactivating numerical code using the numeric keypad and press  for confirmation.
- A valid code is signalled by the  or  sound according to the code type. An invalid code or interruption longer than as defined in **Timeout for Entering Numbers** is signalled by the  sound.



## 3.3 Touch Display Intercom Control As Viewed by External User

---

The 2N<sup>®</sup> LTE Verso model can be equipped with a colour LCD display, which displays the device states (call progress, door opening, etc.) and can work in several modes. Until the display configuration is loaded, 2N<sup>®</sup> LTE Verso displays no users to be called in the Directory menu. If configured properly, the 2N<sup>®</sup> LTE Verso starts displaying an Ad menu or the Directory/Keypad introductory menu or separate Directory or Keypad menus. Control a display-equipped 2N<sup>®</sup> LTE Verso intercom by touching the display and browsing.


### Presentation

In the Presentation mode, one or more images defined by the available display configuration are displayed. The Presentation mode is started automatically when the presentation delay timeout set in the 2N<sup>®</sup> LTE Verso web interface expires. The mode can be terminated by a touch of the



icon, which moves 2N<sup>®</sup> LTE Verso into the display introductory menu, or by an incoming call to 2N<sup>®</sup> LTE Verso.

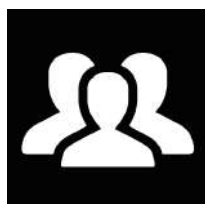

### Contacts



In the Contacts mode, a structured list of users defined by the available display configuration is displayed. The user list can be divided into a practically arbitrary count of groups. Browse through the Directory by touching the display. Click



to return to the superior group or the display introductory menu. Touch the user name to make a call in the Contacts mode.



This mode helps you quick search contacts too. Touch the  display icon to switch the Contacts into the search mode and enter the string to be searched via the touchpad. See the string in the status line in the upper part of the display. Touch the  display icon to delete the currently last character of the text to be searched. The string is searched for in the current group and subgroup levels. See the count of found users in the right-hand upper corner of the display. Touch the found contacts and browse through the data.

The Contacts menu also includes a Help submenu in the right-hand bottom corner of the display, which provides tips and basic display controls for the Contacts mode.


## Call



Use the Call mode to make calls to the intercom Directory users.

To call a user, set Dialling via keypad in the intercom web interface and select one of the following options: Disabled, User position number or User virtual number. If you set User position number or User virtual number, just enter the number and click  for confirmation. Click  to get back to the display introductory menu.

## Entry

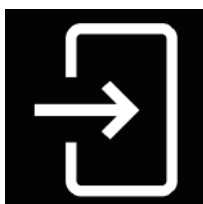

The Entry mode helps you enter the switch codes. Enter the switch digital code and click



---

for confirmation. You can also enable Scramble keypad in the Keypad mode via the web interface to scramble the numerical keypad buttons before every new display in order to prevent third persons from seeing the code to be entered.

## 3.4 Intercom Control as Viewed by Internal User

---

### Call Answering

You can answer the incoming calls to the 2N<sup>®</sup> LTE Verso intercom using your phone like any other calls. You can unlock the door, activate/deactivate a user/profile via your phone keypad during the call. The calls, however, are time-limited to avoid unintentional blocking of the 2N<sup>®</sup> LTE Verso line. Set the maximum call duration in the **Call time limit** (refer to the Intercom Configuration / Services / Phone / Calls subsection of Configuration Manual). Press # on your phone anytime to extend the call time. The automatic call termination is signalled with a short beep 10 s before the call end.




### Calling to 2N<sup>®</sup> LTE Verso

2N<sup>®</sup> LTE Verso allows you to answer incoming calls. Set the required parameters in the Incoming calls group; refer to the Intercom Configuration / Services / Phone / Calls subsection of Configuration Manual.

### Door Opening (Switch Activation) by Code

2N<sup>®</sup> LTE Verso is equipped with a door unlocking switch. Enter the valid code (refer to the Intercom Configuration / Hardware / Switches subsection of Configuration Manual) using your phone keypad to activate this switch.

#### Procedure:


 

 
- Enter the switch 1 or 2 activating code using your phone keypad and press  for confirmation. Confirmation is unnecessary if the **Lock code without confirmation** is enabled, refer to the Intercom Configuration / Hardware / Switches / Advanced subsection of Configuration Manual.
- A valid code is signalled by the  sound. An invalid code or interruption longer than as defined in **Timeout for Entering Numbers** is signalled by the  sound.

### Profile Activation/Deactivation

Activate/deactivate a profile using your phone in order to route calls directly to the phone numbers tied with the profile, refer to the Intercom Configuration / Directory / Time Profiles subsection of Configuration Manual for details.

---

## Procedure:

- Enter the profile activating/deactivating code using your phone keypad and press  for confirmation.
- A valid code is signalled by the  or  sound according to the code type. An invalid code or interruption longer than as defined in **Timeout for Entering Numbers** is signalled by the  sound.

## 3.5 Maintenance

---

### Cleaning

If used frequently, the device surface, the keypad in particular, gets dirty. To clean it, use a piece of soft cloth moistened with clean water. We recommend you to follow these principles while cleaning:

- Never use aggressive detergents (such as abrasives or strong disinfectants).
- Use suitable cleaning agents for glass lens cleaning (cleaners for glasses, optic devices screens, etc.)
- Clean the device in dry weather in order to make waste water evaporate quickly.

#### **Warning**

- Prevent water from getting inside the intercom.
- Do not use alcohol-based cleaners.

## 3.6 Downloads

---

### Templates

Nameplates

Infopanel label

### Software

2N® USB Driver 1.0.6

2N® IP Eye 1.1.4

2N® Network Scanner 3.0.4

---

## 4. Technical Parameters

---

### Signalling protocol

- SIP (UDP, TCP, TLS)

### Buttons

- **Button design:** white-backlit transparent buttons with replaceable nametags
- **Button count:** 1 and increments of 5
- **Button extenders:** up to 30 modules, limited by power supply
- **Numeric keypad:** optional

### Audio

- **Microphone:** 1 integrated microphone
- **Amplifier:** 2 W (class D) amplifier
- **Speaker:** 2 W / 8  $\Omega$
- **Sound pressure level (SPL max):** 78 dB (for 1 kHz, distance 1 m)
- **Output LINE OUT:** 1 VRMS / 600  $\Omega$
- **Volume control:** adjustable with automatic adaptive mode
- **Full duplex:** yes (AEC)
- **Speech transmission index (STI):** 0.89

### Audio stream


- **Protocols:** RTP / RTSP
- **Codecs:** G.711, G.729, G.722, L16/16 kHz

### Camera

- **Sensor:** 1/3" colour CMOS
- **JPEG resolution:** up to 1280 (H) x 960 (V)
- **Video resolution:** 640 (H) x 480 (V)
- **Frame rate:** up to 30 snapshots/s
- **Sensor sensitivity:** 5.6 V/lux-sec (550 nm)



- **View angle:** 128 ° (H), 95 ° (V), 134 ° (D)
- **Infrared light:** yes
- **Sensor sensitivity without IR light:** 0,1 Lux ± 20 %
- **Focal length:** 2.25 mm

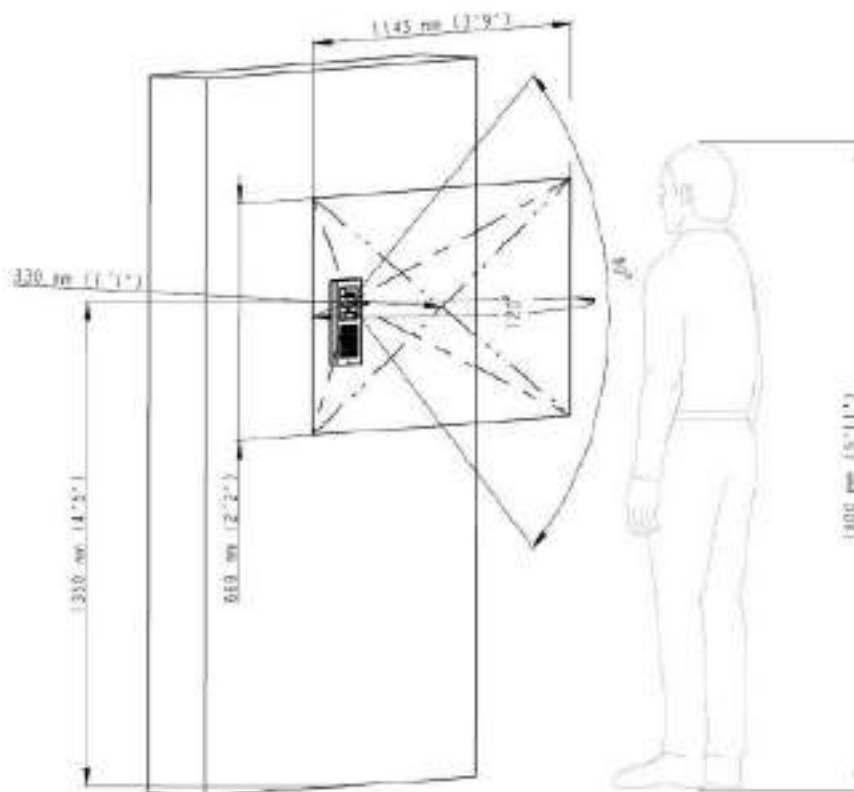

## Video stream

- **Protocols:** RTP / RTSP / HTTP
- **Codecs:** H.263, H.263+, H.264, MPEG-4, M-JPEG
- **IP camera function:** yes, ONVIF v2.4 profile S compatible

## Interface

- **Power supply:** 12 V ±15 % / 2 A DC
- **LTE FDD Cat.1, 3GPP release 9 compliant**
- **LTE bands (9155401C-E a 9155401CB-E):** B1(2100) B3(1800) B7(2600) B8(900) B20(800)
- **Supported protocols:** SIP2.0, DHCP opt. 66, SMTP, 802.1x, RTSP, RTP, TFTP, HTTP, HTTPS, Syslog, ONVIF
- **Passive switch:** NO/NC contact, up to 30 V / 1 A AC/DC

- **Active switch output:** 8 up to 12 V DC depending on power supply (power supply voltage minus 2 V), up to 400 mA

## RFID card reader

- **Optionally 125 kHz or 13.56 MHz**
- **Supported cards, 125 kHz, Part No. 9155032:**
  - EM4100, EM4102, HID Prox
- **Supported cards, 13.56 MHz, Part No. 9155033** (only card serial number is read)
  - ISO/IEC 14443A
    - Mifare Classic 1k & 4k, DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C
  - ISO/IEC 14443B
    - CEPAS, HID iCLASS
  - JIS X 6319
    - Felica
- **Supported cards on 13.56 MHz NFC version, Part No. 9155040** (only card serial number is read)
  - ISO/IEC 14443A
    - Mifare Classic 1k & 4k, DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C
  - ISO/IEC 14443B
    - CEPAS, HID iCLASS
  - JIS X 6319
    - Felica
  - ISO/IEC 18092
    - SmartPhone with NFC/HCE support, since Android version 4.3
- **Supported cards on secured 13.56 MHz NFC version, Part No. 9155042** (optionally card serial number or PAC ID is read)
  - ISO/IEC 14443A
    - Mifare Classic 1k & 4k, DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C
  - ISO/IEC 14443B
    - CEPAS, HID iCLASS
  - JIS X 6319
    - Felica
  - ISO/IEC 18092
    - SmartPhone with NFC/HCE support, from Android version 4.3 up

## Touch display

- **Resolution:** 320 px x 214 px H x V
- **Resolution slideshow:** 214 px x 214 px
- **Contrast ratio:** 400
- **Brightness:** 350 cd/m<sup>2</sup>
- **Viewing angle:** 80 ° from any direction
- **Weight:** 280 g
- **Consumption min:** 1.36 W
- **Consumption max:** 2.40 W
- **Working temperature:** -20 °C - 60 °C
- **Resistance level:** IK07

## Mechanical properties

- **Cover:** robust zinc casting with surface finish (minor surface shade nuances are acceptable)
- **91554XXX - NICKEL**
  - Material - Zamak 410 - Zn95Al4Cu1
  - Surface treatment - Zn/Cu20/Ni25b max. 80 µm
- **91554XXBXX - BLACK**
  - Material - Zamak 410 - Zn95Al4Cu1
  - Surface treatment - Cataphoretic coating Black 30 µm, RAL 9004 - Signalschwarz (colour is not guaranteed - it is cataphoretic)
- **Working temperature:** -40 °C - 60 °C
- **Working relative humidity:** 10 % - 95 % (non-condensing)
- **Storing temperature:** -40 °C - 70 °C
- **Dimensions**
  - **Surface mounting frame:**
    - 1 module: 107 (W) x 130 (H) x 28 (D) mm
    - 2 modules: 107 (W) x 234 (H) x 28 (D) mm
    - 3 modules: 107 (W) x 339 (H) x 28 (D) mm
  - **Flush mounting frame:**
    - 1 module: 130 (W) x 153 (H) x 5 (D) mm
    - 2 modules: 130 (W) x 257 (H) x 5 (D) mm
    - 3 modules: 130 (W) x 361 (H) x 5 (D) mm
  - **Flush mounting box (minimum hole dimensions):**
    - 1 module: 108 (W) x 131 (H) x 45 (D) mm
    - 2 modules: 108 (W) x 238 (H) x 45 (D) mm

- 3 modules: 108 (W) x 343 (H) x 45 (D) mm
- **Module internal cutout:** 72 (W) x 89.3 (H) mm / 2.83 (W) x 3.51 (H) inches
- **Weight:** max net weight: 2 kg / max gross weight: 2.5 kg - based on configuration
- **Covering level:** IP54
- **Resistance level:** IK08

## 5. Supplementary Information

---

Here is what you can find in this section:

- 5.1 Troubleshooting
- 5.2 Directives, Laws and Regulations
- 5.3 General Instructions and Cautions

## 5.1 Troubleshooting

---



For the most frequently asked questions refer to [faq.2n.cz](http://faq.2n.cz).

---

## 5.2 Directives, Laws and Regulations

---

### Europe

2N<sup>®</sup> LTE Verso conforms to the following directives and regulations:

2014/35/EU on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits

2014/30/EU on the harmonisation of the laws of the Member States relating to electromagnetic compatibility

2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment

2012/19/EU on waste electrical and electronic equipment

### Industry Canada

This Class B digital apparatus complies with Canadian ICES-003. / Cet appareil numérique de la classe B est conforme a la norme NMB-003 du Canada.

### FCC

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.





---

## 5.3 General Instructions and Cautions

---

Please read this User Manual carefully before using the product. Follow all instructions and recommendations included herein.

Any use of the product that is in contradiction with the instructions provided herein may result in malfunction, damage or destruction of the product.

The manufacturer shall not be liable and responsible for any damage incurred as a result of a use of the product other than that included herein, namely undue application and disobedience of the recommendations and warnings in contradiction herewith.

Any use or connection of the product other than those included herein shall be considered undue and the manufacturer shall not be liable for any consequences arisen as a result of such misconduct.

Moreover, the manufacturer shall not be liable for any damage or destruction of the product incurred as a result of misplacement, incompetent installation and/or undue operation and use of the product in contradiction herewith.

The manufacturer assumes no responsibility for any malfunction, damage or destruction of the product caused by incompetent replacement of parts or due to the use of reproduction parts or components.

The manufacturer shall not be liable and responsible for any loss or damage incurred as a result of a natural disaster or any other unfavourable natural condition.

The manufacturer shall not be held liable for any damage of the product arising during the shipping thereof.

The manufacturer shall not make any warrant with regard to data loss or damage.

The manufacturer shall not be liable and responsible for any direct or indirect damage incurred as a result of a use of the product in contradiction herewith or a failure of the product due to a use in contradiction herewith.

All applicable legal regulations concerning the product installation and use as well as provisions of technical standards on electric installations have to be obeyed. The manufacturer shall not be liable and responsible for damage or destruction of the product or damage incurred by the consumer in case the product is used and handled contrary to the said regulations and provisions.

The consumer shall, at its own expense, obtain software protection of the product. The manufacturer shall not be held liable and responsible for any damage incurred as a result of the use of deficient or substandard security software.

---

The consumer shall, without delay, change the access password for the product after installation. The manufacturer shall not be held liable or responsible for any damage incurred by the consumer in connection with the use of the original password.

The manufacturer also assumes no responsibility for additional costs incurred by the consumer as a result of making calls using a line with an increased tariff.

## **Electric Waste and Used Battery Pack Handling**



Do not place used electric devices and battery packs into municipal waste containers. An undue disposal thereof might impair the environment!

Deliver your expired electric appliances and battery packs removed from them to dedicated dumpsites or containers or give them back to the dealer or manufacturer for environmental-friendly disposal. The dealer or manufacturer shall take the product back free of charge and without requiring another purchase. Make sure that the devices to be disposed of are complete.

Do not throw battery packs into fire. Battery packs may not be taken into parts or short-circuited either.



An Axis company

**2N TELEKOMUNIKACE a.s.**

Modřanská 621, 143 01 Prague 4, Czech Republic

Phone: +420 261 301 500, Fax: +420 261 301 599

E-mail: [sales@2n.cz](mailto:sales@2n.cz)

Web: [www.2n.cz](http://www.2n.cz)

v1.0