



**To mount the enclosure:**

1. Prepare holes for the screws.
2. Plug in the power adapter and use the **Power (PWR)** LED to verify that the power is on.
3. Plug the ethernet cable into the device. The **Link/Activity (Link/Act.)** LED verifies the network connection.
4. For wall mounting, use the three #6 x 1-1/4-inch Pan Head Phillip screws to secure the speaker.

071057A



531032  
#6 PLASTIC ANCHOR (3x)



151014  
#6x1 1/4" PAN HEAD PHILLIP SCREW (3x)

# Installation Quick Reference

## Syn-Apps enabled Loudspeaker Amplifier (PoE)

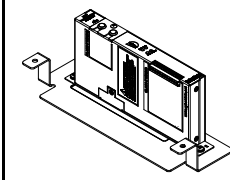
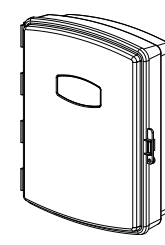


 
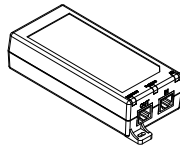
### 011413



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

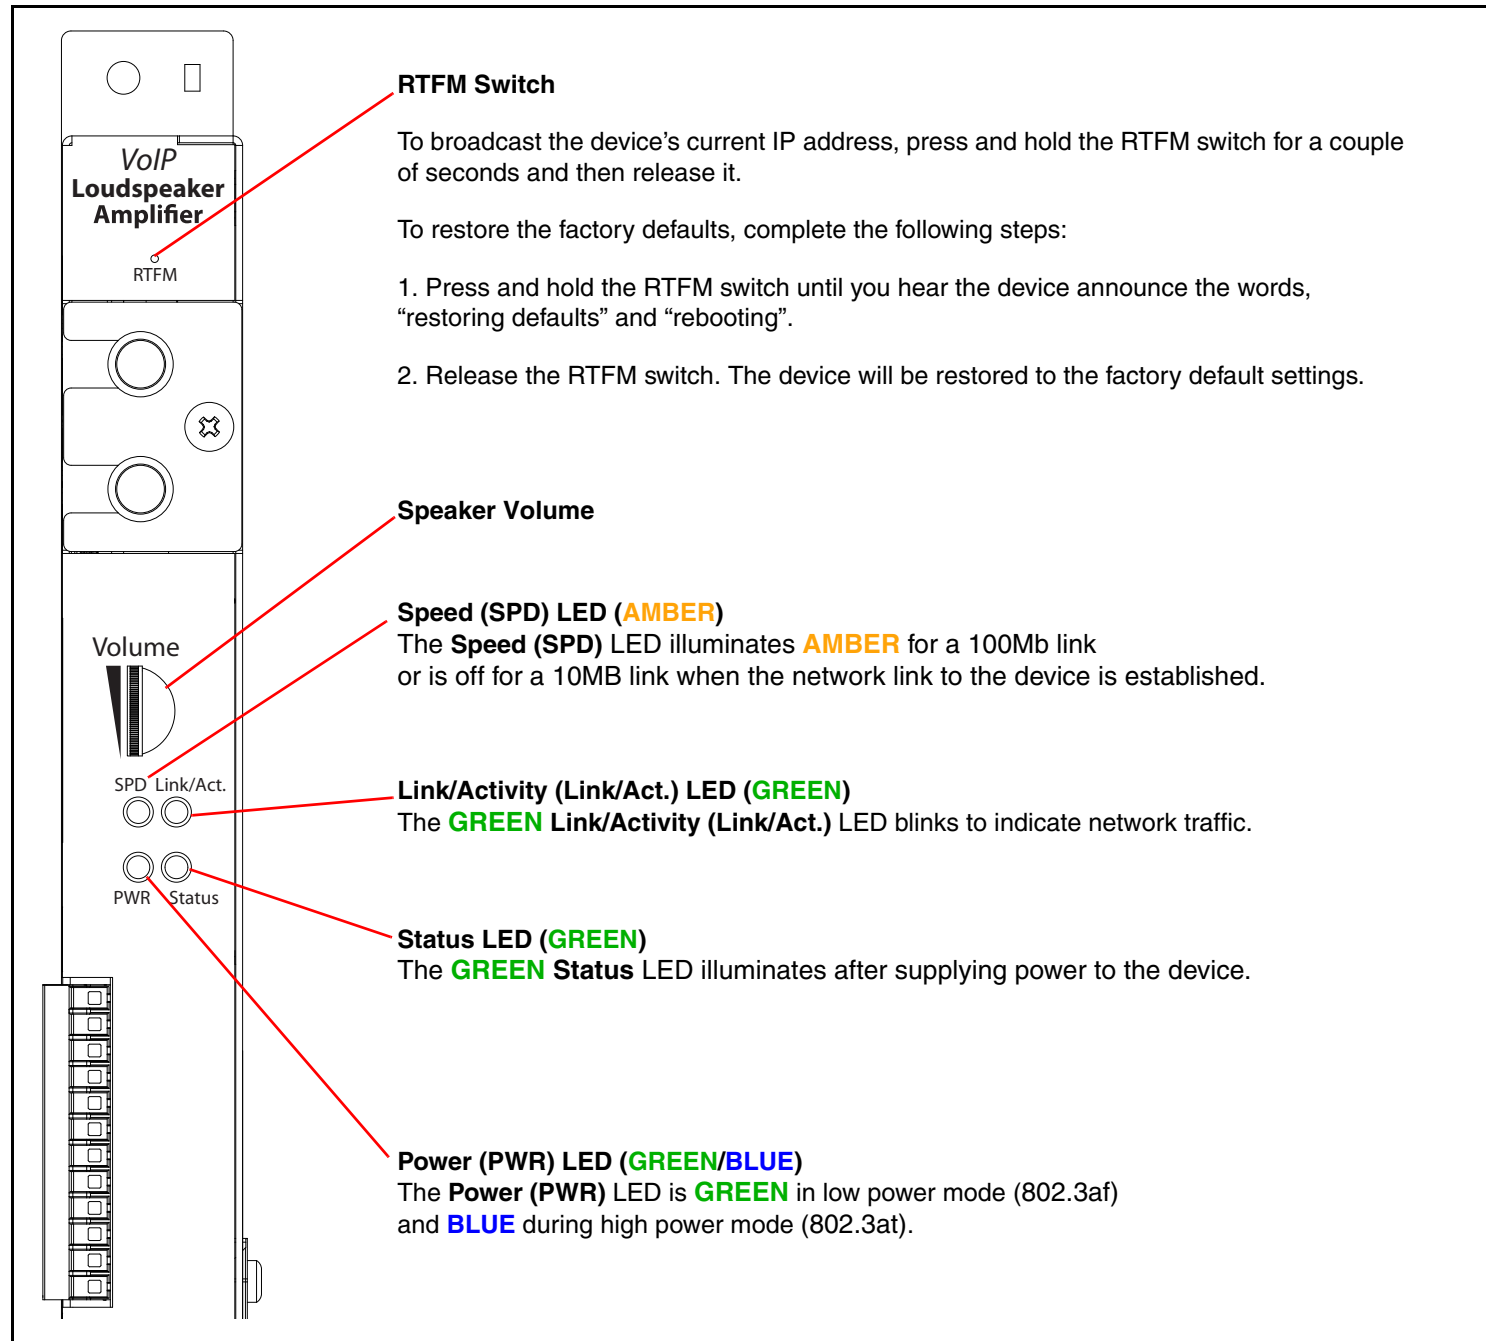
#### Parts

<p>(1) Assembly</p>  <p>(1) Enclosure</p> 	<p><b>(1) Wall Mounting Kit</b></p> <p>(3) #6 Plastic Anchors</p>  <p>(3) #6 x 1-1/4-inch Pan Head Phillip Screws</p> 	
	<p><b>Additional Parts</b></p> <p>(1) CAT 5e/CAT6 cable</p>  <p>(1) PoE Power Injector</p> 	

#### Contacting Syn-Apps

Corporate Headquarters	
Syn-Apps LLC 2812 N Norwalk Suite 112 Mesa, AZ 85215	Website: <a href="http://www.syn-apps.com">www.syn-apps.com</a>
Phone: 480-664-6071 / 866-664-6071	Sales: <a href="mailto:sales@syn-apps.net">sales@syn-apps.net</a>
Fax: 480-659-8999 / 866-659-8999	Support: <a href="http://www.syn-apps.com/resources/support">http://www.syn-apps.com/resources/support</a>
	Email: <a href="http://www.syn-apps.com/contact-us">http://www.syn-apps.com/contact-us</a>

Features



Dimensions and Mounting Template

