

Gigaset

C300 H

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Gigaset C300H – your high-quality accessory

Congratulations on your purchase of this latest generation Gigaset.

Your Gigaset can do a lot more than just make calls:

Directory for up to 250 entries

Save phone numbers and names to the directory (→ page 26). You can designate important entries as VIPs (Very Important Persons). VIP calls are then recognized by their ringer and their color in the directory (→ page 27).

If you don't (always) want it to ring

Use time control for calls (→ page 33) or ensure that all calls from a withheld number are not signalled (→ page 34).

Other practical information

Transfer the directory from an existing Gigaset handset (→ page 27), use the shortcut function (→ page 27) and adjust the color and contrast of the display to your requirements (→ page 32).

Protecting our environment

Gigaset Green Home — Be environmentally aware when using your phone. Details about our ECO DECT products can be found at www.gigaset.com/service.

Further information on your phone can be found at:


www.gigaset.com/gigasetc300h.

After purchasing your Gigaset phone, please register it at:

www.gigaset.com/service – this will ensure any questions you may have or warranty services you request are dealt with even faster!

Have fun using your new phone!

Overview

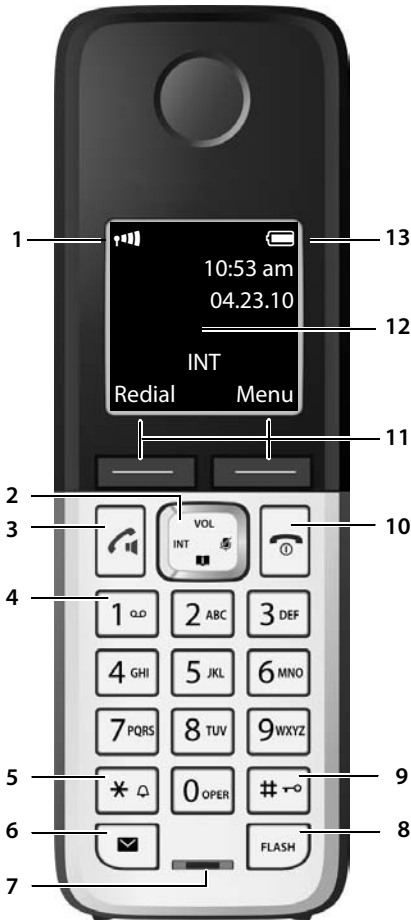


- 1 **Signal strength** (→ page 15)
Colorchanges when Eco Mode is activated (→ page 31)
- 2 **Control key** (→ page 18)
Mute microphone (→ page 25)
- 3 **Talk/Handsfree key**
Flashes: incoming call
Lights up: handsfree mode activated
accept call; start dialing (press briefly);
open redial list (press and hold)
During a call: switch between earpiece and
handsfree mode (→ page 24)
- 4 **Key 1**
Dial network mailbox (press and hold)
- 5 **Asterisk key**
Activate/deactivate ringer (press and hold)
With an open connection: switch between
pulse dialing/tone dialing (press briefly)
- 6 **Message key** (→ page 28)
Access to call and message lists
Flashes: new message
- 7 **Microphone**
- 8 **Recall key**
- Recall
- Insert a dialing pause (press and hold)
- 9 **Pound key**
Keypad lock on/off (press and hold in idle status);
Toggles between uppercase/lowercase and
digits
- 10 **End call key, On/Off key**
End call; cancel function; go back one menu
level (press briefly); back to idle status (press
and hold); activate/deactivate handset (press
and hold in idle status)
- 11 **Display keys** (→ page 4)
- 12 **Display in idle status**
- 13 **Battery charge status** (→ page 15)


Please note
To change **the display language, proceed as described** on page 32.

Understanding the display icons

The following symbols are displayed, depending on the settings and the operating status of your phone:

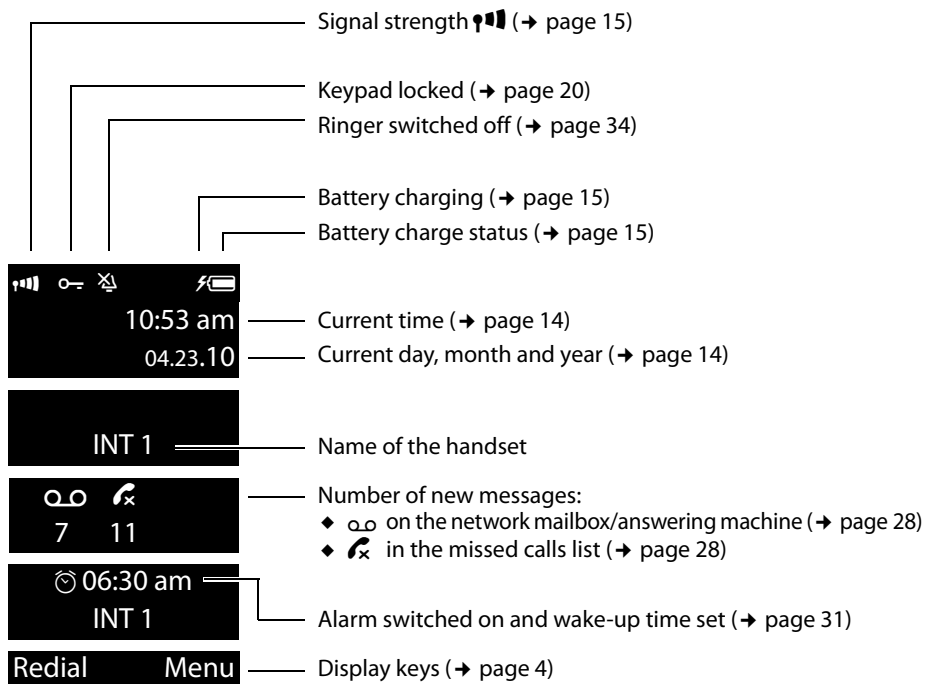

Display during external call:

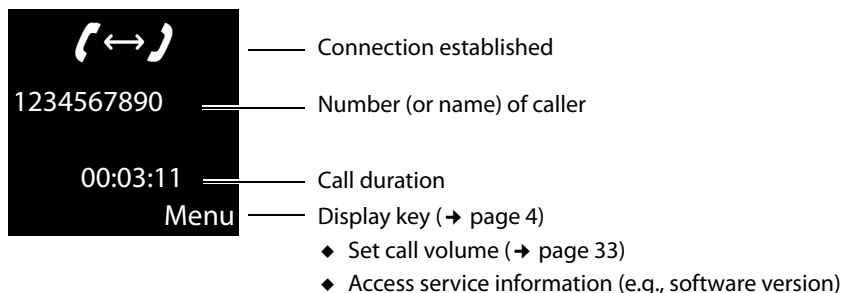

Using the display keys

Other display icons:

Establishing a connection



Connection established



Connection cannot be established or connection interrupted



External call (→ page 24)



Internal call (→ page 25)



Alarm call (→ page 31)



Please wait...



Information



Query



Action complete




Action failed



Using the display keys

The functions of the display keys change depending on the particular operating situation. Example:

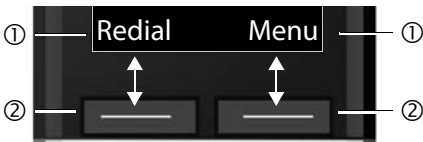





- ① Current display key function
- ② Display keys

Important display keys:

Redial	Open redial list.
Menu	Open a menu for further functions.
OK	Confirm selection.
Delete	Delete key: Delete character by character/word by word from right to left.
Back	Go back one menu level or cancel operation.

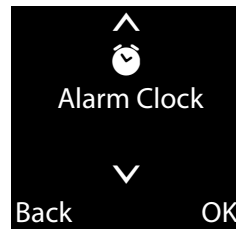Main menu icons



-  Alarm Clock
-  Voice Mail
-  Settings

Information on using the menus → page 19
Menu overview → page 23

Contents

Gigaset C300H – your high-quality accessory	1
Overview	2
Understanding the display icons	3
Using the display keys	4
Main menu icons	4
Following safety precautions	7
Taking the first steps	8
Checking the package contents	8
Setting up the charger	9
Connecting the charger	9
Setting up the handset for use	10
Changing the display language	11
Registering the handset	12
Setting the date and time	14
Setting up area codes	16
What would you like to do next?	17
Using the phone	18
Using the control key	18
Using keys on the keypad	18
Correcting incorrect entries	18
Using the menus	19
Activating/deactivating the handset	20
Activating/deactivating keypad lock	20
Understanding the operating steps	21
Menu overview	23
Making calls	24
Making an external call	24
Ending a call	24
Accepting a call	24
Using handsfree mode	24
Switching to mute	25
Making internal calls	25
Using the directory and lists	26
Directory	26
Using the redial list	28
Message key function	28
Call list (dependent on base)	29

Using the network mailbox 30
Using fast access for the network mailbox 30
Viewing the network mailbox message 30
ECO DECT 31
Using the handset as an alarm clock 31
Handset settings 32
Changing the display language 32
Setting the display/screensaver 32
Activating/deactivating auto answer 32
Changing the handsfree/earpiece volume 33
Changing ringtones 33
Changing the base 34
Restoring the handset default settings 34
Troubleshooting 35
Protecting our environment 35
Appendix 36
Caring for your phone 36
Contact with liquid 36
Specifications 36
Writing and editing text 38
Industry Canada Certification 39
FCC / ACTA Information 39
Safety precautions 40
Service (Customer Care) 42
End-user limited warranty 42
Accessories 45
Mounting the charger on the wall 45
Index 46

Following safety precautions

Warning

Be sure to read this user guide and the safety precautions before using your telephone.

Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied.



Use only **rechargeable batteries** that correspond to the **specification provided on page 36**, as this could otherwise result in significant health risks and personal injury.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy. Please refer to the "Appendix" chapter for the specifications of this Gigaset product.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated; otherwise you risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The handset may cause interference with analog hearing aids. If you require assistance, please contact the hearing aid supplier.



Do not install the charger in bathrooms or shower rooms. The charger is not splash-proof (→ page 36).



Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).



If you give your Gigaset to a third party, make sure you also give them the user guide.



Remove faulty bases from use or have them repaired by our Service, as these could interfere with other wireless services.

Please note

- ◆ Not all of the functions described in this user guide are available in all countries.
- ◆ The device cannot be used in the event of a power failure. In case of a power failure, it is **not possible** to make any calls including emergency calls.

Taking the first steps

Checking the package contents



- 1 One Gigaset C300H handset
- 2 Two batteries
- 3 One battery cover
- 4 One charger
- 5 One power adapter
- 6 One user guide

Setting up the charger

The charger is designed for use in dry rooms in a temperature range of +41°F to +113°C.

- ▶ Set up the charger on a level, non-slip surface or mount the charger on the wall
→ page 45.

Please note

Pay attention to the range of the base.


This is up to 328 yards in unobstructed outdoor areas and up to 55 yards inside buildings. The range is reduced when Eco Mode is activated (→ page 31).

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:


- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Connecting the charger

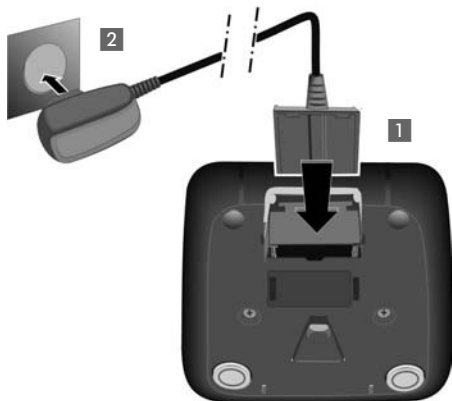

- ▶ Connect the flat plug from the power adapter **1**.
- ▶ Plug the power adapter into a power outlet **2**.

To disconnect the plug from the charger, press the release button **3** and disconnect the plug **4**.

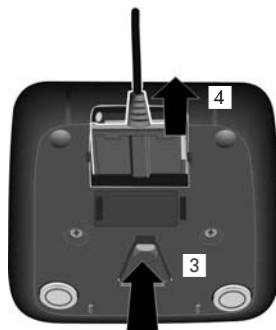

Setting up the handset for use

The display is protected by a plastic film.
Please remove the protective film!

Inserting the batteries and closing the battery cover

Warning

Use only rechargeable batteries (→ page 36) recommended by Gigaset Communications GmbH, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not the recommended type.

- ▶ Insert the batteries with the polarity in the correct direction. The polarity is indicated in the battery compartment.



- ▶ First insert the battery cover at the top (a).
- ▶ Then press the cover (b) until it clicks into place.

To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the casing, then pull the battery cover in an upward direction.

 


Changing the display language


To change the display language:




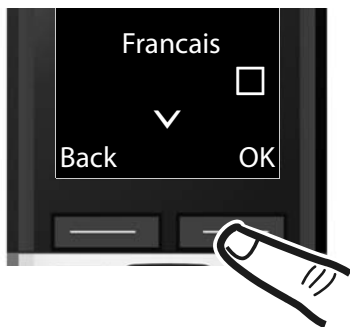
- ▶ Press right on the control key.
- ▶ Press the keys **6_{MNO}** and **4_{GHI}** **slowly** one after the other.



The display for setting languages appears. The current language (e.g., English) is selected

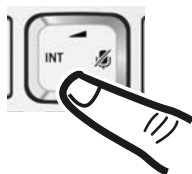


- ▶ Press down on the control key  ...




... until the language you wish to use is displayed e.g., French.

- ▶ Press the key below **OK** to select this language.



The selection is marked with .

- ▶ Press and **hold** the end call key  to return to idle status.

Registering the handset

Before you can use the phone, you must first register the handset to the base. The registration procedure will depend on the type of base.

Automatically registering the C300H handset to the Gigaset C300/ C300A base

Prerequisite: The handset must not already be registered to a base.



- ▶ Place the handset with the **display facing up** in the base.



The handset registers automatically. Registration can take **up to 5 minutes**. **Do not remove the handset from the base during this time.**

Please note

- ◆ Each key press interrupts automatic registration.
- ◆ If the handset is already registered to at least one base or if automatic registration does not work, the handset will have to be registered manually.


Manually registering the C300H handset


You must manually register the handset on both the handset (1) and the base (2).

1) On the handset

Menu ▶ **Settings** ▶ **Registration** ▶ **Register Handset**

If the handset is already registered to four bases:

 Select base e.g., **Base 3** and press **OK**.

 If required, enter the system PIN for the base and press **OK**.

The display shows **Handset is registering**.

2) On the base

- ▶ Within 60 seconds, press and **hold** the registration/paging key on the base (approx. 3 seconds).

A Gigaset C300H handset can be registered on up to four bases.

Once the registration process has been completed successfully, the handset returns to idle status. The handset's internal number is shown in the display e.g., INT 2. If not, repeat the procedure.


Please note

For instructions on deregistering the handsets, please consult the base user guide.

Initial charging and discharging of the batteries

The correct charge status can only be displayed if the battery is first fully charged **and** then discharged.

- ▶ Charge the handset in the charger for **7.5 hours**.

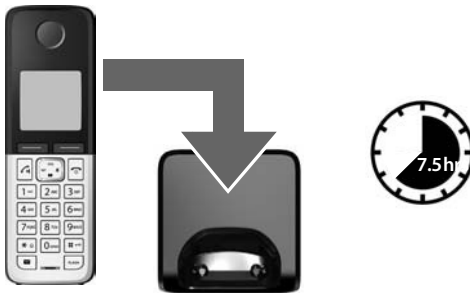

Please note

The handset must only be placed in the designated Gigaset C300/C300A base or charger.

- ▶ After charging, remove the handset from the charger and only replace it when the batteries are **fully discharged**.

Please note


- ◆ After the first battery charge **and** discharge, you may place your handset in the charger after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ Over time, it is normal for the charge capacity of the batteries to decrease for technical reasons.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.

 
Please note

Depending on your network provider, the date and time may be displayed automatically.

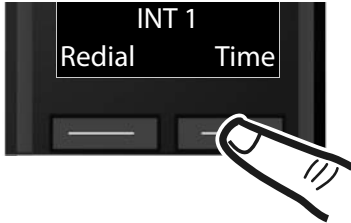

- ▶ Press the key below **Time** on the display screen to open the input field.
(If you have already set the time and date, open the input field using the menu → page 23.)


The **Date/Time** submenu is shown on the display.



- ▶ The active input position flashes.
Enter the month, day and year as an 8-digit number via the keypad
e.g.,

0	4	0	4	2	0	1	0
OPER	GR	OPER	GR	MR	OPER	CO	OPER

for 4 April 2010.

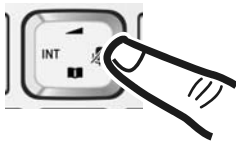

To change the input position e.g., to correct an entry, press **right** or **left** on the control key.



- ▶ Press the key below **OK** on the display screen to save your entry.



- ▶ Enter the hours and minutes in 4-digit format via the keypad e.g.,

0	7	1	5
OPER	MR	CO	MR

for 07:15 am.
Change the input position with the control key if necessary.
If necessary, press the AM/PM display key to change the time setting from AM to PM.
- ▶ Confirm with **OK**.




The display shows **Saved**. You will hear a confirmation tone and the handset automatically reverts to idle status, or returns to the "Settings" menu if the setting was made via the menu.

Display in idle status

Once the phone is registered and the time set, the screen display is as follows (example).

Screen display

- ◆ Reception between the base and the handset:
 - Good to poor:
 - No reception:
- Green:** Eco Mode activated (→ page 31)
- ◆ Charge status of the batteries:
 - white: charged over 66 %
 - white: charged between 33 % and 66 %
 - red: charged between 10% and 33%
 - red: charged below 10%
 - white: batteries charging

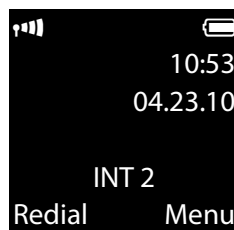

Please note

If you have chosen the colour scheme with the white background, the white symbols will be shown in black.

- ◆ INT 2
Internal name of the handset

Your phone is now ready for use!

Setting up area codes

Before you can return a call from the Calls list (→ page 29), you must store the local area code of the area in which your phone is being used. If your phone is in a multiple area code region, you must also store the extra codes for that region.

Local Area Code

 ▶  ▶ Telephony ▶ Local Area Code



Enter the local area code.



Press the Display key.



When the Saved message displays, press and **hold** to return to idle state.

Extra Codes

 ▶  ▶ Telephony ▶ Extra Codes



Enter the extra code.



Press the Display key.



When the Saved message displays, press and **hold** to return to idle state.

Repeat the above steps until all the extra codes have been entered for your area. A maximum of five (5) extra codes can be stored.

What would you like to do next?


Now that you have successfully set up your Gigaset, you can immediately start calling – or you can adapt it to your personal requirements. Use the following guide to quickly locate the most important functions.

Information on is located here.
Using the phone	▶ page 18
Setting ringtones	▶ page 33
Transferring directory entries from existing Gigaset handsets to new handset(s)	▶ page 27
Setting Eco Mode	▶ page 31
Setting the earpiece volume	▶ page 33

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 35) or contact our Service team (→ page 42).

Using the phone





Using the control key

In the description below, the side of the control key (up, down, right, left) which you have to press in the different operating situations is marked in black e.g.,  for "press the right edge of the control key."





The control key has a number of different functions:





When the handset is in idle status

-  Open the main menu.
-  Open the directory.
-  Open the list of handsets.
-  Call up the menu for setting the handset's call volume (→ page 33).





In menus and lists

-  /  Scroll up/down line by line.

In input fields


You can use the control key to move the cursor up , down , right  or left .

During an external call

-  Mute the microphone.
-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

Using keys on the keypad

-  /  /  etc.
Press the matching key on the handset.

-  Enter digits or letters.

Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Use the display key **Delete** to delete the character to the left of the cursor
- ◆ Insert characters at the cursor position
- ◆ Overwrite the highlighted (flashing) character e.g., when entering time and date.


Using the menus

Your telephone's functions are accessed via a menu consisting of several levels (menu overview → page 23).



Main menu (first menu level)

- ▶ With the handset in idle status, press the display key **Menu** or right on the control key  to open the main menu.

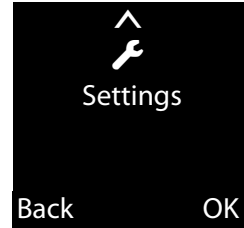The functions in the main menu are displayed in the form of a list with names and icons (example on the right).



Selecting a function


- ▶ You can scroll between functions using the control key . The selectable function is shown in the display.
- ▶ Press the display key **OK** or right on the control key  to select the displayed function. This opens the corresponding submenu and the first entry is displayed.


If you press the display key **Back** or **briefly** press the end call key , the display returns to idle status.

Submenus

The functions in the submenu are displayed with the corresponding names.

Selecting a function


- ▶ You can scroll between functions using the control key . The relevant function is shown in the display.
- ▶ Press the display key **OK** to select the displayed function. This opens the corresponding submenu and the first entry is displayed.

Briefly press the display key **Back** or the end call key  to return to the previous menu level or cancel the operation.

Any settings you have not confirmed by pressing **OK** will be discarded.

Reverting to idle status

From any point in the menu:

- ▶ Press and **hold** the end call key  or
- ▶ Do not press any key: after 2 minutes, the display will **automatically** revert to idle status.

An example of the display in idle status is shown on page 15.

Activating/deactivating the handset




In idle status, press and **hold** the end call key (confirmation tone).

Activating/deactivating keypad lock

Keypad lock prevents any inadvertent use of the phone.



In idle status, press and **hold** the pound key (confirmation tone). The keypad lock is switched on or off. When it is switched on, the  icon appears in the display.

If the keypad lock is activated, a corresponding message is displayed when you press a key.

Keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Please note


When keypad lock is active, you cannot dial/call emergency numbers.

Understanding the operating steps


The operating steps are shown in abbreviated form, for example:


Menu ▶ **Settings** ▶ **Eco Mode** (☑ = on)

▶ This means you should proceed as follows:

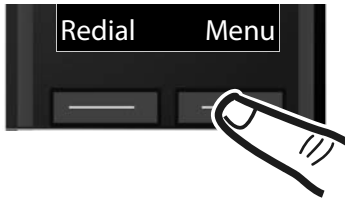

▶ Press the key below **Menu** on the display screen to open the main menu.

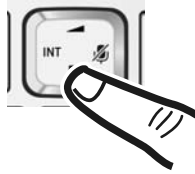



▶ Press down on the control key  ...



... until the menu item **Settings** appears on the screen.

▶ Press the key below **OK** on the display screen to confirm your selection.

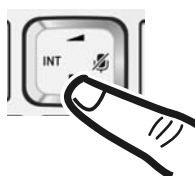

▶ Press down on the control key  ...




... until the **Eco Mode** menu item appears.

- ▶ Press the key below **OK** on the display screen to switch the function on or off (☑ = on).

- ▶ Press the key below **Back** on the display screen to jump back to the previous menu level.

Or

Press and **hold** the end call key  to return to idle status.

Menu overview

The menu entries are partially subdivided. The page numbers refer to the relevant description in the user guide.

To open the main menu: press the display key **Menu** when the phone is in idle mode.

 **SMS** (Menu dependent on base)

 **Alarm Clock**

Activation	→ page 31
Wake up time	→ page 31

 **Voice Mail** (Menu dependent on base)

 **Settings**

Date/Time	→ page 14										
Audio Settings	<table border="1"> <tr> <td>Call Volume</td> <td>→ page 33</td> </tr> <tr> <td>Ringer Volume</td> <td>→ page 33</td> </tr> <tr> <td>Advisory Tones</td> <td>→ page 33</td> </tr> <tr> <td>Battery Low</td> <td>→ page 33</td> </tr> <tr> <td>Ringtones (Handset)</td> <td>→ page 33</td> </tr> </table>	Call Volume	→ page 33	Ringer Volume	→ page 33	Advisory Tones	→ page 33	Battery Low	→ page 33	Ringtones (Handset)	→ page 33
Call Volume	→ page 33										
Ringer Volume	→ page 33										
Advisory Tones	→ page 33										
Battery Low	→ page 33										
Ringtones (Handset)	→ page 33										
Display	<table border="1"> <tr> <td>Screensaver</td> <td>→ page 32</td> </tr> <tr> <td>Color Schemes</td> <td>→ page 32</td> </tr> <tr> <td>Contrast</td> <td>→ page 32</td> </tr> <tr> <td>Backlight</td> <td>→ page 32</td> </tr> </table>	Screensaver	→ page 32	Color Schemes	→ page 32	Contrast	→ page 32	Backlight	→ page 32		
Screensaver	→ page 32										
Color Schemes	→ page 32										
Contrast	→ page 32										
Backlight	→ page 32										
Language	→ page 32										
Registration	<table border="1"> <tr> <td>Register Handset</td> <td>→ page 12</td> </tr> <tr> <td>Select Base</td> <td>→ page 34</td> </tr> <tr> <td>De-register Handset</td> <td>(dependent on base)</td> </tr> </table>	Register Handset	→ page 12	Select Base	→ page 34	De-register Handset	(dependent on base)				
Register Handset	→ page 12										
Select Base	→ page 34										
De-register Handset	(dependent on base)										
Telephony	<table border="1"> <tr> <td>Auto Answer</td> <td>→ page 32</td> </tr> <tr> <td>Local Area Code</td> <td>→ page 16</td> </tr> <tr> <td>Extra Codes</td> <td>→ page 16</td> </tr> </table> <p>(further submenus dependent on base)</p>	Auto Answer	→ page 32	Local Area Code	→ page 16	Extra Codes	→ page 16				
Auto Answer	→ page 32										
Local Area Code	→ page 16										
Extra Codes	→ page 16										
System	<table border="1"> <tr> <td>Reset Handset</td> <td>→ page 34</td> </tr> </table> <p>(further submenus dependent on base)</p>	Reset Handset	→ page 34								
Reset Handset	→ page 34										
Eco Mode	→ page 31										

Making calls

When the display backlight is switched off (→ page 32), pressing any key will activate it. The relevant key function is performed.

Making an external call


External calls are calls using the public telephone network.




Enter the number and press the talk key.

Or:



Press the talk key  to hear dialtone, then enter the number.

You can cancel the dialing operation with the end call key .

You are shown the duration of the call while the call is in progress.

Please note

 
Dialing with the directory (→ page 26), call list (→ page 29) and redial list (→ page 28) saves you from repeatedly keying in phone numbers.

 
Ending a call



Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key .

To accept the call, press the talk key .

If the handset is in the charger and the **Auto Answer** function is activated (→ page 32), the handset automatically answers calls when you remove it from the base/charger.

If the ringer is intrusive, you can deactivate it:

Menu ▶ **Silent** ▶ **OK**

You can accept the call as long as it is displayed on the screen.

Using handsfree mode

In handsfree mode, you activate the loudspeaker so that you can hear the caller without having to hold the handset to your ear. You therefore have both hands free and other people can listen in on the conversation.

Please note

You may wish to inform your caller before you use the handsfree function so that they know a third party may be listening.

 
Activating/deactivating handsfree mode

During a call, activate or deactivate handsfree mode:



Press the handsfree key. Each key press switches between handset and handsfree mode. If handsfree mode is activated, the key is lit up.


If you wish to place the handset in the charger during a call:

- ▶ Press and hold handsfree key  while placing the handset in the base/charger and for a further 2 seconds.

For instructions on adjusting the handsfree volume, → page 33.

Switching to mute



You can deactivate your handset's microphone during a call.

-  Press **right** on the control key to mute the handset. The display shows **Microphone is turned off**.
Press the key again to reactivate the microphone.




Making internal calls

Internal calls are free calls between handsets that are registered with the same base.

Calling a specific handset

-  Initiate internal call.
-  Enter the number of the handset.


 
Or:

-  Initiate internal call.
-  Select handset.
-  Press the talk key.

Calling all handsets (group call)

-  Press and **hold**.

Or:

-  Initiate internal call.
-  Press the asterisk key.

Or:


-  Initiate internal call.

Call All Select

-  Press the talk key.

All handsets are called.

Ending a call

-  Press the end call key.

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Redial list
- ◆ Call list
- ◆ Answering machine list

You can create a personalized directory for your own handset. You can also send lists/entries to other handsets (→ page 27).

Directory


You can save up to 250 entries in the directory.

Please note

To quickly access a number from the directory (shortcut), you can assign the number to a key (→ Using shortcut keys, page 27).

In the **directory**, you can save:

- ◆ Numbers and corresponding names
- ◆ VIP ringer melodies and colors

Open the directory in idle status using the  key.

Length of the entries

Number: max. 32 digits
Name: max. 16 characters

Saving the first number in the directory

 ▶ Dir. empty New entry?



Enter the number and press **OK**.

Enter the name and press **OK**.

Saving a number in the directory

 ▶ **Menu** ▶ New Entry



Enter the number and press **OK**.

Enter the name and press **OK**.

Order of directory entries

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To work round the alphabetical order of entries, insert a space or a digit before the first letter of the name. These entries will then move to the beginning of the directory.


Selecting a directory entry

 Open the directory.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name; use the  key to scroll to the entry if necessary.


Selecting from the directory


 ▶  (Select entry)




Press the talk key.


Managing directory entries

 ▶  (Select entry)


 Press the display key.

The following functions can be selected with :



VIP Caller Melody

Mark a directory entry as a VIP (Very Important Person) by assigning a specific ringer melody to it. The entry is flagged with the  icon in the directory. VIP calls are recognized by the ringer.




VIP Caller Color

Mark a directory entry as a VIP (Very Important Person) by assigning a specific color to it. The entry is displayed in this color in the address book and marked with the  icon.

Edit Entry

Edit the number if required and press .
Edit the name if required and press .

Use Number

Edit or add to a saved number and then dial it with  or save it as a new entry; to do so, display the number and press:  ▶ **Copy to directory** ▶ .

Delete Entry

Delete selected entry.

Send Entry

Send a single entry to a handset
(→ Transferring the directory to another handset, page 27).

Delete List

Delete **all** directory entries.

Send List





Send the entire directory to a handset
(→ Transferring the directory to another handset, page 27).

Shortcut

Assign the current entry as a shortcut to a selected key (→ Using shortcut keys, page 27).

Using shortcut keys

You can assign directory entries to the keys  and  through :

 ▶  (select entry) ▶  ▶ **Shortcut**
▶  (press the key you want to assign the number to)



To dial, press and **hold** the required shortcut key.

Transferring the directory to another handset

You can transfer directory entries from other handsets to your new handset – even entries from old handsets.



Prerequisites:


- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

 ▶  (Select entry)

▶  (Open menu)

▶ **Send Entry / Send List**

 Select the internal number of the receiving handset and press .

You can transfer several individual entries one after the other by responding to the **Entry copied. Next entry?** prompt with .

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is canceled if the phone rings or if the memory of the receiving handset is full.
- ◆ VIP melodies and colors assigned to entries are not transferred.

Using the directory and lists

Copying the displayed number to the directory

You can copy numbers displayed in a list e.g., the call list or redial list, to the directory.

If you have Caller ID, the first 16 characters of the transmitted name are also copied.



A number is displayed:

Menu ▶ **Copy to directory**

- ▶ Complete the entry (→ Saving a number in the directory, page 26).

Copying numbers from the directory




In some operating situations, you can open the address book e.g., to copy a number. Your handset need not be in idle status.

-  Open the address book.
-  Select an entry and press **OK**.



Using the redial list


The redial list contains the last ten numbers dialed on the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name is displayed.

Manual redial

-  Press and **hold** the key.
-  Select entry.
-  Press the talk key again. The number is dialed.

Managing entries in the redial list

-  Press and **hold** the key.
-  Select entry.
- Menu** Open menu.

The following functions can be selected with :

Use Number

(as in the directory, → page 27)

Copy to directory (→ Saving a number in the directory, page 26)

Delete Entry

Delete selected entry.

Delete List

Delete **all** entries in the redial list.


Message key function

Opening lists


Use the message key  to open the following lists:


- ◆ Answering machine list (dependent on base) or network mailbox, if your network provider supports this function and fast access is set for the network mailbox (→ page 30).
- ◆ Call list

 
An advisory tone sounds as soon as a **new message** arrives in a list.

 
You can select whether the message key  flashes when new messages arrive (default setting):

Menu ▶       ▶ **XY** ▶ **OK**

X =  for missed calls


 for messages on the answering machine

Y =  flashes (it goes off when the key is pressed)

 does not flash

Depending on the type of the new entry, an icon appears in the display while in **idle status**:

Icon **New message ...**

 ... in the answering machine list (Gigaset C300A only) or on the network mailbox


 ... in the **missed calls** list

The number of **new** entries is displayed under the corresponding icon.




Please note

If calls are saved in the network mailbox, you will receive a message if the list type has been set accordingly (see your network provider user guide).


After pressing the message key , you can see all lists containing messages and the network mailbox list.

The list is displayed with the number of new entries (1) and the number of old, read entries (2) (example):

 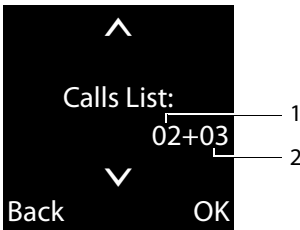


Select a list with . To open, press **OK**.

Disable/enable flashing of the message key

You can select whether the message key  flashes (default setting) or does not flash when new messages arrive. Please do the following:

▶ Press the key sequence:



The following is displayed:

97

▶ Press one of the following keys to select the message type:




 
for missed calls

or 

for messages on the answering machine (dependent on base)/network mailbox

Your selection is displayed (e.g. 5 for missed calls); the current setting flashes:

975 SET: 

▶ Press key  or , to set the behavior for new messages:



message key flashes (it stops when the key is pressed)

or 

message key does not flash

Your selection is displayed (e.g. 1):

975 SET: 


▶ Press the display key **OK**.


Call list (dependent on base)

Prerequisite: Caller ID (CID)

Dependent on the base, the call list contains:

- ◆ All calls
 - Accepted calls
 - Unanswered calls
 - Calls recorded by the answering machine (Gigaset C300A only)
- ◆ Or missed calls only
 - Unanswered calls and
 - Calls not recorded by the answering machine (Gigaset C300A only)

In idle status, you can open the call list by pressing the message key .

To return a call, select the corresponding entry and press the talk key .

See your base user guide for further information.

 
Using the network mailbox

The network mailbox is your provider's voice mail feature within the network. More information is available from your provider.

You cannot use the network mailbox unless you have **requested** it from your provider.

The following information is only applicable when using your handset with a Gigaset C300 base. If you have registered your handset to a different base, such as the Gigaset C300A, please refer to your base user guide.

Using fast access for the network mailbox

To access the answering machine, simply **press and hold** the  key – you do not have to select it through the menu.

You only need to enter the number of the network mailbox.

Voice Mail

 
▶ **Network Mailbox** = selected)



Enter the network mailbox number and press **OK**.

The setting for fast access applies to all handsets.

Calling the network mailbox

 Press and hold. You are connected straight to the network mailbox.

Please note

You can also connect to the network mailbox through the menu:

 **Voice Mail** ▶ **Play Messages**

Viewing the network mailbox message

When a message is recorded, you receive a call from the network mailbox. If you have requested Caller ID, the network mailbox number is displayed. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number is saved in the missed calls list (→ page 28).

Please note

Enter the network mailbox phone number into your directory along with the designation "Network mailbox"; the display and the call list will then show this designation.

ECO DECT

You are helping to protect the environment with your Gigaset.

Reducing energy consumption

Your telephone has a power-saving adapter plug and uses less power.

Reducing radiation (dependent on base)

The radiation can only be reduced if your base supports this function.

The transmission power of your telephone is **automatically** reduced depending on the distance to the base.

You can further reduce the radiation from the handset and base by using Eco Mode or Eco Mode+. For further information, please refer to your base user guide.

Using the handset as an alarm clock

Prerequisite: The date and time have already been set.

Activating/deactivating the alarm clock

Menu ▶ Alarm Clock ▶ Activation (☑ = on)

After you activate the alarm clock, the menu for setting the wake-up time opens automatically.

The ☹ icon and wake-up time are shown on the display.

A wake-up call is signaled on the display (→ page 3) and with the selected ringer volume and melody (→ page 33). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five-minute intervals and then switched off.

During a call, the wake-up call is only signaled by a short tone.

Setting the wake-up time

Menu ▶ Alarm Clock ▶ Wake up time



Enter the wake-up time in hours and minutes, then press **OK**.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Prerequisite: A wake-up call is sounding.

Off

Press the display key. The wake-up call is deactivated.

Or

Snooze

Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition, the wake-up call is deactivated completely.


Handset settings

Your handset is preset, but you can change the settings to suit your individual requirements.

Changing the display language

You can view the display texts in different languages.

Menu ▶ **Settings** ▶ **Language**

The current language is indicated by a .

Select a language and press **OK**.

If you accidentally choose a language you do not understand:

 ▶  **Cancel**

Select the correct language and press **OK**.

Setting the display/ screensaver

You have a choice of four color schemes and several different contrasts. You can also set a screensaver and the backlight.


Menu ▶ **Settings** ▶ **Display**

You have the following options:

Screensaver

You can set a picture or the time to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. You can choose between **No Screensaver**, **Digital Clock** and **Picture**.

The screensaver is not displayed in certain situations e.g., during a call or if the handset is de-registered.

To show the display in idle status, briefly press end call key .

 
Color Schemes

You can set the display to be shown in various color combinations. Four color schemes are available.

Contrast

Nine contrast settings are available.

Backlight

Depending on whether or not the handset is in the charger, you can activate or deactivate the backlight ( = on).

If the display backlight **In Charger** is activated, the display is permanently dimmed when the handset is in the charger.

 
If the display backlight **Out of Charger** is activated, the handset switches the display backlight to 10% of the maximum brightness in 2 stages, when the handset is out of the charger.

When the display backlight is switched off, any key press will activate the backlight and perform the relevant key function.

Please note

 
If the backlight is turned on outside the charger, the standby time for the handset is considerably reduced!

Activating/deactivating auto answer

If this function is activated, you can simply lift the handset out of the charger without having to press the talk key  when you receive a call.

Menu ▶ **Settings** ▶ **Telephony**

▶ **Auto Answer**

OK Press display key ( = on).

Changing the handsfree/earpiece volume


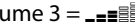
You can set the volume for handsfree mode and earpiece mode to five different levels.

In idle status:

 ▶ **Call Volume**



Earpiece Volume / Handsfree Volume

Select and press **OK**.

 Set the volume (e.g., volume 3 = ).

OK Press the display key to save the setting.

During a conversation using the earpiece or in handsfree mode:

 Press the control key to open the menu for setting the volume. Set the earpiece or handsfree volume by pressing .



The setting will automatically be saved after approximately 3 seconds, if not then press the display key **OK**.

Please note

You can also set the call volume using the menu (→ page 23).

Changing ringtones

◆ Volume:

You can choose between five volumes (e.g., volume 2 = ) and the "crescendo" ring (volume increases with each ring = .

◆ Ringtones:

You can select a ringer from a list of preloaded melodies.

You can set different ringtones for the following functions:

- ◆ Internal calls
- ◆ External calls:
- ◆ Alarm clock

Setting the ringer volume

The ringer volume is the same for all types of ring.

In idle status:

 ▶ **Ringer Volume**

 Set the volume.

OK Press the display key to save the setting.

Please note


You can also adjust the ringer volume in the menu (→ page 23).

Setting the ringer melody

Set different ringer melodies for external calls, internal calls and the alarm clock.


For internal calls and the alarm clock

In idle status:

 ▶ **Ringtones (Handset)**


Internal Calls / Alarm Clock

Select and press **OK**.

 Select melody and press **OK** (✓ = selected).


For external calls:

In idle status:

 ▶ **Ringtones (Handset)**

External Calls

Select and press **OK**.

 can be used for the following:

Melodies

You can set the ringer melody as described above.

Time Control

You can specify a time period when you do not want the telephone to signal external calls e.g., during the night.

Activation is switched on or off by pressing **OK** (✓ = activated)

Handset settings

Settings

Ringer off from: / Ringer off until:

Enter time in 4-digit format.

Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalized melody in the directory (VIP).

Anonymous Calls Silent

You can set your handset not to ring for calls where Caller ID has been restricted (not answering machine). The call will only be signaled on the display.

Switch the **Anonymous Calls Silent** function on or off by pressing **OK** (☑ = activated).

Please note

You can also set the ringer melodies in the menu (→ page 23).

 
Activating/deactivating the ringer


You can:

- ◆ Permanently deactivate the ringer in idle status or when receiving a call
- ◆ Deactivate the ringer for the current call only.

 
The ringer cannot be reactivated while a call is in progress.

Deactivating the ringer permanently

 Press and **hold** the asterisk key.

The  icon appears in the display.

Reactivating the ringer

 Press and **hold** the asterisk key.

Deactivating the ringer for the current call

Menu ▶ **Silent** ▶ **OK**

Activating/deactivating advisory tones/battery warning tones

Your handset uses advisory tones to tell you about different activities and statuses. These can be activated and deactivated independently of each other:

- ◆ **Advisory Tones**
 - **Confirmation tone:** at the end of an entry/setting and when a new entry arrives in the call list
 - **Error tone:** when you make an incorrect entry
 - **Menu end tone:** when scrolling to the end of a menu
 - **Key click:** every key press is confirmed.

- ◆ **Battery Low**

The battery requires charging.

▶ **Advisory Tones / Battery Low**


Select and press **OK** to activate or deactivate (☑ = activated).

Changing the base

If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).

Menu ▶ **Settings** ▶ **Registration**

▶ **Select Base**

 Select one of the bases or **Best Base** and press **OK**.

Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset:

- ◆ Registration of the handset to the base
- ◆ Date & time
- ◆ Entries in the directory, call lists



Menu ▶ **Settings** ▶ **System** ▶ **Reset Handset**

OK Confirm prompt.

Troubleshooting

If you have any queries about the use of your telephone, visit our website at www.gigaset.com/service for assistance 24/7.

The table below contains a list of common problems and possible solutions.

<p>The display is blank.</p> <ol style="list-style-type: none"> The handset is not switched on. <ul style="list-style-type: none"> Press and hold the end call key . The battery is empty. <ul style="list-style-type: none"> Charge the battery or replace it (→ page 10).
<p>"Base" flashes on the display.</p> <ol style="list-style-type: none"> The handset is outside the range of the base. <ul style="list-style-type: none"> Move the handset closer to the base. The base's range is reduced because Eco Mode is activated. <ul style="list-style-type: none"> Deactivate Eco Mode (→ page 31) or reduce the distance between the handset and the base. The base is not switched on. <ul style="list-style-type: none"> Check the base power adapter. Handset has not been registered with the base or has been deregistered. <ul style="list-style-type: none"> Register the handset (→ page 12).
<p>Handset does not ring.</p> <ol style="list-style-type: none"> The ringer is deactivated. <ul style="list-style-type: none"> Activate the ringer (→ page 34). The phone only rings if the phone number has been transferred. <ul style="list-style-type: none"> Activate the ringer for unknown calls (→ page 34).
<p>Each incoming call resets the date/time incorrectly.</p> <p>The date and time are sent through e.g., your network provider or PBX during calling line display. This data may be incorrect.</p> <ul style="list-style-type: none"> Set the date/time correctly e.g., on the router or PBX. Do not automatically copy the date/time (dependent on base, refer to base user guide).
<p>The other party cannot hear you.</p> <p>You pressed the mute key  during a call. The handset is "muted."</p> <ul style="list-style-type: none"> Unmute the microphone (→ page 25).

<p>The number of the caller is not displayed despite Caller ID.</p> <p>Caller ID is not enabled.</p> <ul style="list-style-type: none"> The caller should ask the network provider to enable Caller ID (CID).
<p>You hear an error tone when keying an input.</p> <p>Action has failed/invalid input.</p> <ul style="list-style-type: none"> Repeat the process. Watch the display and refer to the user guide if necessary.

Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colors may vary.

This is completely normal and does not indicate an error.

Protecting our environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on our environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

ISO 14001 (Environment): certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): certified since February 17, 1994 by TÜV SÜD Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 31) saves energy and makes an active contribution towards protecting the environment.

Disposal

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a prerequisite for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Appendix

Caring for your phone

Wipe down the base station and handset with a **damp** cloth (do not use solvent or a microfiber cloth) or an antistatic cloth. **Never** use a dry cloth. This can cause static.

Contact with liquid

If the handset comes into contact with liquid:

1. **Switch the handset off and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then with the battery compartment open and the keypad facing down place the handset in a dry, warm place **for at least 72 hours (not in a microwave, oven, etc.)**.
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Specifications

Batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550 - 1000 mAh

The device is supplied with two approved batteries.

Handset operating times/charging times

This Gigaset can charge batteries up to a capacity of 1000 mAh. The use of special high-performance batteries or batteries with high capacities is not recommended for cordless phones.

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times).

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours) *	255/89	295/103	340/118	420/146
Talktime (hours)	14	16	19	23
Operating time for 1.5 hrs of calls per day (hours) **				
- Without Eco Mode+	120	140	160	195
- With Eco Mode+	80	95	110	135
Charging time in charger (hours)	5.5	6.5	7.5	9

*) Without/with display backlight

**) Without display backlight
(Backlight → page 32)


Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.gigaset.com/service

General specifications DECT


 
 
 


 
 
DECT standard	Is supported
GAP standard	Is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Repeat frequency of the transmission pulse	100 Hz
Length of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel 250 mW pulse power
Range	up to 328 yards outdoors, up to 55 yards indoors
Environmental conditions in operation	+41°F to +113°F, 20% to 75% relative humidity
Dialing mode	DTMF (tone dialing)/ PD (pulse dialing)

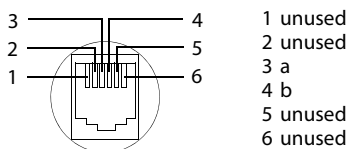Pin connections on the telephone jack




Writing and editing text

The following rules apply when writing text:

- ◆ Multiple letters and characters are assigned to each key between  and  as well as  and .
- ◆ Control the cursor with , , , .
- ◆ Characters are inserted at the cursor position.
- ◆ Press the display key **Delete** to delete the **character** to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalized and followed by lower case letters.

Setting uppercase/lowercase or digits

Repeatedly press the pound key  to change the text input mode.

123	Writing digits
Abc	Uppercase*
abc	Lowercase

* First letter in capitals, all others in lowercase

When the mode is switched, the active mode is indicated at the bottom left of the screen.


 





 
 
 
 
 
 

Writing names

- ▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

- ▶ **Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x	16x
	1	€	£	\$	¥	¤										
	a	b	c	2	ä	á	à	â	ã	ç						
	d	e	f	3	ë	è	é	ê								
	g	h	i	4	ï	í	ì	î								
	j	k	l	5												
	m	n	o	6	ö	ñ	ó	ô	õ							
	p	q	r	s	7	ß										
	t	u	v	8	ü	ú	ù	û								
	w	x	y	z	9	ÿ	ý	æ	ø	å						
		.	,	? !		0	+	-	:	;	‘	’	“	”	’	_
	*	/	()	<	=	>	%								
			#	@	\	&	§									

- 1) Space
- 2) Line break

Industry Canada Certification

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate. This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC / ACTA Information

Warning: Changes or modifications to this unit not expressly approved by Gigaset Communications USA LLC could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address: www.gigaset.com/docs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network

until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at 1-866 247-8758. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the base station and receiver.
3. Connect the base station into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

Notice for Direct Inward Dialing ("DID")

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION IS A VIOLATION OF PART 68 OF THE FCC'S RULES.

Notice to Hearing Aid Wearers:

This phone system is compatible with inductively coupled hearing aids.

Power Outage:

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Notice:

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Notice to telephone company service:

If you need service from your telephone company, please provide them with the information

- Facility interface Code (FIC)
- Service Order Code (SOC)
- Universal Service Order Code (USOC)

as indicated on the label on the bottom side of the base station.

Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.

5. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.

6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.

7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.

8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.

9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.

11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used. Disconnect TNV circuit connector before removing cover.

12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a.) When the power cord is damaged or frayed.
- b.) If liquid has been spilled into the product.
- c.) If the product has been exposed to rain or water.
- d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
- e.) If the product has been dropped or physically has been damaged.
- f.) If the product exhibits a distinct change in performance.

13. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrestor.

14. Do not use the telephone to report a gas leak in the vicinity of the leak.

15. Emergency/911 numbers may not be dialed if the keypad is locked.

16. Minimum No. 26 AWG telecommunication line cord must be used with this phone.

BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this product.

2. DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.

3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.

4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.

5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.

6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.

7. Periodically clean the charge contacts on both the charger and handset.

Service (Customer Care)

Customer Care Warranty for Cordless Products
To obtain Customer Care Warranty service,
product operation information, or for problem resolution, call:
Toll Free: 1-866 247-8758

End-user limited warranty

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: 1-866 247-8758.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC or Gigaset Communications Canada Inc. (collectively "Gigaset NAM"). Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

2. EXCLUSIVE REMEDY

Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed.
 - Cost of installation, removal or reinstallation.
 - Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
 - Equipment and components not manufactured, supplied or authorized by Gigaset NAM.
 - Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
 - Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
 - Signal reception problems (unless caused by defect in material or workmanship in the Product).
 - Products operated outside published maximum ratings.
 - Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM.
 - Consumables (such as batteries and fuses).
- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.

- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset NAM.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (*i.e.*, the United States of America or Canada respectively, but not both).

USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET NAM OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET NAM MAY VOID WARRANTY.

4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Support service will be provided for you by accessing the toll free customer service number:

1-866 247-8758

5. LIMITATION OF WARRANTY

Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, **YOU ARE NOT**

ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

7. DISCLAIMER OF WARRANTIES

GIGASET NAM AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT WITH REGARD TO THE PRODUCT.

Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL GIGASET NAM, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET NAM OR SELLER OR ANY SUPPLIER, AND EVEN IF GIGASET NAM OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET NAM, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET NAM OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM

EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Gigaset Service or for Support on your Gigaset phone, visit our web site at <http://www.gigaset.com> or please call 1-866 247-8758.

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011

All rights reserved.

Subject to availability. Rights of modifications reserved.

Product attributes subject to change.

We reserve the right, to make changes without notice in equipment design and/or components.
Part Number: A31008-M2253-R301-2-3519

© Copyright 2011.

Accessories


Ordering Gigaset products

You can order Gigaset products from your specialist retailer.




Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

Mounting the charger on the wall

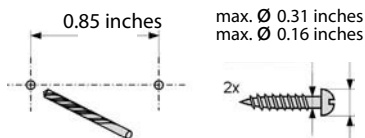

Approx. 0.05 inches

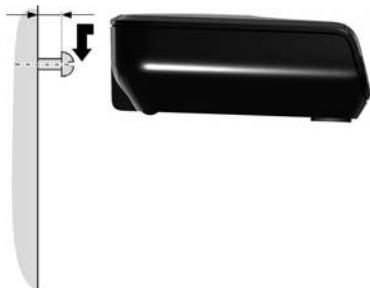

Index

A

Accepting a call	24
Accessories	45
Activating	
auto answer	32
handset	20
keypad lock	20
Advisory tones	34
confirmation tone	34
error tone	34
key click	34
Alarm clock	31
Answering machine list	28
Area codes	
extra codes	16
local area code	16
Asterisk key	2
Automatic auto answer	24, 32

B

Backlight	32
Battery	
charging	2, 3
display	2, 3
icon	2, 3
inserting	10
tone	34
Battery warning tone	34
Best base	34

C

Call	
ending	24
external	24
internal	25
Call duration	24
Call lists	29
Calling	
external	24
internal	25
Care of the telephone	36
Changing	
display language	11, 32
earpiece volume	33
handsfree volume	33
ringer	33
Changing the base	34
Character set	38

Charge status display	2, 3
Color scheme	32
Confirmation tone	34
Contrast	32
Correcting incorrect entries	18
Customer Care	42

D

Deactivating	
auto answer	32
handset	20
keypad lock	20
Delete key	4
Deleting	
characters	18
Dialing	
using shortcuts	27
using the directory	26
Digital clock	32
Directory	26
copying number from text	28
managing entries	27
opening	18
order of entries	26
saving entry	26
saving the first number	26
sending entry/list to handset	27
using to enter numbers	28
Display	
backlight	32
changing display language	11, 32
color scheme	32
contrast	32
in idle status	15, 19
network mailbox message	30
screensaver	32
setting	32
Disposal	36

E

Earpiece volume	33
ECO DECT	31
End call key	2, 24
Ending	
call	24
Entry	
saving (network mailbox)	30
selecting from directory	26
Error tone	34
Extra codes	16

- F**
- Fast access
 - network mailbox 30
 - Flashing of the message key
 - disable/enable 29
- G**
- General troubleshooting 35
 - Group call 25
- H**
- Handset
- activating/deactivating 20
 - changing to a different base 34
 - changing to best reception 34
 - contact with liquid 36
 - deregistering 13
 - display language 11, 32
 - earpiece volume 33
 - handsfree volume 33
 - idle status 19
 - list 18
 - muting 25
 - registering 12
 - restoring to default settings 34
 - set up for use 10
- Hearing aids 7
- Help 35
- I**
- Icon
- alarm clock 31
 - for new messages 28
 - keypad lock 20
 - ringer 34
- Idle status
- returning to 19
- Idle status (display) 15, 19
- Incorrect entries (correction) 18
- Industry Canada Certification 39
- Internal call 25
- K**
- Key 1 (fast access) 2
 - Key click 34
 - Keypad lock 20
 - Keys
 - assigning directory entry 27
 - asterisk key 2
 - control key 2, 18
 - delete key 4
 - display keys 2, 4
 - end call key 2, 24
 - message key 2
 - on/off key 2
 - pound key 2, 20
 - recall key 2
 - shortcut 27
 - talk key 2, 24
- L**
- Language
- display 11, 32
- Liquid 36
- List
- answering machine 28
 - call lists 29
 - handsets 18
 - missed calls 29
 - network mailbox 28
- Local area code 16
- Lock
- activating/deactivating keypad lock .. 20
- M**
- Making calls
- accepting a call 24
 - external 24
 - internal 25
- Making internal calls 25
- Manual redial 28
- Medical equipment 7
- Menu
- end tone 34
 - overview 23
 - using 19
- Message key 2
- disable/enable flashing 29
 - opening lists 28
- Microphone 2
- Missed call 29
- Muting the handset 25

Index

N

- Network mailbox..... 30
- Number
 - copying from directory 28
 - copying to the directory 28
 - entering netw. mailbox number..... 30
 - entering with directory 28
 - saving in directory 26

O

- On/Off key.....2
- Order in directory 26

P

- Package contents8
- Pin connections 37
- Pound key 2, 20
- Power adapter7
 - power saving 31
- Power saving adapter plug..... 31
- Protecting our environment..... 35

Q

- Questions and answers 35

R

- Range9
- Recall key.....2
- Redial 28
- Reducing energy consumption..... 31
- Reducing radiation 31
- Registering (handset)..... 12
- Ring delay 32
- Ringer
 - changing..... 33
 - setting melody..... 33
 - setting volume..... 33

S

- Screen protection, see Screensaver
- Screensaver..... 32
- Search directory 26
- Sending
 - directory entry to handset 27
- Service (Customer Care) 42
- Setting melody (ringer) 33
- Setting the date..... 14, 23

- Setting the time..... 14, 23
- Setting the wake-up time 31
- Setting up
 - charger9
 - handset 10
- Shortcut..... 26, 27
- Snooze mode 31
- Sound, see Ringer
- Specifications..... 36

T

- Talk key 2, 24
- Telephone jack
 - pin connections 37
- Time control 33

U

- Unknown calls 34
- Using handsfree mode 24
- Using the control key 2, 18
- Using the display keys 2, 4

V

- Viewing network mailbox message 30
- Volume
 - earpiece..... 33
 - handset handsfree volume..... 33
 - ringer 33

W

- Writing and editing text 38

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011

All rights reserved. Subject to availability.

Rights of modification reserved.

www.gigaset.com

This user guide is made from 100% recycled paper.



A31008 - M2253 - R301 - 2 - 3S19