

F52/F52P

VoIP Phone



VoIP Phone F52/F52P Quick Installation Guide



VoIPon www.voipon.co.uk sales@voipon.co.uk Tel: +44 (0)1245 808195 Fax: +44 (0)1245 808299

Smart VoIP

This phone can be setted through the LCD or web page.
If you own this product to make some VoIP calls, an Ethernet-based Cable or a DSL modem with an active connection to the Internet are necessary.

Check Your Package Contents

These are the items included with your F52/F52P IP Phone purchase:



VoIP Phone F52/F52P



Handset



Power adaptor



Handset cord




Quick Installation Guide



Ethernet Cable

2 The Appearance of Product

Front view and keypad function:

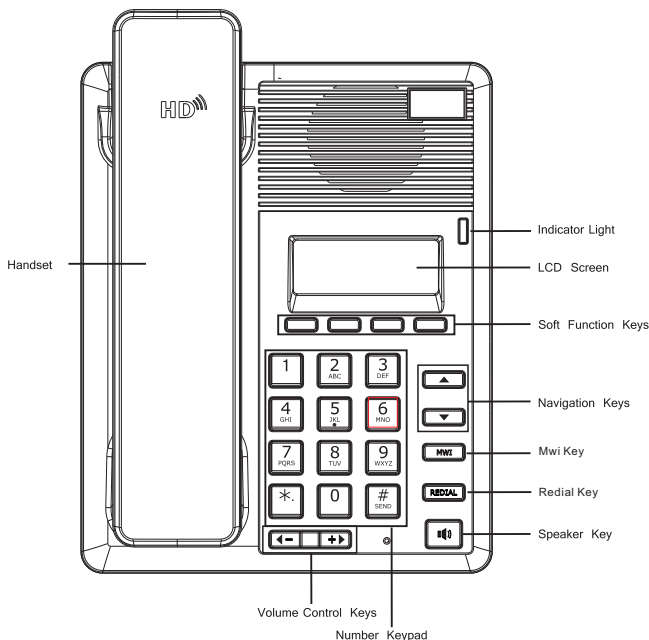


You can press these number keys one or more times to complete the corresponding input when you want do some input on the LCD.

Text Mode			Text Mode		
Key	Normal(ABC)	Numeric(0-9)	Key	Normal(ABC)	Numeric(0-9)
1		1	7 PQRS	PQRSpqrs	7
2 ABC	ABCabc	2	8 TUV	TUVtuv	8
3 DEF	DEFdef	3	9 WXYZ	WXYZwxyz	9
4 GHI	GHIghi	4	0		0
5 JKL	JKLjkl	5	*	#@.../\$%& ()<>[]~!_ =+~?	*
6 MNO	MNOmno	6	# SEND		#


3 Connecting IP Phone

Connect the IP Phone as shown by the following diagram:

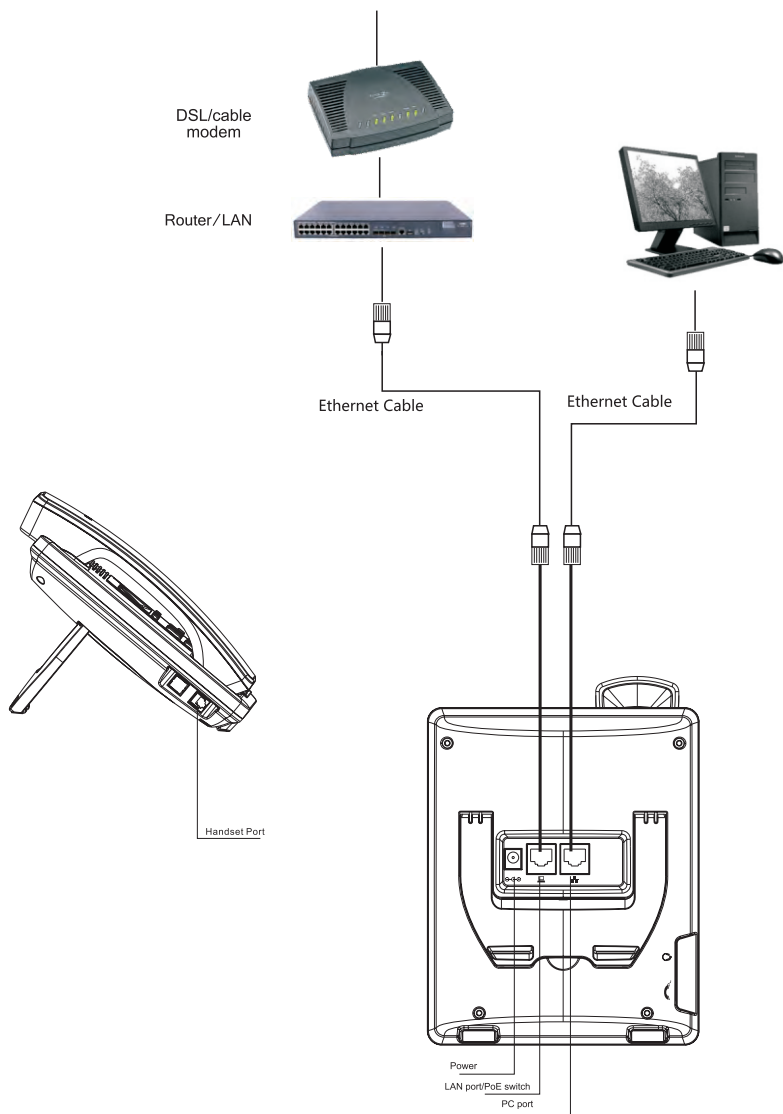


4 IP Phone Setup Menu(1)

Network mode Settings diagram:

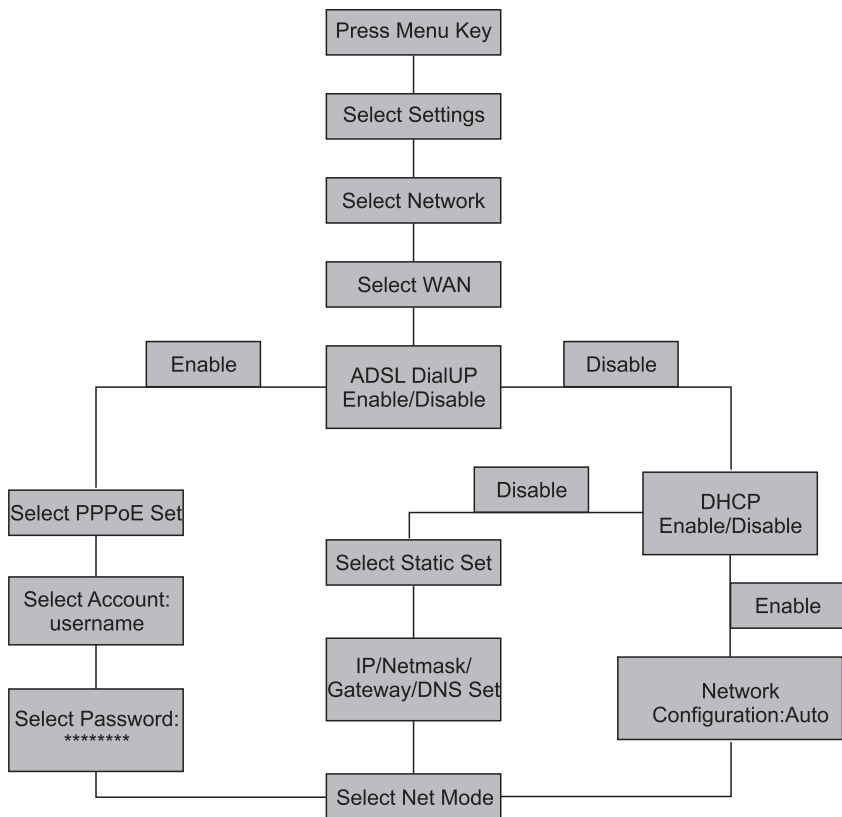

5 IP Phone Setup Menu(2)

The menu of phone Structure:

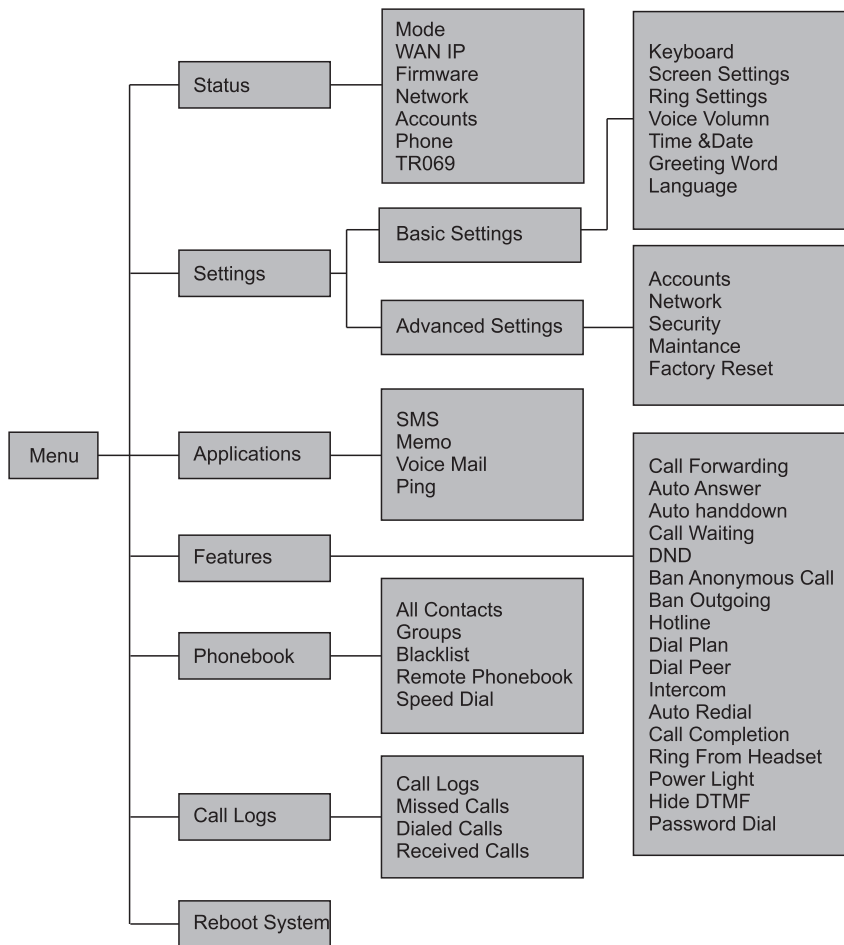

6 Configuration(1)

Web Login


The configuration menu of F52/F52P can be accessed using the convenient and user-friendly interface of a web browser.



Open the browser and type into the IP address which can be found in the status of the LCD menu(e.g. <http://192.168.1.16>) to visit the Web page and make some configuration.



Enter the username and password, and both of the default username and password are "admin". After your login, the Web page will be displayed as follows.

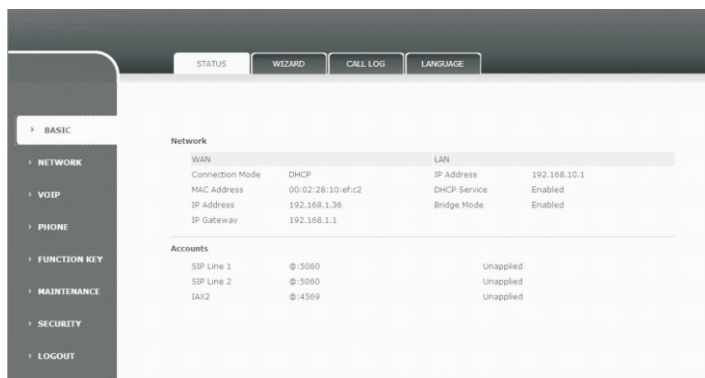

7 Configuration(2)

Network - PPPoE Setting

Select Network from the main menu.

Select PPPoE as network connection type if your ISP uses PPPoE. (Most DSL users use PPPoE.)

The screenshot shows the 'WAN' configuration page for PPPoE. The left sidebar has a menu with 'NETWORK' selected. The main content area has tabs for 'WAN', 'LAN', 'QoS/VLAN', 'SERVICE PORT', 'DHCP SERVICE', and 'TIME/DATE'. Under 'WAN Status', fields show Active IP Address (192.168.1.36), Current Subnet Mask (255.255.255.0), Current IP Gateway (192.168.1.1), MAC Address (00:02:28:10:ef:c2), and MAC Timestamp (2012-4-5). The 'WAN Settings' section has 'Obtain DNS Server Automatically' set to 'Enabled', 'Static IP' as a radio button, 'DHCP' as a radio button, and 'PPPoE' as a radio button. Below these are fields for 'Service Name' (ANY), 'User' (user123), and 'Password' (masked with asterisks). An 'Apply' button is at the bottom. The '802.1X Settings' section has fields for 'User' (admin), 'Password' (masked), and 'Enable 802.1X' (unchecked), with another 'Apply' button.

Network - Static Setting

Select Static as network connection type if all Wide Area Network IP is provided to you by your ISP.

The screenshot shows the 'WAN' configuration page for Static IP. The layout is identical to the PPPoE page, but the 'Static IP' radio button is selected. The 'WAN Settings' section shows 'Static IP' selected, 'DHCP' as a radio button, and 'PPPoE' as a radio button. Below these are fields for 'IP Address' (192.168.1.179), 'Subnet Mask' (255.255.255.0), 'IP Gateway' (192.168.1.1), 'DNS Domain' (empty), 'Primary DNS' (202.96.134.133), and 'Secondary DNS' (202.96.128.68). An 'Apply' button is at the bottom. The '802.1X Settings' section remains the same as in the PPPoE page.

8 Configuration(3)

Network - DHCP Setting

Select DHCP as network connection type if your access network supports DHCP.

The screenshot shows the 'DHCP SERVICE' tab selected in the top navigation bar. The left sidebar contains a menu with options: BASIC, NETWORK, VOIP, PHONE, FUNCTION KEY, MAINTENANCE, SECURITY, and LOGOUT. The main content area is divided into three sections: 'WAN Status' showing IP address 192.168.1.36, subnet mask 255.255.255.0, gateway 192.168.1.1, MAC address 00:02:28:10:4f:c2, and timestamp 2012-4-5; 'WAN Settings' with 'Obtain DNS Server Automatically' set to 'Enabled', 'Static IP' as a radio button, 'DHCP' as a selected radio button, and 'PPPoE' as a radio button; and '802.1X Settings' with 'User' as 'admin', 'Password' as '*****', and 'Enable 802.1X' as an unchecked checkbox. Each section has an 'Apply' button.

SIP Settings

Select SIP settings from the main menu. The follow fields such as Server Address, Server Port, Authentication User, Authentication Password and SIP User are required. Then check Enable Registration and click Apply to register your phone to the SIP server.

The screenshot shows the 'SIP' tab selected in the top navigation bar. The left sidebar is the same as in the previous screenshot. The main content area has a 'SIP Line' dropdown set to 'SIP 1'. Below it is the 'Basic Settings >>' section with fields for Status (Registered), Server Address (192.168.1.2), Server Port (5060), Authentication User (4210), Authentication Password (*****), SIP User (4210), Display Name, and Enable Registration (checked). To the right are fields for Domain Realm, Proxy Server Address, Proxy Server Port, Proxy User, Proxy Password, Backup Server Address, Backup Server Port, and Server Name. Below this are sections for 'Codec Settings >>', 'Advanced SIP Settings >>', and 'SIP Global Settings >>'. An 'Apply' button is located at the bottom right of the 'Advanced SIP Settings' section.

Server Address
Server Port
Authentication User
Authentication Password
SIP user

SIP server address
SIP server port number
Username for logging into the SIP server
Password for logging into the SIP server
SIP phone number



Make a Phone Call

IP Address:

1. Lift the handset or press the speaker button or headset button to enter the dialer interface.
2. Dial IP address.

For example: Input #192.168.0.1# in the dialer interface, you will call the device whose IP address is 192.168.0.1.

SIP Number:

Note: You have to register with SIP server to use SIP number.

1. Lift the handset or press the speaker button or headset button to enter the dialer interface.
2. Dial SIP number.

For example: Input 1866

3. Press "#" button or wait until the timer expires.

