

# SIEMENS



## Gigaset S68H

Issued by  
Gigaset Communications GmbH  
Schlavenhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a trademark licensee of Siemens AG

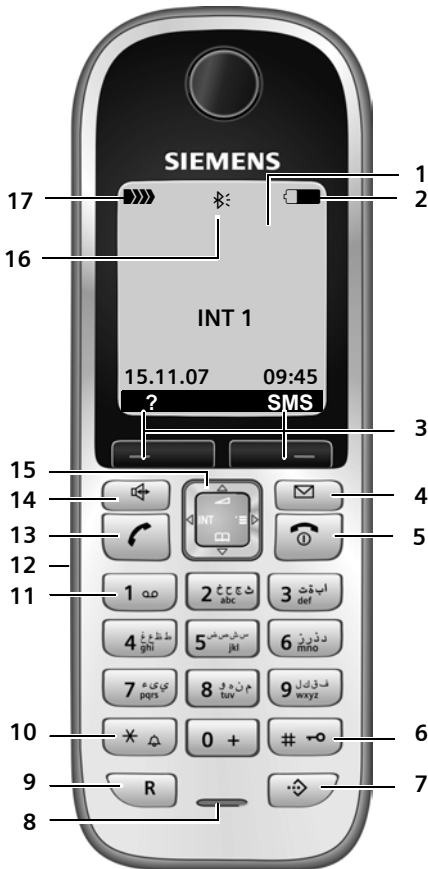
© Gigaset Communications GmbH 2008  
All rights reserved.  
Subject to availability. Rights of modifications reserved.

[www.gigaset.com](http://www.gigaset.com)

# Gigaset

VoIPon [www.voipon.co.uk](http://www.voipon.co.uk) [sales@voipon.co.uk](mailto:sales@voipon.co.uk) Tel: +44 (0)1245 808195 Fax: +44 (0)1245 808299

# The handset at a glance



- 1 **Display** (screen) in idle status
- 2 **Charge status of the batteries**  
 [Battery icon] (flat to full)  
 [Battery icon] flashes: batteries almost flat  
 [Battery icon] flashes: batteries charging
- 3 **Display keys** (page 9)
- 4 **Message key**  
 Access to calls and message lists;  
 Flashes: new message or new call
- 5 **End call key, On/Off key**  
 End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**  
 Keypad lock on/off (press and hold in idle status);  
 Toggle between upper/lower case and digits (press and hold)
- 7 **Call-by-call list key**  
 Open call-by-call list
- 8 **Microphone**
- 9 **Recall key**  
 - Confer (flash)  
 - Insert a dialling pause (press and hold)
- 10 **Star key**  
 Ringer tones on/off (press and hold);  
 With an open connection: switch between dial pulsing/touch tone dialling (press briefly)  
 Open special characters table
- 11 **Key 1**  
 Dial network mailbox (press and hold)
- 12 **Connection socket** for headset
- 13 **Talk key**  
 Answer a call, open last number redial list (press briefly), start dialling (press and hold);  
 When writing an SMS: send SMS
- 14 **Handsfree key**  
 Switch between earpiece and handsfree mode;  
 Lights up: handsfree activated;  
 Flashes: incoming call
- 15 **Control key** (page 9)
- 16 **Bluetooth** activated (page 25)
- 17 **Signal strength**  
 [Signal bars] (high to low)  
 [Signal bars] flashes: no reception

# Contents

<b>The handset at a glance</b>	<b>1</b>
<b>Safety precautions</b>	<b>3</b>
<b>Gigaset S68H – More than just a telephone</b>	<b>5</b>
<b>First steps</b>	<b>5</b>
Pack contents	5
Installing the base station and charging cradle	5
Setting up the handset for use	6
<b>Operating the handset</b>	<b>9</b>
Control key	9
Display keys	9
Reverting to idle status	10
Menu guidance	10
Correcting incorrect entries	11
<b>ECO DECT</b>	<b>11</b>
<b>Making calls</b>	<b>11</b>
Making an external call	11
Ending a call	11
Accepting a call	11
Handsfree talking	12
Muting	12
Making internal calls	12
<b>Using the directory and lists</b>	<b>12</b>
Directory/call-by-call list	12
Last number redial list	16
Opening lists with the message key	17
<b>Using a handset as a room monitor</b>	<b>17</b>
<b>Handset settings</b>	<b>18</b>
Shortcuts for functions and numbers	18
Changing the display language	19
Setting the display	19
Setting the screensaver	19
Setting the display backlight	20
Activating/deactivating auto answer	20
Changing the handsfree/ earpiece volume	20
Changing ringer tones	20
My stuff	22
Activating/deactivating advisory tones	23
Setting the alarm clock	23
Setting an appointment (calendar)	24
Displaying missed appointments and an- niversaries	25
Using Bluetooth devices	25
Setting your own area code	27
Restoring the handset to the factory settings	27
<b>Appendix</b>	<b>28</b>
Care	28
Contact with liquid	28
Questions and answers	28
Service (Customer Care)	29
Authorisation	30
Specifications	30
<b>Notes on the user guide</b>	<b>31</b>
Example of a menu input	31
Example of multiple line input	31
Writing and editing text	32
<b>Additional functions via the PC interface</b>	<b>33</b>
<b>Accessories</b>	<b>33</b>
<b>Index</b>	<b>34</b>

## Safety precautions

### Warning:

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle.



Only use the **recommended, rechargeable batteries** (page 30), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 28).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please take defective base stations out of operation or have them repaired by our Service, as they could interfere with other radio services.

## Safety precautions



All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.

If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

### **Please note:**

Not all of the functions described in this manual are available in all countries.

## Pack contents

- ◆ one Gigaset S68H handset,
- ◆ one charging cradle with mains adapter,
- ◆ two batteries,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide.

## Installing the base station and charging cradle

The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C.

- ◆ Never expose the handset to the following influences: heat sources, direct sunlight, other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

### Range and reception strength

- ◆ Outdoors: up to 300 m
- ◆ Indoors: up to 50 m

## Reception strength:

The display shows the quality of the radio contact between the base station and handset:

- ◆ Good to poor:
- ◆ No reception: flashes

## Setting up the handset for use



The display is protected by a plastic film.  
**Please remove the protective film!**

Instructions on how to connect the charging cradle and mount it on the wall (if required) can be found at the end of this user guide.

## Inserting the batteries

### Warning:

Use only the rechargeable batteries recommended by Gigaset Communications GmbH \* (page 30). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

\* Gigaset Communications GmbH is a trademark licensee of Siemens AG.

- ▶ Insert the batteries the right way round (see figure).  
The polarity is indicated in/on the battery compartment.



## Closing the battery cover

- ▶ First, align the notches on the side of the battery cover with the protrusions on the inside of the housing.

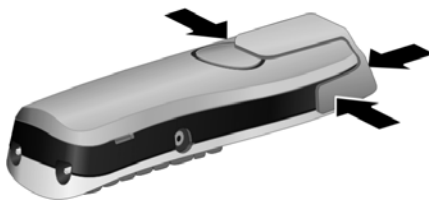
- ▶ Then press the cover until it clicks into place.



## Attaching the belt clip

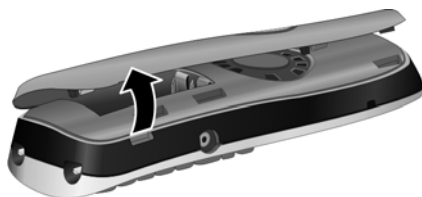
There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.



## Opening the battery cover

- ▶ If fitted, remove the belt clip.
- ▶ Place your fingertip in the cavity on the casing and pull the battery cover upwards.



## Registration

Before you can use your Gigaset S68H you must register it to a base station. It can be registered to a maximum of four base stations. The actual registration procedure will depend on the type of base station.

### Automatic registration of Gigaset S68H to Gigaset S680/S685

**Precondition:** The handset must not yet have been registered to a base station.

The handset is automatically registered to the Gigaset S680/S685 base station.

- ▶ Place the handset in the base station with its **display facing forward**.

Registration can take up to 5 minutes. During this process, **Regstr.Procedure** appears in the display and the name of the base station flashes, e.g. **Base 1**. When the handset has registered, its screen displays its internal number, e.g. **INT 2** for internal number 2. The handset is assigned the lowest available internal number (1–6). If all internal numbers 1–6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

#### Please note:

- Automatic registration is not possible when the base station to which you wish to register the handset is being used to make a call.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.

## Manual registration Gigaset S68H

If the handset does not activate automatically when the batteries are fitted, you must first charge the batteries.

You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number appears in the display, e.g. **INT 1**. If it does not appear, repeat the procedure.

### On the handset

 →  → **Handset** → **Register H/Set**



Select base station, e.g. **Base 1** and press **OK**.



Enter the system PIN of the base station (the default is 0000) and press **OK**. You will, for example, see **Base 1** flashing in the display.

### On the base station

Within 60 sec. press and **hold** the registration/paging key on the base station (approx. 3 sec.).

## Headset socket


You can connect various headset types (with 2.5 mm jack connector), including: HAMA Plantronics M40, MX100 and MX150.

A compatibility list of tested headsets can be found on the Internet at [www.plantronics.com/productfinder](http://www.plantronics.com/productfinder).



### Charging batteries

- ▶ Plug the mains adapter of the charging cradle into a mains power socket.
- ▶ Place the handset in the cradle with the display facing forward.

To charge the batteries, leave the handset in the charging cradle. If the handset is activated, the flashing battery icon  in the top right of the display indicates that the batteries are being charged. During handset operation, the battery icon indicates the charge status of the batteries (page 1).

### Initial charging and discharging of batteries

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the charging cradle **without interruption** for **nine** hours. Your handset need not be turned on for it to charge.
- ▶ Once the batteries are fully charged, remove the handset from the cradle and do not put it back again until the batteries are fully discharged.

#### Please note:

- The handset should only be placed in a base station or charging cradle that is designed for it.
- If the handset has turned itself off because the batteries are flat and if it is then placed in the charging cradle, it will turn itself on automatically.
- After the first battery charge **and** discharge, you may place your handset in the charging cradle after every call.

#### Please note:

- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.


- ◆ After a while the charge capacity of the batteries will decrease for technical reasons.

### Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm and the calendar can be used.

- ▶ If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field with:

 

 
 
 →  → Date/Time

- ▶ Change multiple line input:

Date:

Enter the day, month and year in 8-digit format.

Time:

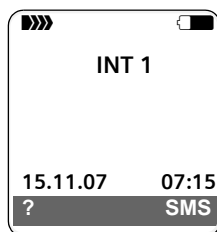
Enter hours and minutes as 4 digits (e.g.     for 07:15 a.m.

**Save**

Press the display key

### Display in idle status

If the phone is registered and the time has been set, the idle display is as follows, depending on the base station (example):



#### Your phone is now ready for use.

If you have any queries about using your phone, please read the tips on troubleshooting ("Questions and Answers", page 28) or contact our customer service department (Customer Care, page 29).

# Operating the handset

## Activating/deactivating the handset



In idle status, press and **hold** the end call key (confirmation tone).

## Activating/deactivating the keypad lock



Press and **hold** the hash key.

You will hear the confirmation tone. The icon appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.

## Control key



In the description below, the side of the control key (up, down, right, left) which you have to press in the different operating situations is marked in black, e.g. for "press right on the control key".

The control key has a number of different functions:

### When the handset is in idle status



Open the directory.



Open the main menu.



Open the list of handsets.



Call up the menu for setting the handset's call volume (page 20), ringer tones (page 20) and advisory tones (page 23).

### In the main menu and in input fields

You can use the control key to move the cursor up , down , right or left .

### In lists and submenus



Scroll up/down line by line.



Open the submenu or confirm the selection.



Go back one menu level or cancel.

### During an external call



Open the directory.



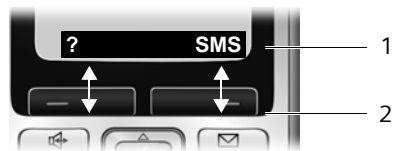
Initiate internal consultation call and mute.



Change the earpiece volume or handsfree volume.

## Display keys

The function of the display keys changes depending on the particular operating situation. Example:



1 Current display key functions are shown in the bottom display line.

2 Display keys

The most important display icons are:



Left display key, as long as it has not been assigned a function (page 18).



Open the main menu.



Open a context-dependent menu.

 


 


Delete key: deletes one character at a time from right to left.




Go back one menu level or cancel operation.

## Operating the handset

	Fetch e-mail address from the directory.
	Copy number into directory.
	On base stations with integrated answer machines: divert external call to answer machine.
	Open the last number redial list.

## Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- Press and **hold** the end call key .

Or:

- Do not press any key: after 2 minutes the display will **automatically** revert to idle status.


Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 1.

## Menu guidance


Your telephone's functions are accessed using a menu that has a number of levels.

### Main menu (first menu level)

- Press  with the handset in idle status to open the main menu.

The main menu functions are shown in the display with colour icons and names.

To access a function, i.e. to open the corresponding submenu (next menu level):


- Navigate to the function using the control key . The name of the function is displayed in the display header. Press the **OK** display key.

## Submenus

The functions in the submenus are displayed as lists.

To access a function:

- Scroll to the function with the control key  and press **OK**.

**Briefly** press the end call key  once to return to the previous menu level / cancel the operation.

## Illustration in the user guide


The operating steps are shown in abbreviated form.



### Example


The illustration:

 →  → Date/Time

 
 
 
means:

 Press the key to display the main menu.

 Use the control key  to scroll through submenu **Settings** and press **OK**.

**Date/Time** Scroll to the function with the control key  and press **OK**.

### Other types of illustrations:

 /  /  etc.

Press the matching key on the handset.




Enter digits or letters.

**You will find detailed examples of menu entries and multiple line input in the appendix to this user guide, page 31.**

## Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press  to delete the character to the left of the cursor
- ◆ insert characters to the left of the cursor
- ◆ overwrite the character (flashing) when entering the time and date etc.

## ECO DECT

ECO DECT reduces power consumption by using an energy efficient power supply .

Your handset also reduces the radio range depending on the distance to the base station.

## Making calls

### Making an external call


External calls are calls using the public telephone network.




Enter the number and press the talk key.

Or:



Press and **hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

#### Please note:

Dialling using the directory, call-by-call list (page 1, page 12) or last number redial list (page 16) saves time re-entering numbers and network provider access codes ("call-by-call numbers").

### Continuing a call on a Bluetooth headset

**Precondition:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (see page 25).

Press the talk key on the Bluetooth headset; it may take up to 5 seconds to establish a connection to the handset.


For further details on your headset, see the user guide issued with it.

## Ending a call

 



Press the end call key.

## Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 20), the handset will take a call automatically when you lift it out of the cradle.

If the ringer tone is intrusive, press the **Silence** display key. You can take the call as long as it is displayed on the screen.

### Answering a call on a Bluetooth headset

**Precondition:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (see page 25).

**Only press the talk key on the headset when the headset itself rings** (this may take up to 5 seconds).

For further details on your headset, see the user guide issued with it.

## Handsfree talking

---

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you, to allow others to participate in the call.

## Activating/deactivating handsfree mode

---

### Activating while dialling



Enter the number and press the handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

 

### Switching between earpiece and handsfree mode



Press the handsfree key.

Activate/deactivate handsfree during a call.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base station. If the handsfree key  does not light up, press the key again.

For how to adjust the handsfree volume see page 20.

## Muting

---

You can deactivate the microphone in your handset during an external call. The other party hears hold music.



Press the control key on the left to mute the handset.



Press the display key to reactivate the microphone.

## Making internal calls

---

Internal calls to other handsets registered on the same base station are free.

### Calling a specific handset



Initiate internal call.



Enter the number of the handset.

Or:



Initiate internal call.



Select handset.



Press the talk key.

### Calling all handsets ("group call")



Initiate internal call.



Press the star key. All handsets are called.

### Ending a call



Press the end call key.

## Using the directory and lists

---

You can save a total of 250 entries in the directory and call-by-call list.

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 14).

## Directory/call-by-call list

---


### Please note:

For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

### Directory

---

In the **directory** you can save

- ◆ Up to three numbers and associated first names and surnames,
  - ◆ VIP designation and VIP ringer tone (optional),
  - ◆ E-mail address (optional),
  - ◆ CLIP pictures (optional),
  - ◆ Anniversaries with reminder.
- ▶ With the handset in idle status, open the directory by pressing the  key.

## Length of the entries (directory)

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 60 characters

## Call-by-call list

The **call-by-call list** is used to store the access codes for network providers ("Call-by-call numbers").

- Open the call-by-call list in idle status by pressing the  key.

## Length of entries

Number: max. 32 digits

Name: max. 16 characters

## Saving a number in the directory

 → New Entry

- Change multiple line input:

First Name / Surname:

Enter a name in at least one of the fields.

Phone (Home) / Phone (Office) / Phone (Mobile)

Enter a number in at least one of the fields.

E-mail

Enter e-mail address.

Annivers.:

Select On or Off.

With setting On:

Enter Anniversary (Date) and Annivers. (Time) (page 15) and select reminder type: Annivers. (Signal).

Caller Picture

If required, select a picture to be displayed when the caller calls (page 22).  
Precondition: Calling Line Identification (CLIP).

### Please note:

Please visit our website at [www.gigaset.com/customercare](http://www.gigaset.com/customercare) to find out if your handset supports this feature.

- Save changes: (page 32).

## Saving a number in the call-by-call list

 → New Entry

- Change multiple line input:

Name:

Enter name.

Number:

Enter number.

## Order of directory/call-by-call list entries



Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

## Selecting entries in the directory and call-by-call list




 
 /  Open the directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name (in the directory: first character of the surname or of the first name if **only** the first name has been entered), or scroll to the entry using .

## Dialling with the directory/call-by-call list

---

-  /  →  (select entry)  
 Press the talk key. The number is dialled.

## Managing entries in the directory/call-by-call lists

---

-  /  →  (select entry)

### Viewing entries

- View** Press the display key.  
The entry is displayed.  
Back with **OK**.


### Editing entries

- View** **Edit** Press display keys one after the other.



- Carry out changes and save.

### Using other functions

-  /  →  (select entry)  
→ **Options** (open menu)

The following functions can be selected with :

#### Display Number

To edit or add to a saved number, or to save it as a new entry, press   after the number is displayed.

#### Edit Entry

Edit selected entry.

#### Delete Entry

Delete selected entry.

#### VIP Entry (directory only)

Mark a directory entry as a **VIP** (Very Important Person) and assign a specific ringer tone to it. You can then recognise important calls from the ringer tone.

**Precondition:** Calling Line Identification.

#### Copy Entry

Send a single entry to a handset (page 14).

#### Delete List

Delete **all** entries in the directory/call-by-call list.

#### Copy List

Send complete list to a handset (page 14).

#### Available Memory

Display the available entries in the directory and call-by-call list (page 12).

## Using quick dial keys

---




- Press and **hold** the required quick dial key (page 18).


## Sending the directory/call-by-call list to another handset

---

### Preconditions:

- ◆ The sending and receiving handsets must both be registered on the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

-  /  →  (select entry)  
→ **Options** (open menu) → Copy Entry / Copy List → to Internal

-  Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the Copy next entry? prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

### Please note:

You can also send the complete **directory** via data transfer, without opening the directory:


-  →  → Data Transfer → Directory

### Please note:


- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

## Transferring the directory as a vCard with Bluetooth

In Bluetooth mode (see page 25) you can transfer directory entries in vCard format, e.g. to exchange entries with your mobile.

 →  (select entry) → **Options**  
(Open menu) → **Copy Entry / Copy List**  
→ **vCard via Bluetooth**


The list of "Known Devices" (see page 26) is displayed.

 Select device and press **OK**.

## Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (see page 26) sends a vCard to your handset, this occurs automatically and you are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:

 Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

## Copying a displayed number to the directory

You can copy numbers displayed in a list, e.g. the call history or the last number redial list, in an SMS (depending on the base station) or during a call to the directory.

If you have CNIP, the first 16 characters of the transmitted name are copied to the Name line.

A number is displayed:




**Options** → **Copy to Directory**


► Complete the entry, see page 13.

While the number is being transferred from the answer machine list (depending on the base station), the message playback is interrupted.

## Copying a number or e-mail address from the directory

In many operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.



► Depending on the operating situation, open the directory with  or  or  **Directory**.

 Select an entry (page 13).


## Saving an anniversary in the directory

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (delivery status: Annivers.: Off).

Anniversaries are automatically recorded in the calendar (page 24).

 →  (select entry; page 13)

**View Edit** Press display keys one after the other.

 Scroll to the Annivers.: line.

 Select On.

► Change multiple line input:

**Anniversary (Date)**

Enter day/month/year in 8-digit format.

**Annivers. (Time)**

Enter the hour/minute for the reminder call in 4-digit format.


**Annivers. (Signal)**

Select the type of signal for the reminder.


► Save changes: (page 32).




### Deactivating anniversaries

 →  (select entry; page 13)

**View** **Edit** Press the display keys one after the other.

 Scroll to the **Annivers.:** line.

 Select Off.

**Save** Press the display key.

### Reminder call on an anniversary

A reminder call is signalled on the handset using the selected ringer tone.

You now have the following options:

**SMS** Write an SMS

**OFF** Press the display key to acknowledge and end the reminder call.

### Viewing missed anniversaries


In idle status, you are reminded of an elapsed and unacknowledged anniversary by the **one-off** display of **Appoint.**

► View appointment:

**Appoint.** Press the display key.

You now have the following options:

**SMS** Write an SMS (depending on base station).

 
**Delete** Delete reminder.  
After deleting, press the display key  or **Go Back:**  
Back in idle status, **Appoint.** is no longer displayed.

You can also view missed anniversaries afterwards (see page 25).


## Last number redial list

The last number redial list contains the 20 numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory or in the call-by-call list, the corresponding name will be displayed.

## Manual last number redial

 
 Press the key **briefly**.

 Select entry.

 Press the talk key again.  
The number is dialled.


When a name is displayed, you can display the corresponding phone number by pressing the **View** display key.

## Managing entries in the last number redial list

 Press the key **briefly**.

 Select entry.

**Options** Open menu.


The following functions can be selected with :

### Copy to Directory

Copy an entry to the directory (page 12).

### Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated.


- Called party answers: press the Talk key . The function is ended.
- Called party does not answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or after ten unsuccessful attempts.


**Display Number** (as in the directory, page 14)

**Delete Entry** (as in the directory, page 14)

**Delete List** (as in the directory, page 14)

## Opening lists with the message key

An advisory tone sounds as soon as a **new message** arrives in a list. The message key  flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message.

If you press the message key , you access the lists that contain new messages.

## Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). While the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringer tone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.



If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the room monitor mode remains activated.

### Caution!

- You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- When the function is switched on the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answer machine.

## Activating the room monitor and entering the number to be called


 →  → Room Monitor


► Change multiple line input:

Room M.:

Select On to activate.

Call to:

**External number:** Select the number from the directory (press display key ) or enter it directly. Only **the last 4 digits** are displayed.

**Internal number:** **Options** → INT → **OK** →  (select handset or Call All if all registered handsets are to be called) → **OK**.

Level:


Set noise level sensitivity (Low or High).

► Press **Save** to save the settings.

### Changing the set destination number

---

 →  → Room Monitor

 Scroll to the Call to: line.

 or **Delete**

Delete existing number.

- ▶ Enter and save number as described in "Activating the room monitor and entering the number to be called" (page 17).

### Deactivating the room monitor remotely

---

**Preconditions:** The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys  .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ringer tone) on the handset will remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save**.

 
 

## Handset settings

---

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

### Shortcuts for functions and numbers

---

You can assign the left display key and each of the digit keys  and  to  a number or a function. The right display key has a function pre-selected by default. You can change the function assigned.

The number is then dialled or the function started by simply pressing a key.

### Assigning a digit key/left display key

---

**Precondition:** The digit key or the left display key has not yet been assigned a number or a function.

- ▶ Press the  display key or press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

#### Quick Dial / Call-by-Call

Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

- ▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

#### Room Monitor

Assign key to the menu for setting and activating the room monitor.

#### Alarm Clock

Assign key to the menu for setting and activating the alarm clock (see page 23).

#### Calendar

Open calendar/enter new appointment.

#### Bluetooth

Assign the Bluetooth menu to a key.

#### More Features...

Depending on your base station, further key assignments are also possible.

If the left display key has been assigned a shortcut, the selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line via the display key.

## Starting the function, dialling the number

If the handset is in idle status, press and **hold** the digit key or press the display key **briefly**.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

## Changing key assignments

### Display key

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 18).

### Digit key

- ▶ Press the digit key **briefly**.

 
**Change** Press the display key. The list of possible key assignments is displayed.


- ▶ Proceed as is described when first assigning the key with a shortcut (page 18).

## Changing the display language

You can view the display texts in different languages.

 

 
 →  → Handset → Language

The current language is indicated by .


 Select a language and press **OK**.

 Press and **hold** (idle status).

If you accidentally choose a language you do not understand:



   

Press keys in sequence.

 Select the correct language and press **OK**.

## Setting the display

 
You have a choice of four colour schemes and several different contrasts.

 →  → Display

Colour Scheme

Select and press **OK**.



Select a colour scheme and press **OK** ( = current colour).



Press **briefly**.

Contrast

Select and press **OK**.



Select contrast.

**Save**

Press the display key.




Press and **hold** (idle status).

## Setting the screensaver

You can set a picture from the Resource Dir. (page 22) to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the Screen Saver menu option is marked with .

 →  → Display → Screen Saver

The current setting is displayed.

- ▶ Change multiple line input:


Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).





Selection:

If required, change the screensaver (see below).

- ▶ Save changes: (page 32).

If the screensaver conceals the display, **briefly** press  to show the idle display with time and date.

## Changing the screensaver

-  →  → Display → Screen Saver
-  Scroll to the Selection line.
- View** Press the display key.  
The active screensaver is displayed.
-  Select screensaver and press **Change**.
- Save changes: (page 32).

## Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If the base station is turned on, the display is permanently dimmed.

-  →  → Display → Backlight

The current setting is displayed.

- Change multiple line input:

In Charger


Select On or Off.

Without Charger

 
Select On or Off.



### Please note:

With the On setting, the standby time of the handset can be significantly reduced.

 
- Save** Press the display key.
-  Press and **hold** (idle status).

## Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .

-  →  → Handset

Auto Answer





Select and press **OK** ( = on).

-  Press and **hold** (idle status).



## Changing the handsfree/earpiece volume

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels.


In idle status:

-  → **Handset Volume**
-  Set the earpiece volume.
-  Scroll to the **Handsfree Volume** line.
-  Set the handsfree volume.
- Save** Press display key if necessary to save the setting.

Setting the volume during a call:

-  Press the control key.
-  Set the volume.

The setting will automatically be saved after approx. 3 seconds or press the display key **Save**.

If  is assigned to another function, e.g. toggling:

- Options** Open menu.
- Volume** Select and press **OK**.


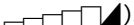
Configure setting (see above).

### Please note:

You can also set the call volume, ringer tones and advisory tones using the menu.

## Changing ringer tones

### ◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "crescendo" ring (6; volume increases with each ring = .

### ◆ Ringer tones:

You can select various ringer tones, melodies or any sound from My stuff (page 22).






You can set different ringer tones for the following functions:


- ◆ Ext. Calls: for external calls
- ◆ Internal Calls: for internal calls
- ◆ Appointments: for set appointments (page 24)
- ◆ All: the same ringer tone for all functions

## Settings for individual functions

Set the volume and melody depending on the type of signalling required.



In idle status:

-  → Ringer Settings
-  Select setting, e.g. Ext. Calls and press **OK**.
-  Set volume (1–6).
-  Scroll to the next line.
-  Select melody.
- Save** Press the display key to save the setting.

In idle status, you can also open the menu Ringer Settings by pressing  briefly.

## Same ringer tone for all functions

In idle status:

-  → Ringer Settings → All
- ▶ Set volume and ringer tone (see "Settings for individual functions").
- Save** Press the display key to confirm the prompt.
-  Press and **hold** (idle status).

 

### Please note:

You can also set the call volume, ringer tones and advisory tones using the menu.

 
## Activating/deactivating the ringer tone

You can deactivate the ringer tone on your handset before you answer a call or when the handset is in idle status; the ringer tone can be deactivated permanently or just for the current call. The ringer tone cannot be re-activated while an external call is in progress.

### Deactivating the ringer tone permanently

-  Press and **hold** the star key. The  icon appears in the display.

### Re-activating the ringer tone

 
-  Press and **hold** the star key.


### Deactivating the ringer tone for the current call

- Silence** Press the display key.

## Activating/deactivating the alert tone



In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringer tone.

-  Press and **hold** the star key and **within 3 seconds**:

- Beep** Press the display key. A call will now be signalled by **one** short alert tone. You will now see  in the display.


## My stuff

My stuff on the handset manages sounds, which you can use as ringer tones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling line identification (CLIP). My stuff can manage the following media types:



Icon	Sound	Format
	Ringer tones	Standard
	Picture (CLIP picture, screen-saver)	BMP (128 x 128 or 128 x 64 pixels)



The icon is displayed in front of the name in My stuff. Various mono- and polyphonic sounds and pictures are preconfigured on your handset.


You can listen to the available sounds and view the pictures.


You can download pictures from a PC (see page 33). If there is not enough memory available, you must first delete one or more pictures. The pre-configured pictures are labelled with . You cannot rename or delete them.

## Playing back sounds/viewing CLIP pictures

 →  → Screensavers / Caller Pictures / Sounds (select entry)


**Play / View**  Press the display key. Sounds are played back or pictures are displayed. Press the  key to switch between entries.

**End /**  Press the display key. Playback of the sound or the display of the picture ends.

While you are playing back sounds, you can also interrupt playback with the  key.




Press and **hold** (idle status).


If you have saved a picture in an invalid data format, you will see an error message after selecting the entry. Cancel the operation with . Delete the picture with **Delete**.

## Sounds: Setting the volume

During playback:

**Volume**  Press the display key.

 
 Set volume.

**Save**  Press the display key.

## Renaming/deleting a picture

You have selected an entry.

**Options**  Open menu.

If a picture cannot be deleted (), these options are not available. Depending on the situation, you can select the following functions:

**Delete Entry**

The selected entry is deleted.

**Delete List**



All entries in the list that can be deleted are deleted.


**Rename**

Change the name (max. 16 characters) and press **Save**. The entry is saved with the new name.

## Checking memory

You can check how much memory is available for screensavers and CLIP pictures.

 →  → Capacity

 Back: press the display key.

## Activating/deactivating advisory tones

Your handset uses "advisory tones" to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key click:** Every key press is confirmed.
- ◆ **Acknowledge tones:**
  - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS (depending on the base station) or a new entry arrives in the call history
  - **Error tone** (descending tone sequence): when you make an incorrect entry
  - **Menu end tone:** when scrolling at the end of a menu
- ◆ **Battery tone:** The batteries need to be charged.

In idle status:

 → **Advisory Tones**

- ▶ Change multiple line input:

**Key Tones:**

Select On or Off.

**Confirm.:**

Select On or Off.

**Battery:**

Select On, Off or In Call. The battery warning tone is only activated/deactivated and only sounds during a call.

- ▶ Save changes: (page 32).

You cannot deactivate the confirmation tone for placing the handset in the base station.

### Please note:

You can also set the call volume, ringer tones and advisory tones using the menu.

## Setting the alarm clock

**Precondition:** The date and time have already been set (page 8).

### Activating/deactivating the alarm clock and setting the wake-up time



- ▶ Change multiple line input:

**Activation:**

Select On or Off.

**Time:**

Enter the wake-up time in 4-digit format.

**Occurance:**

Select Daily or Monday-Friday.


**Volume:**


Set the volume (1-6).

**Melody:**

Select melody.

- ▶ Save changes: (page 32).

You will see the  icon.

A wake-up call with selected ringer tone (page 20) is signalled on the handset. The wake-up call sounds for 60 seconds.  is shown in the display. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is signalled by a short tone.

### Deactivating the wake-up call/ repeating after a pause (snooze mode)

**Precondition:** A wake-up call is sounding.

**OFF**

Press the display key. The wake-up call is deactivated.

or

**Snooze**

Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.



## Setting an appointment (calendar)

---

You can have your handset remind you of up to 30 appointments (volume and melody, see page 20).

### Saving an appointment

---

**Precondition:** The date and time have already been set (page 8).



Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black.)

The list of saved appointments for the day is displayed. If you have already saved 30 appointments, you must first delete an existing appointment.

<New Entry>

Select and press **OK**.

► Change multiple line input:

Appoint.:

Select On or Off.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digit format.

Notes:

 
Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

**Save**

Press the display key.



Press and **hold** (idle status).

The appointment is marked with  in the appointments list. The list of appointments is sorted by date.

An appointment reminder is signalled with the selected ringer tone (page 20). The appointment reminder sounds for

60 seconds. The entered text, date and time are displayed.

During a call, the appointment reminder is signalled by a short tone.

### Managing appointments

---




Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black in the calendar.)



Select appointment for the day.

**Options**

Open menu  
Back with .

You have the following options:

**View Entry**

View selected appointment.

Open the **Options** menu for editing, deleting and activating/deactivating.

**Edit Entry**

Edit selected appointment.

**Delete Entry**

Delete selected appointment.

**Activate / Deactivate**

Activate/deactivate the selected appointment.

**Delete List**

Delete **all** appointments.

### Deactivating or accepting an appointment reminder

---

**Precondition:** An appointment reminder is sounding.

**OFF**

Press the display key to deactivate the appointment reminder.

Or:

**SMS**

Press the display key to answer the appointment reminder with an SMS (depending on base station).

## Displaying missed appointments and anniversaries

Missed appointments/anniversaries (page 15) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (page 16).

The most recent entry is at the head of the list.

If there is a new appointment/anniversary in the list, the display shows **Appoint.** Pressing the display key will also open the **Missed Alarms** list.

To open the list from the menu:



**Missed Alarms**

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

**Delete**

Delete appointment.

**SMS**

Write an SMS



Press and **hold** (idle status).

If 10 entries are already saved in the list, the next appointment reminder will delete the oldest entry.

## Using Bluetooth devices

Your Gigaset S68H handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset.

You can register 1 Bluetooth headset to the handset. You can also register up to 5 data devices (PC, PDA) to send and receive directory entries as vCards or exchange data with the computer (page 33).

In order to transfer phone numbers via Bluetooth connections, it is essential that area codes (international and local area codes) are saved on the phone (see page 27).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.

### Please note:

- You can only operate headsets on your handset that have the **headset profile**.
- It can take up to 5 seconds to create a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset and one is transferred to the headset, and when a number is dialled from the headset.

## Activating/deactivating Bluetooth mode



**Data Transfer**



**Bluetooth**



**Activation**

Press **OK** to activate or deactivate Bluetooth mode (✓ = activated).

In idle status, the icon on the handset shows that Bluetooth mode is activated:





### Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

#### Please note:

- If you register a headset, any headset that is already registered will be overwritten.
- If you would like to use a headset with your handset that is already registered to another device (e.g. to a mobile phone), please **deactivate** this connection before you start the registration process to the Gigaset.


 →  → Data Transfer → Bluetooth  
→ Search Headset / Search Data Device

The search can take up to 30 seconds.

Once the device has been found, its name will be shown on the display.

**Options** Press the display key.

Trust Device Select and press **OK**.

 Enter the PIN for the Bluetooth device you want to **register** and press **OK**.

The device is saved in the list of known devices.

### Cancelling/repeating current search

To cancel search:

**Cancel** Press the display key.

Repeat search if necessary:



**Options** Select and press **OK**.

Repeat Search


 
Select and press **OK**.

### Editing the list of known (trusted) devices

#### Open list

 →  → Data Transfer → Bluetooth  
→ Known Devices

A corresponding icon appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

#### Viewing entries

Open list →  (select entry)

**Options** Press the display key.


**View Entry** Select and press **OK**.  
Device name and address are displayed.  
Back with **OK**.

### Deregistering a Bluetooth device

Open list →  (select entry)

**Options** Press the display key.

**Delete Entry** Select and press **OK**.

 Back: press and **hold** key.

#### Please note:


If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device".

### Changing the name of a Bluetooth device


Open list →  (select entry)

**Options** Press the display key.

**Rename** Select and press **OK**.

 Change name

 
**Save** Press the display key

 Back: Press and **hold** key.

## Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

### ◆ Reject

 Press the display key.

### ◆ Accept



Enter the PIN for the Bluetooth device you want to **accept** and press **OK**.



If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.


Once the PIN has been confirmed, save to the list of known devices:

- **Yes** Press the display key.
- **No** Press the display key: use temporarily.

## Changing the Bluetooth name of the handset


You can change the handset name used to identify it on the display of another Bluetooth device.

 →  → Data Transfer → Bluetooth → Own Device Name

 Press the display key



Change the name.

 Press the display key



Back: Press and **hold** key.

## Setting your own area code

In order to transfer phone numbers, it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already pre-set.

 →  → Handset → Area Codes

Check that the (pre)set area code is correct.

### ► Change multiple line input:



Select/change input field.



Navigate in the input field.



If necessary, delete number: press the display key.



Enter number.



Press the display key.

### Example:

Area Codes	
International code:	
0000	- 49
Local area code:	
0	- [ 89 ]
<C	Save

## Restoring the handset to the factory settings

You can reset any individual settings and changes that you have made. Entries in the directory, the call-by-call list, the call history, the SMS lists (depending on base station) and the handset's registration to the base station as well as the content of My stuff are retained.

 →  → Handset → Reset Handset



Press the display key.



Press and **hold** (idle status).

# Appendix

## Care

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

## Contact with liquid

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.


## Questions and answers

If you have any questions about using your handset, visit us at any time at [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care). The table below contains a list of common problems and possible solutions.

### Registration or connection problems with a Bluetooth headset.

 
- ▶ Reset the Bluetooth headset (see the user guide for your headset).
- ▶ Delete registration data from the handset when deregistering the device (see page 26).
- ▶ Repeat the registration process (see page 26).

### The display is blank.

1. The handset is not turned on.
  - ▶ Press **and hold** the end call key .
2. The battery is flat.
  - ▶ Charge or replace the batteries (page 6).

### The keys of a handset do not respond when pressed.

The keypad lock is activated.

- ▶ Press and **hold** the hash key  (page 9).

### "Base station x" flashes on the display.

1. The handset is outside the range of the base station.
  - ▶ Move the handset closer to the base station.
2. The handset has been deregistered.
  - ▶ Register the handset (page 7).
3. The base station is not turned on.
  - ▶ Check the base station mains adapter.

### Base Search flashes in the display.

The handset is set to **Best Base** and no base station is turned on or within range.

- ▶ Move the handset closer to the base station.
- ▶ Check the base station mains adapter.

### Handset does not ring.

The ringer tone is deactivated.

- ▶ Activate the ringer tone (page 21).

### The other party cannot hear you.

You have pressed the  (INT) key. The handset is "muted".

- ▶ Switch on the microphone again (page 12).

### You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

- ▶ Repeat the operation.  
Watch the display and refer to the user guide if necessary.

## Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

[www.gigaset.com/customer-care](http://www.gigaset.com/customer-care)

This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section of this user guide in the appendix.

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi . . . . .	97 12 62 23 800	Jordan . . . . .	00962 6 5625460/1/2
Argentina . . . . .	0800-888-9878	Kuwait . . . . .	00965-2464993
Australia . . . . .	1300 665 366	Latvia . . . . .	7 50 11 18
Austria .05 17 07 50 04 (0,065 Euro/Min.)		Lebanon . . . . .	00961-1236110
Bahrain . . . . .	97 31 73 11 173	Luxembourg . . . . .	40 66 61 56 40
Belgium . . . . .	0 78 15 66 79	Malaysia . . . . .	603 77124304
Bosnia Herzegovina . . . . .	033 276 649	Malta . . . . .	+353 21 4940 632
Brazil . . . . .		Mexico .01800 999 4442738 (01800 999 Gigaset)	
Grande Capitais e Regiões Metropolitanas: . . . . .	4003 3020	Netherlands . . . . .	0900-3333102 (0,25 Euro/min.)
. . . . .	R\$ 0,14 (US\$ 0,069)	New Zealand . . . . .	08 00 27 43 63
Demais localidades: . . . . .	0800 888 3020	Norway . . . . .	22 70 84 00
. . . . .	R\$ 0,20 (US\$ 0,098)	Oman . . . . .	96 82 47 09 281
Bulgaria . . . . .	02 873 94 88	Poland . . . . .	0 801 140 160
Canada . . . . .	866 247 8758	Portugal . . . . .	(351) 808 781 223
China . . . . .	0 21 400 670 6007 (RMB 0.11)	Romania . . . . .	+4.021.529.7114.
Croatia . . . . .	01 / 2456 555 (0,23 Kn)	Russia . . . . .	8 (495) 228 1312
Czech Republic . . . . .	233 032 727	Serbia . . . . .	0800 222 111
Denmark . . . . .	35 25 86 00	Singapore . . . . .	6735 9100
Dubai . . . . .	97 14 39 69 944	Slovak Republic . . . . .	02 59 68 22 66 (4,428 sk)
Egypt . . . . .	202 7623441	Slovenija . . . . .	0 14 74 63 36
Finland . . . . .	09 23 11 34 25	South Africa . . . . .	08 60 10 11 57
France . . . . .	01 56 38 42 00 (Appel national)	Spain . . . . .	902 103935
Germany . . . . .	01805 333 222	Sweden . . . . .	08 750 99 11
(0,14 Euro/Min. aus dem Festnetz der Deutschen Telekom.		Switzerland . . . . .	0848 212 000 (0,08 SFr./Min.)
Für Anrufe aus den Mobilfunknetzen können abweichende Preise gelten)		Taiwan . . . . .	02 266 24343
Greece . . . . .	801 1000 500 (0,026 Euro)	Thailand . . . . .	02 722 1118
Hong Kong . . . . .	2763 0203	Turkey . . . . .	0216 459 98 59
. . . . .	2389 7285	Ukraine . . . . .	+380-44-451-71-72
Hungary . . . . .	06 14 71 24 44 (27 Ft)	United Arab Emirates . . . . .	0 43 66 03 86
India . . . . .	Please refer to your	United Kingdom . . . . .	0 84 53 67 08 12
. . . . .	local warranty card	USA . . . . .	1-866 247-8758
Ireland . . . . .	18 50 77 72 77	. . . . .	(toll free)
Israel . . . . .	1 700 700 727		
Italy . . . . .	199.15.11.15		

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

## Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/CE.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

# CE 0682

**Bluetooth**  Qualified Design Identity

The Bluetooth QD ID for your Gigaset S68H is: B012741.

## Specifications

### Recommended batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 600–1200 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ Sanyo NiMH 800
- ◆ GP 850 mAh
- ◆ Yuasa Technologies AAA 800

The device is supplied with two recommended batteries.

## Handset operating times/charging times

The operating time of your Gigaset depends on the age of the batteries and the way they are used. (All times are maximum possible times and apply when the display backlight is switched off.)

	Capacity (mAh) approx.			
	600	800	1000	1200
Standby time (hours)	130	180	220	265
Talktime (hours)	7	10	12	14
Operating time for 1.5 hrs calling per day (hours)	70	90	115	135
Charging time, charging cradle (hours)	6	9	11	13
Charging time, base station (hours)	5	7	8	10

At the time of going to print, batteries up to 900 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:



[www.gigaset.com/customercare](http://www.gigaset.com/customercare)

 



## Notes on the user guide

This section explains the meaning of certain typographical conventions that are used in this user guide.

### Example of a menu input

The steps you need to perform are shown in abbreviated form in the user guide. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes.



 →  → Display

- ▶ With the handset in idle status, press on the **right** of the control key () to open the main menu.
- ▶ Use the control keys  and  to select the  icon.



Settings appears in the display header.


- ▶ Press the **OK** display key to confirm the Settings function.

The Settings submenu is displayed.

- ▶ Press on the bottom of control key  until the Display menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

Contrast      Select and press **OK**.

- ▶ Press on the bottom of control key  until the Contrast menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

      Select contrast and press the display key **Save**.

- ▶ Press on the right or left of the control key to set the contrast.
- ▶ Press the display key **Save** to confirm the selection.



Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

### Example of multiple line input

In many situations you can change settings or enter data in several lines of a display.

In this user guide icons are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.

You will see the following display (example):

**Date/Time**

---

**Date:**  
[15.11.2007]

**Time:**  
11:11


**Save**

Date:


Enter the day, month and year in 8-digit format.

The second line is marked with [ ] to show it is active.

- ▶ Enter the date using the digit keys.

Time:

Enter hours/minutes in 4-digit format.


- ▶ Press the  key.

The fourth line is marked with [ ] to show it is active.

- ▶ Enter the date using the digit keys.








 
- Save the changes.

- Pressing the display key **Save**.
  - Then press and **hold** the  key.
- The handset switches to idle status.

## Writing and editing text

The following rules apply when writing a text:

- ◆ Control the cursor with    .
- ◆ Characters are inserted on the left of the cursor.
- ◆ Press the star key  to show the table of special characters.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

You can call up the table of special characters when writing an SMS using the  key. Select the required character and insert it with **Insert**.

## Writing an SMS/name (without predictive text)

Press the relevant key several times to enter letters/characters.

### Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1 no			1							
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ô	õ	
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0 +	.	,	?	!	0					

- 1) Space
- 2) Line break

 
 
## Arabic

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x
1 no			1									
2	ا	ب	ج	خ	2	a	b	c				
3	د	هـ	و	ز	ا	ب	3	d	e	f		
4	ط	ظ	ع	غ	4	g	h	i				
5	س	ش	ص	ض	5	j	k	l				
6	د	ذ	ر	ز	6	m	n	o				
7	ي	ى	ء	ئ	7	p	q	r	s			
8	م	ن	هـ	و	ف	8	t	u	v			
9	ف	ق	ك	ل	9	w	x	y	z			
0 +	.	,	?	!	0							

- 1) Space
- 2) Line break

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

 

### Setting upper/lower case or digits

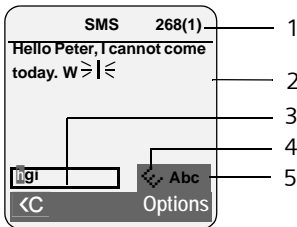
Press the hash key  **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key  **before** entering the letter.

You can see in the display whether upper case, lower case or digits is selected.

 
## Writing SMS (with predictive text)


EATONI predictive text helps you when you are writing SMS messages.

Each key between  and  is assigned several letters and characters. These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is shown in reversed highlights and is at the beginning of the selection line. It is copied into the text panel.



- 1 Remaining number of characters, in brackets: SMS part 1-n
- 2 SMS text
- 3 Selection line
- 4 EATONI is activated
- 5 Upper/lower case or digits

If this letter is the one you want, confirm it by pressing the next key. If it does not match the one you want, press the hash key  **briefly** until the letter you are looking for is reverse highlighted in the display line and then transferred to the text field.

 
If you press and **hold** the hash key  you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

## Activating/deactivating predictive text

**Precondition:** You are writing an SMS.

**Options** Press the display key.

**Predictive Text**

Select and press **OK** ( = on).



Press the end call key **briefly** to return to the text field.  
Enter the text.


## Additional functions via the PC interface

You can connect the handset to your computer using Bluetooth (page 25). The computer must be equipped with a suitable dongle.

Your handset can communicate with the computer using the "**Gigaset QuickSync**" program (free download at [www.gigaset.com/qigasetS680](http://www.gigaset.com/qigasetS680)).

You can

- ◆ synchronise your handset's directory with Outlook,
- ◆ download photos (.bmp) from the computer to the handset,
- ◆ download pictures (.bmp) as screen-saver from the computer to the handset.

During the transfer of data between handset and PC, you will see  on the display. During this time the keypad is disabled, and incoming calls will be ignored.

## Accessories

All accessories and batteries are available from your phone retailer.



Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

# Index

---

## A

Accessories . . . . .	33
Acknowledge tones . . . . .	23
Activating	
advisory tones . . . . .	23
appointment . . . . .	24
Bluetooth mode . . . . .	25
call acceptance . . . . .	20
handset . . . . .	9
keypad lock . . . . .	9
room monitor . . . . .	17
Advisory tones . . . . .	23
Alarm clock . . . . .	23
Alert tone . . . . .	21
Anniversary . . . . .	15
deactivating . . . . .	16
missed . . . . .	16, 25
saving in directory . . . . .	15
Appointment . . . . .	24
Appointment/anniversary	
display missed . . . . .	25
Appointments	
activating/deactivating . . . . .	24
deleting . . . . .	24
managing . . . . .	24
Assigning a key . . . . .	18
Assigning numerical keys . . . . .	18
Authorisation . . . . .	30
Automatic	
call acceptance . . . . .	11, 20
last number redial . . . . .	16

## B

Base station	
connecting and installing . . . . .	5
range . . . . .	5
Battery	
charging . . . . .	1
display . . . . .	1
fitting . . . . .	6
icon . . . . .	1
recommended batteries . . . . .	30
tone . . . . .	23
Beep, see Advisory tones	
Birthday, see Anniversary	
Bluetooth	
answering a call . . . . .	11

changing device name . . . . .	26, 27
deregistering devices . . . . .	26
list of known devices . . . . .	26
registering devices . . . . .	26
transferring directory (vCard) . . . . .	15

## C

Calendar . . . . .	24
Call	
accepting . . . . .	11
answering (Bluetooth) . . . . .	11
ending . . . . .	11
external . . . . .	11
internal . . . . .	12
Call acceptance . . . . .	20
Call duration . . . . .	11
Call-by-call . . . . .	12
numbers . . . . .	13
Call-by-call list	
key . . . . .	1
Calling, external . . . . .	11
Care of the telephone . . . . .	28
Changing	
destination number . . . . .	18
device name (Bluetooth) . . . . .	26, 27
display language . . . . .	19
earpiece volume . . . . .	20
handsfree volume . . . . .	20
ringer tone . . . . .	20
Charge status display . . . . .	1
CLIP picture . . . . .	13, 22
Confirmation tone . . . . .	23
Control key . . . . .	1, 9
Correcting incorrect entries . . . . .	11
Customer Care . . . . .	29

## D

Deactivating	
advisory tones . . . . .	23
appointment . . . . .	24
appointment reminder . . . . .	24
call acceptance . . . . .	20
handset . . . . .	9
keypad lock . . . . .	9
room monitor . . . . .	18
Delete key . . . . .	9
Deleting	
characters . . . . .	11
Deregistering devices (Bluetooth) . . . . .	26
Destination number (room monitor) . . . . .	17

- Dialling
  - call-by-call list . . . . . 14
  - directory . . . . . 14
  - quick dial . . . . . 18
  - with quick dial . . . . . 14
- Dialling pause
  - entering . . . . . 1
- Directory . . . . . 12
  - copying number from text . . . . . 15
  - managing entries . . . . . 14
  - opening . . . . . 9
  - order of entries . . . . . 13
  - saving anniversary . . . . . 15
  - saving entry . . . . . 13
  - sending entry/list to handset . . . . . 14
  - transferring a vCard (Bluetooth) . . . 15
  - using to enter numbers . . . . . 15
- Display
  - backlight . . . . . 20
  - changing display language . . . . . 19
  - contrast . . . . . 19
  - in idle status . . . . . 10
  - memory (directory/call-by-call) . . . 14
  - memory (My stuff) . . . . . 22
  - missed appointments/  
anniversaries . . . . . 25
  - screensaver . . . . . 19
  - setting . . . . . 19
  - wrong language . . . . . 19
- Display keys . . . . . 1, 9
  - assigning . . . . . 18
- I**
  - Earpiece mode . . . . . 12
  - Earpiece volume . . . . . 20
  - EATONI (predictive text) . . . . . 33
  - ECO DECT . . . . . 11
  - Eco mode . . . . . 11
  - E-mail address
    - copying from the directory . . . . . 15
  - End call key . . . . . 1, 11
  - Ending, call . . . . . 11
  - Ending, see deactivate
  - Entry
    - selecting (menu) . . . . . 31
    - selecting from directory . . . . . 13
  - Error tone . . . . . 23
  - Example
    - menu input . . . . . 31
    - multiple line input . . . . . 31
- G**
  - Group call . . . . . 12
- H**
  - Handset
    - activating/deactivating . . . . . 9
    - advisory tones . . . . . 23
    - contact with liquid . . . . . 28
    - display backlight . . . . . 20
    - display language . . . . . 19
    - earpiece volume . . . . . 20
    - handsfree volume . . . . . 20
    - idle status . . . . . 10
    - list . . . . . 9
    - muting . . . . . 12
    - registering . . . . . 7
    - restoring to factory settings . . . . . 27
    - screensaver . . . . . 19
    - setting . . . . . 18
    - setting up . . . . . 6
    - signal strength . . . . . 5
    - using room monitor . . . . . 17
  - Handset operating time
    - in room monitor mode . . . . . 17
  - Handsfree key . . . . . 1
  - Handsfree talking . . . . . 12
  - Handsfree volume . . . . . 20
  - Hash key . . . . . 1, 9
  - Headset socket . . . . . 7
  - Hearing aids . . . . . 3
  - Hold music . . . . . 12
- I**
  - Icon
    - alarm clock . . . . . 23
    - display . . . . . 9
    - for new messages . . . . . 17
    - keypad lock . . . . . 9
    - ringer tone . . . . . 21
  - Idle status (display) . . . . . 10
  - Idle status, returning to . . . . . 10
  - Incorrect input (correction) . . . . . 11
  - Installation, base station . . . . . 5
  - Internal
    - making calls . . . . . 12
  - Internal call . . . . . 12
- K**
  - Key 1 (fast access) . . . . . 1
  - Keypad lock . . . . . 9

## Index

### Keys

call-by-call list . . . . .	1
control key . . . . .	1, 9
delete key . . . . .	9
display keys . . . . .	1, 9
end call key . . . . .	1, 11
fast access . . . . .	1
handsfree key . . . . .	1
hash key . . . . .	1, 9
message key . . . . .	1
on/off key . . . . .	1
quick dial . . . . .	14
recall key . . . . .	1
star key . . . . .	1
talk key . . . . .	1, 11

### L

Language, display . . . . .	19
Last number redial . . . . .	16
Liquid . . . . .	28
List . . . . .	12
call-by-call list . . . . .	12
handsets . . . . .	9
known devices (Bluetooth) . . . . .	26

### Lock

activating/deactivating keypad protection . . . . .	9
---	---

### M

Mains adapter . . . . .	3
-------------------------	---

### Making calls

accepting a call . . . . .	11
external . . . . .	11
internal . . . . .	12

Manual last number redial . . . . .	16
-------------------------------------	----

Medical appliances . . . . .	3
------------------------------	---

### Memory

directory/call-by-call . . . . .	14
My stuff . . . . .	22

### Menu

end tone . . . . .	23
menu guidance . . . . .	10
menu input . . . . .	31
opening . . . . .	9

Message key . . . . .	1
-----------------------	---

opening lists . . . . .	17
-------------------------	----

Microphone . . . . .	1
----------------------	---

### Missed

anniversary . . . . .	25
appointment . . . . .	25

Multiple line input . . . . .	31
-------------------------------	----

Muting the handset . . . . .	12
------------------------------	----

My stuff . . . . .	22
--------------------	----

## N

Network provider (numbers list) . . . . .	13
---	----

### Number

as destination for room monitor . . . . .	17
copying from directory . . . . .	15
copying to directory . . . . .	15
entering with directory . . . . .	15
saving in the directory . . . . .	13

### Numbers list

network provider . . . . .	13
----------------------------	----

## O

On/Off key . . . . .	1
----------------------	---

Order in directory . . . . .	13
------------------------------	----

## P

Pack contents . . . . .	5
-------------------------	---

PC Interface . . . . .	33
------------------------	----

### Picture

deleting . . . . .	22
renaming . . . . .	22

Predictive text . . . . .	33
---------------------------	----

## Q

Questions and answers . . . . .	28
---------------------------------	----

Quick dial . . . . .	12, 13, 18
----------------------	------------

## R

Range . . . . .	5
-----------------	---

Recall key . . . . .	1
----------------------	---

Registering (handset) . . . . .	7
---------------------------------	---

Registering devices (Bluetooth) . . . . .	26
---	----

Reminder call . . . . .	16
-------------------------	----

### Ringer tone

changing . . . . .	20
setting melody . . . . .	21
setting volume . . . . .	20

Room monitor . . . . .	17
------------------------	----

## S

Screensaver . . . . .	19
-----------------------	----

Searching in directory . . . . .	13
----------------------------------	----

### Sending

directory entry to handset . . . . .	14
--------------------------------------	----

Sensitivity (room monitor) . . . . .	17
--------------------------------------	----

Service . . . . .	29
-------------------	----

Setting	
date . . . . .	8
melody . . . . .	21
screensaver . . . . .	19
time . . . . .	8
Setting up	
handset . . . . .	6
Signal strength . . . . .	5
Snooze mode . . . . .	23
Sound, see Ringer tone	
Specifications . . . . .	30
Star key . . . . .	1

## T

Talk key . . . . .	1, 11
Troubleshooting . . . . .	28

## V

VIP (directory entry) . . . . .	14
Volume	
earpiece . . . . .	20
earpiece volume . . . . .	20
handset handsfree volume . . . . .	20
loudspeaker . . . . .	20
ringer tone . . . . .	20
setting . . . . .	21

## W

Warning tone, see Advisory tones	
Writing, editing text . . . . .	32

