## **Phone Configuration**

#### **Configuration the phone**

#### **Language Settings**

The default language of the phone is English. It supports Chinese, Dutch, French, German, Japanese, Portuguese, Russian, Spanish.

Press Menu->Phone Settings->Language to enter the language list, choose the one you'd like to set on the phone.

#### **Configuring via Web Page**

Press OK button on the keypad of the phone to enter the Status page and find the IP address of the IP phone. Enter it (for example http://192.168.3.35) into the address bar of web browser. The default login name and password are **admin/admin**.

**Note**: Please locate your PC in the same network segment of the IP phone(192.168.3.X) to access the web configuration page. Please consult your network administrator or service provider for help.

**Network Settings:** Choose Network->Internet Port(WAN)

**DHCP:** By default the phone attempts to contact to a DHCP Server in your network in order to obtain its valid network settings, e.g. IP address, sub mask, gateway, DNS server, etc.

**Static IP Address:** If your phone cannot contact a DHCP Server for any reason, you need to enter the network settings manually via Static IP Address. Please contact your internet administrator for more details.

**PPPoE:** If you are using the xDSL Modem, you can connect your phone to the internet via PPPoE mode.Please contact your ISP for the **User Name** and **Password** for internet access.

**Note**: Using the wrong network parameters may result in inaccessibility of your phone and may also have an impact on your network performance! Please contact your network administrator!

**Account Setting:** Press Account-> Account 1

Register Status Icon in the LCD

the account is registered successfully.



Register failed.

Please contact your service provider for more account details.

Parameter:

Register Status: It shows the resister status of the phone.

Line Active: You can choose on/off to enable/disable the account respectively.

Display Name: It is showed as Caller ID when making a phone call.

User Name: It is provided by ISP for registration.

Register Name: It is authenticated ID for authentication, provided by ISP.

Password: It is provided by ISP for registration.
SIP Server and Port: Server for registration, provided by ISP.

# **Configuring via Keypad**


**Network Setting:** Press Menu->Settings->Advanced Setting->Network->WAN Port Option/ LAN Port Option to enter the internet relating configuration page.

**Account Setting:** Press Menu->Settings->Advanced Setting->Account->Enter to configure the account settings. You can refer to the above "Configuring via Web Page" for the parameter details.

VolPon www.voipon.co.uk sales@voipon.co.uk



# **Enterprise IP Phone SIP-T26P**

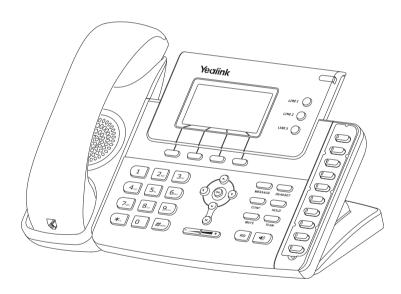



# **Quick Installation**

www.yealink.com

Tel: +44 (0)1245 808195 Fax: +44 (0)1245 808299


### **Packing List**

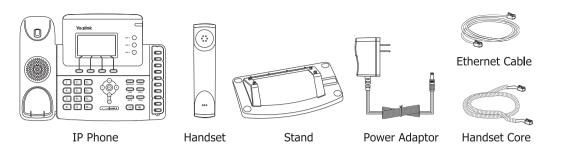

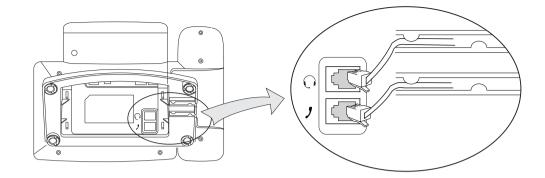


# **Assembling the Phone**

#### 1. Attach the Stand, as shown below:

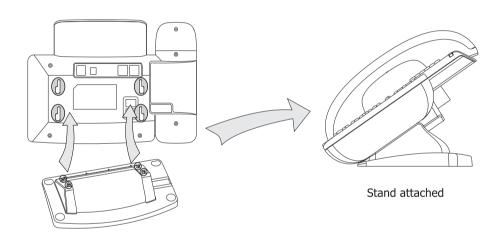


#### 2. Connect Handset and Headset, as shown below:

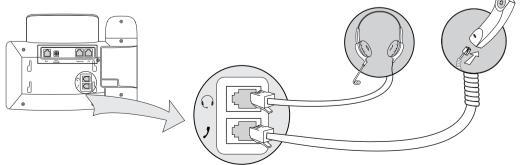

**Note**: Headset is not included, should be purchased separately.


#### 3. Connect Network and Power, shown as below:

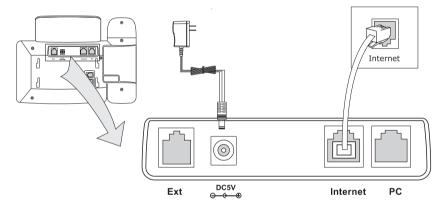

#### Note:

- 1. If inline power (PoE) is provided, do not install AC adapter.
- 2. The Internet Port can be also connected to Hub/Switch/IP PBX or other internet devices.

The phone can also share the network connection with other network devices such as PC. Connect the phone's PC Port and computer's Network Port together using an Ethernet cable, shown as below:

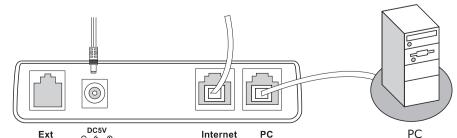

VolPon www.voipon.co.uk sales@voipon.co.uk Tel: +44 (0)1245 808195 Fax: +44 (0)1245 808299