


2. Open Phone1.cfg and fill in the necessary information (see below).

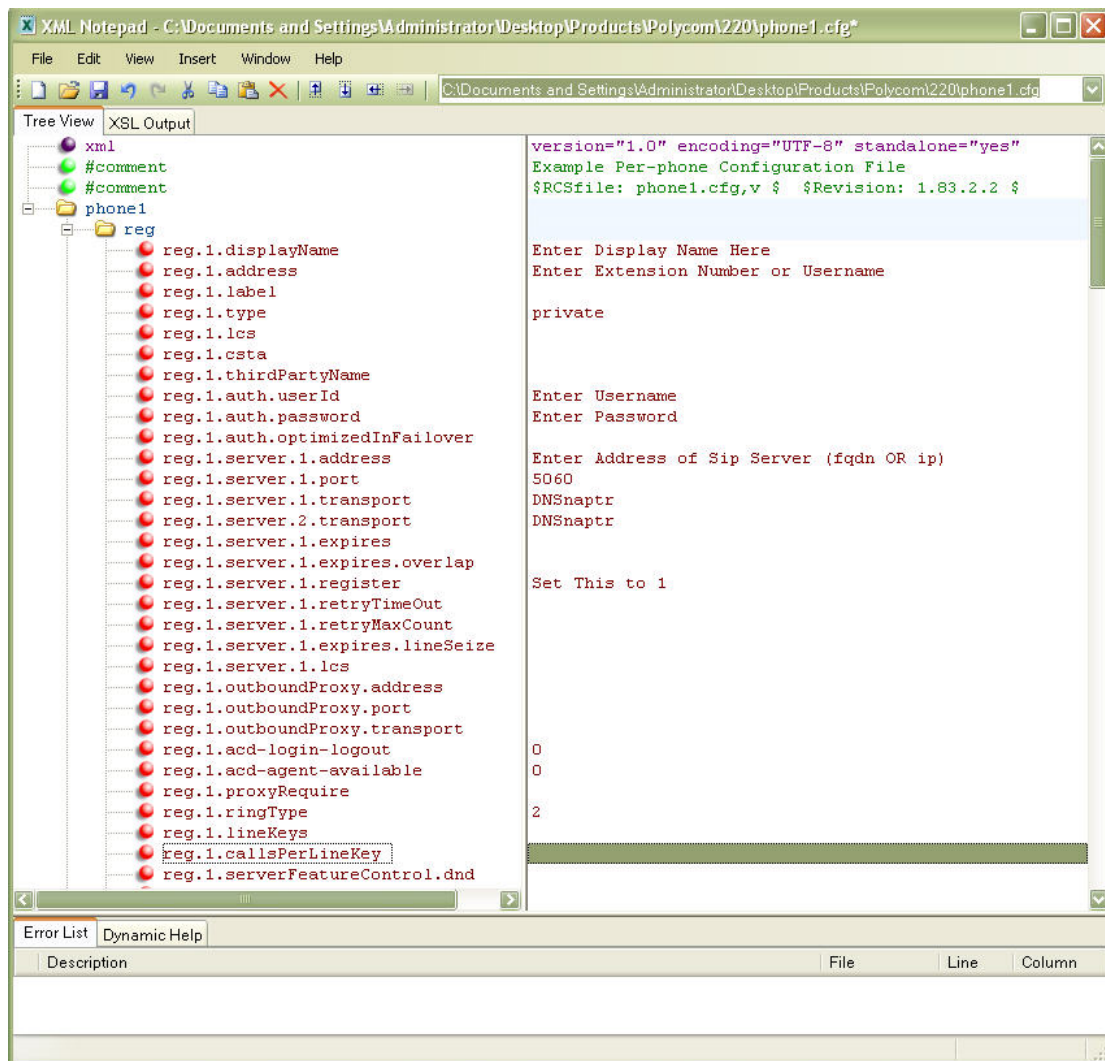

3. Open sip.cfg and make any changes needed.
4. Save all files into the root directory of your TFTP/FTP server – NOTE this includes all the unzipped BootRom and SIP firmware files.
5. Plug in phone – on startup hit the setup button. The password is 456.
6. Go to Server Menu using the arrow buttons on the handset.
7. Change Server Type to Trivial FTP, enter the server address (ip address of the machine running your tftp server)
8. Exit and Save the configuration. The phone will now reboot. It may reboot several times before being provisioned if you have used a new firmware / bootrom.
9. Congratulations your phone should now be working!

NOTE – This method can also be used to restore a phone's configuration if the phone is stuck in a reboot cycle.