

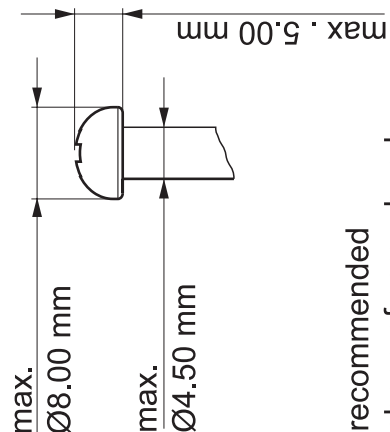


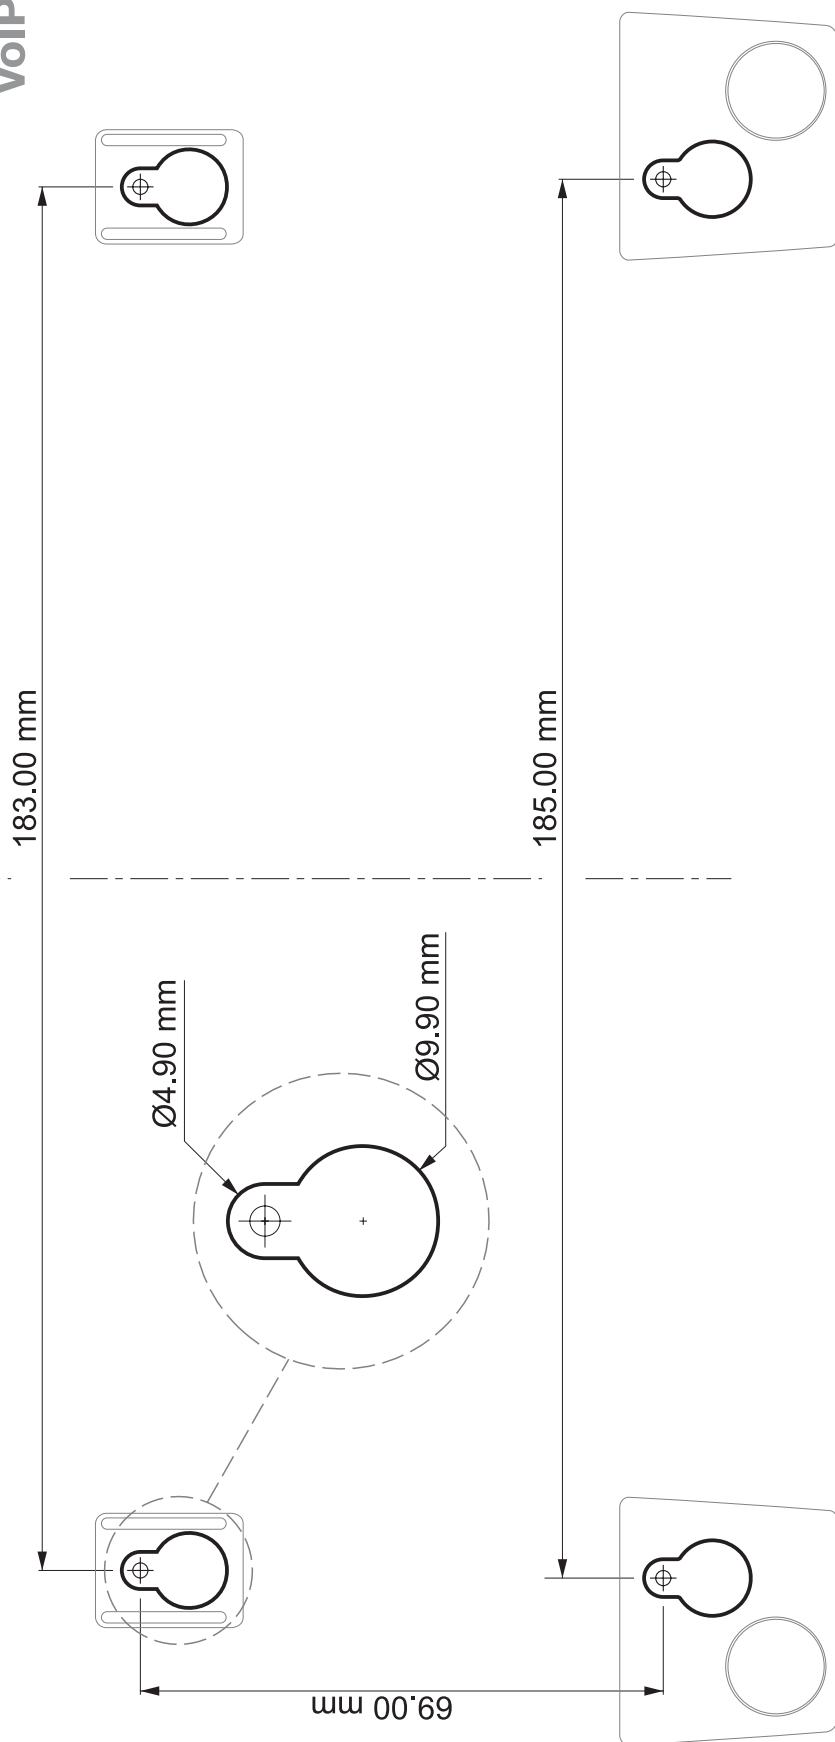

recommended
shape of screw head

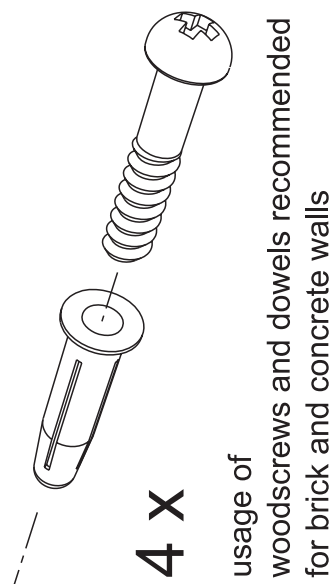

Drill Template for Wallmount Usage

VoIP - Phone Models
Snom 320
Snom 360