
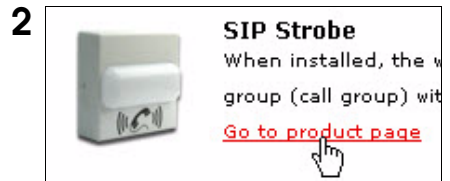


1.0 Out-of-Box and Prior to Final Installation

- 1.1. Verify that you have received all of the parts listed on the *Installation Quick Reference* placemat.
- 1.2. Download the current manual, otherwise known as an *Operation Guide*, which is available on the **Documentation**. Navigate to the **Documentation** page by going to www.CyberData.net and following the steps that are indicated by the following figures:

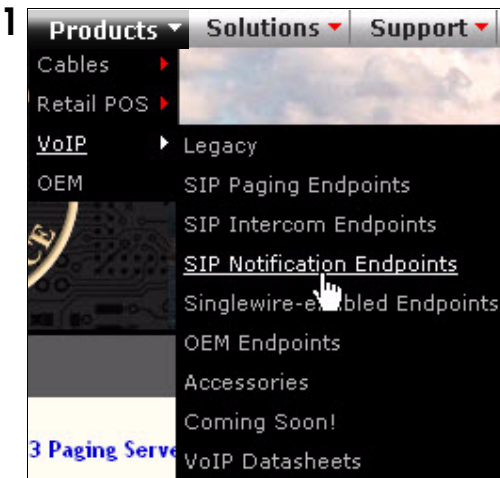


2.0 Select Power Source

| PoE Switch | PoE Injector |
|---|---|
| Set PoE power type to Class 0 = 13W | CAT6 cable recommended— for longer distances |
| | Be sure you are using a non-PoE switch or port |
| Make sure port is not in trunk mode | |
| Set port to full duplex/ 100mbps | |
| Spanning Tree Protocol (STP) must be disabled or Portfast enabled | |

3.0 Power Test

- 3.1. Plug in the CyberData device and monitor the LED activity above the ethernet port on the back of the SIP Strobe. See the following figure:

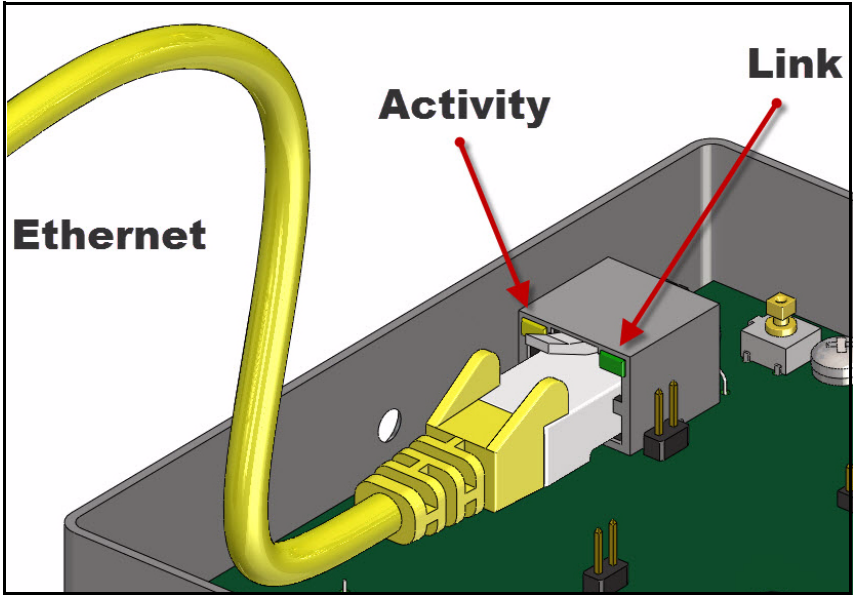

- 3.2. The **GREEN Link** LED blinks off once during the boot up process and then comes on again and remains constant (solid **GREEN**). The **YELLOW Activity** LED may be blinking depending on the network activity.

Normally, this process will take about 30 seconds. However, if no DHCP is available, then this process could take up to 2 minutes.

This concludes the power test. Go to [Section 4.0, "Connecting to a Network in a Test Environment"](#).

4.0 Connecting to a Network in a Test Environment

Note The following connections are usually needed for this procedure:

- PC
- PoE switch or injector
- CyberData device

4.1. In a test environment, use a PC that is connected to the same switch as a single CyberData device. Note the subnet of the test PC.

4.2. Use the CyberData Discovery Utility program to locate the device on the network. You can download the Discovery Utility program from the following website address:

http://www.cyberdata.net/support/voip/discovery_utility.html

4.3. Wait for initialization to complete before using the Discovery Utility program to scan for a device. The device will show the current IP address, MAC address, and serial number.

4.4. Select the device.

Note If the IP address of the device is in the same subnet of the PC, then go to [Step 4.7](#).

4.5. If the IP address of the device is different from the subnet of the PC, then complete the following steps:

4.5.1. Click the **Details** tab.

4.5.2. Click **Adv. Config** to manually configure settings with an available IP address in the same subnet.


Note A gateway address of **0.0.0.0** or a subnet address of **255.255.255.255** will prompt you to enter a valid address.

4.5.3. Click **OK** after you are finished making changes.

4.6. A dialog box will prompt you to click **OK** after confirming the configuration changes and will ask you to wait while the device reboots. Please wait for the device to power up and wait for the Discovery Utility program to find the device on the network.


- 4.7. After the Discovery Utility program has located the device on the network, click **Launch Browser**. When the IP address matches the subnet of the PC that you are using to access the device, the Discovery Utility program will be able to launch the browser window which is configured to the device's IP address.
- 4.8. Log on to the web interface by using the default username (**admin**) and password (**admin**) to configure the device.

The device is now ready to be set for your desired network configuration. You may reference our IP-PBX specific configurations on CyberData's **Compatible IP-PBX Servers** web page. Go to www.CyberData.net and navigate through the menus to the **Compatible IP-PBX Servers** web page as shown in the following figure:

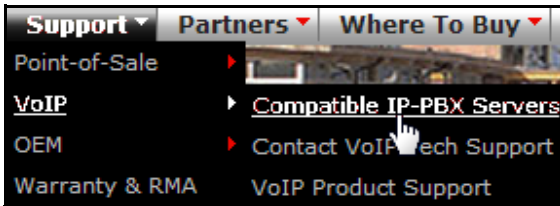

5.0 Contacting CyberData VoIP Technical Support

For quality assurance purposes, we ask that you please visit our website and complete our Support Form. To complete the Support Form, go to www.CyberData.net and navigate through the menus to the **Contact VoIP Tech Support** web page as shown in the following figure:

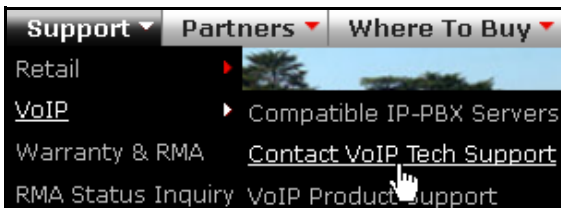

The Support Form initiates a ticket which CyberData uses for tracking customer requests. Most importantly, the Support Form tells us which PBX system and software version that you are using, the make and model of the switch, and other important information. This information is essential for troubleshooting. Please also include as much detail as possible in the **Comments** section of the Support Form.

Requests for Returned Materials Authorization (RMA) numbers require an active VoIP Technical Support ticket number. A product will not be accepted for return without an approved RMA number.