

AG-188N User Manual

1	AG-188N Features	4
1.1	Appearance	4
1.2	Interface	4
1.3	Electricity characteristic	5
1.4	Software	5
1.5	Standard and Protocols	5
1.6	Compliant Standards	6
1.7	Operating requirement	6
1.8	Package	6
1.9	Installation	7
2	Web Configuration	7
2.1	Access Web setting page	7
2.2	Current state	9
2.3	Network	10
2.3.1	Wan Config	10
2.3.2	LAN Config	11
2.4	VoIP	11
2.4.1	SIP Config	11
2.4.2	Iax2 Config	13
2.5	Advance	14
2.5.1	DHCP Server	14
2.5.2	NAT	15
2.5.3	Net Service	16
2.5.4	QoS settings	17
2.5.5	Advance SIP settings	18
2.5.6	Digital Map	19
2.5.7	Call Service Settings	20
2.5.8	MMI Filter	21
2.5.9	Audio Settings	22
2.5.10	VPN	22
2.6	Dial-Peer Settings	24
2.7	Config Manage	25
2.8	Update	26
2.9	System Manage	28
2.9.1	Account Manage	28
2.9.2	Syslog Config:	28
2.9.3	Time Set:	29
2.9.4	Logout&Reboot	29
3	IVR setting	30
4	Telnet Console	31
4.1	Introduce	31
4.2	Global Command	32
5	Tree Structure	33

6	Network Diagnosis	34
7	Restore to factory default.....	34
8	POST Mode(safe mode)	35
9	FAQ.....	36
	How many SIP servers may AG-188N register simultaneously?	36
	How can I know the AG-188N's IP address?.....	36
	How to use AG-188N's Lifeline function?	36
	Why the settings vanish after reboot?	36
	How to use the dial rule?	36
	How to use speed dial function?	38
	How to configure digital map?	38
	How to use Call Forward, Call Transfer and 3-way Conference calls?	38
	VLAN implement	39

1 AG-188N Features

1.1 Appearance



PWR: power connection status

SYS : server registration status . registered: on , gliting , not-registered , off

WAN: WAN port connectiong , conctected , on , offline : off

LAN: LAN port connectiong , conctected , on , offline : off

PSTN: light on when PSTN call come in/out

VoIP: light on when VoIP call come in/out , The default status when pick up the call is VoIP call out

1.2 Interface



Power: Output Power:12VDC,500mA.

Port: RJ11 port. Connect to handset or the Lifeline accessory.

WAN: RJ45 port.

LAN: RJ45 port.

1.3 Electricity characteristic

- **Speciality of electric:** output the 12V 500mA DC
- **The network connects:**2 RJ45 connect, a WAN, a LAN
- **FXS:** 2 port

1.4 Software

- Support two sip servers running at the same time.
- Back-up sip server support.
- NAT, Firewall.
- DHCP client and server.
- Support PPPoE, (used for ADSL, cable modem connecting).
- Support major G7.xxx CODEC.
- VAD,CNG.
- G.165 compliant 16ms echo cancellation
- Tone generation and Local DTMF re-generation according with ITU-T
- E.164 dial plan and customized dial rules
- Support Lifeline.
- Hotline.
- Speed Dial
- Call Forward, Call Transfer, 3-way conference calls
- Caller ID display
- DND(Do Not Disturb),Black List,Limit List
- Upgrade firmware through FTP or HTTP.
- Web management.
- Reverse polarity
- Telnet remote management.
- Voice prompt
- adjustable user password and super password

1.5 Standard and Protocols

- IEEE 802.3 /802.3 u 10 Base T / 100Base TX
- PPPoE: PPP Protocol over Ethernet
- DHCP Client and Server: Dynamic Host Configuration Protocol
- G.711 u/a; G729 audio Codec
- SIP RFC3261, RFC 2543
- IAX2
- TCP/IP: Internet transfer and control protocol
- RTP: Real-time Transport Protocol
- RTCP: Real-time Control Protocol
- VAD/CNG save bandwidth

- Telnet: Internet's remote login protocol
- DNS: Domain Name Server
- TFTP: Trivial File Transfer Protocol
- HTTP: Hyper Text Transfer protocol
- FTP: File Transfer protocol
- RFC 3362: T.38 protocol

1.6 Compliant Standards

- CE: EN55024,EN55022
- FCC part15
- comply with ROHS in EU
- comply with ROHS in China



Explanation:

The letter “e” is the first letter of “environment: and “electronic”, The rim is a round with two arrow , stands for recycle. The number 20 stands for the years of environment protection. Please note the years of environment protection is not discarding year nor usage life

1.7 Operating requirement

- Operation temperature: 0 to 40° C (32° to 104° F)
- Storage temperature: -30° to 65° C (-22° to 149° F)
- Humidity: 10 to 90% no dew


1.8 Package

- Size 128 x 85 x 30 mm
- Packing List
 - ✓ AG-188N gateway
 - ✓ Power adaptor (12v, 500mA)
 - ✓ Manual CD

1.9 Installation

Use Ethernet cable to connect AG-188N's LAN port and your computer. Set your computer's ip to the network 192.168.10.x or using dynamic obtain IP. Open your web browser and key in 192.168.10.1. Then you will see the logon page of AG-188N, the default username and password is **admin/admin** for administrator and **guest/guest** for guest.

Set up page for VoIP use only:

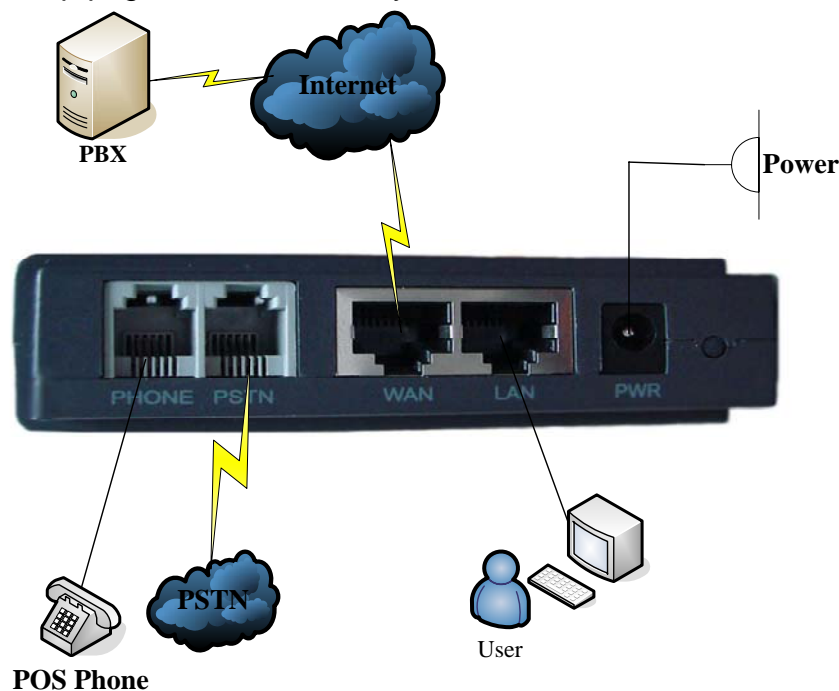


2 Web Configuration

2.1 Access Web setting page

Enter AG-188N IP address in the web browser and press ENTER to go to the log on page, and key in the username and password to access AG-188N setting page.

Default username and password is:

Administrator:	Username: admin	password: admin
User:	Username: guest	Username: guest

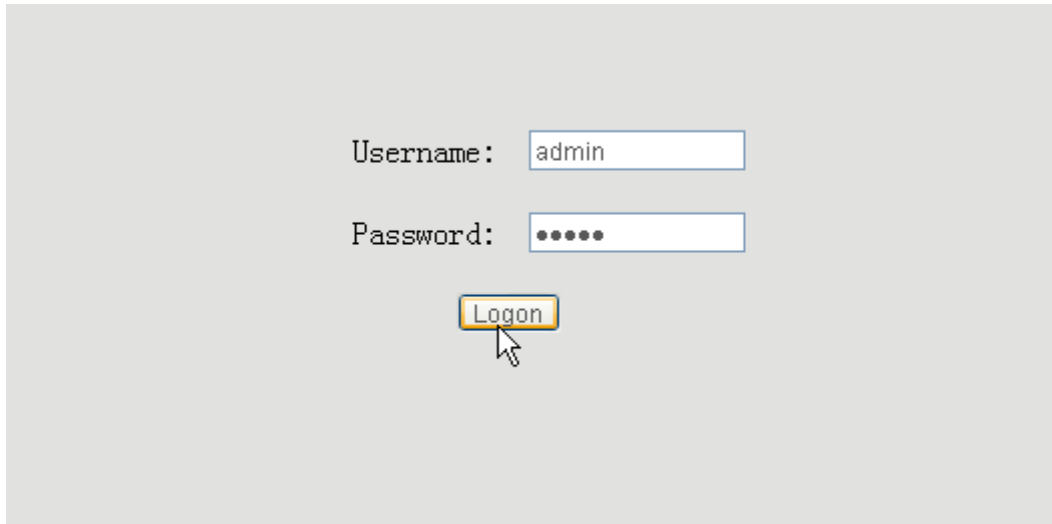

Username:

Password:

2.2 Current state

VoIP Gateway

Running Status

Network

	Connect Mode	DHCP	MAC Address	00:01:02:03:04:05
WAN	IP Address	192.168.1.74	Gateway	192.168.1.1
	Primary DNS	202.96.128.166	Alternate DNS	202.96.134.133
LAN	IP Address	192.168.10.1	DHCP Server	ON

VoIP

Default Protocol: SIP

	Register Server	194.54.102.147	Proxy Server	194.54.102.147
SIP	Register	ON	State	Registered
	SIP Stun	OFF		
IAX2	IAX2 server		Register	OFF
	State	Unregistered		

Phone Number

Public SIP	301
Private SIP	83018806
IAX2	

Version: VoIP Gateway V1.6.102.21 Mar 26 2008 15:32:50

This page shows AG-188N's running state.

Network : shows the WAN and LAN port connecting state and current settings.

VoIP: show the default protocol, the working state of SIP and IAX2, you can see whether AG-188N has registered the public sip server and IAX2 server.

Phone Number shows the public sip server, the private sip server and the IAX2 server phone numbers.

2.3 Network

2.3.1 Wan Config

The screenshot shows the WAN Configuration page for a VoIP Gateway. The page is divided into a sidebar and a main content area. The sidebar contains navigation links: Current State, Network, WAN Config, LAN Config, VoIP, Advance, Dial-Peer, Config Manage, Update, and System Manage. The main content area is titled 'VoIP Gateway' and 'WAN Configuration'. It contains several tables and form fields for configuring network settings.

Active IP	Current Netmask	MAC Address	Current Gateway
192.168.1.74	255.255.255.0	00:01:02:03:04:05	192.168.1.1

Mac Authenticating Code: Valid MAC

Static
 DHCP
 PPPoE

Obtain DNS server automatically

Static	IP Address	Netmask	DNS Domain
	192.168.1.179	255.255.255.0	
	Gateway	192.168.1.1	
	Preferred DNS	202.96.134.133	Alternate DNS
		202.96.128.68	

PPPoE Server:
 Username:
 Password:

Apply

WAN port network setting page.

Support static IP, dynamic obtain IP and PPPoE.

Configure Static IP:

- Enable Static;
- Set AG-188N's IP address in the IP Address;
- Set net mask in the Net mask field;
- Set router IP address in the Gateway;
- DNS Domain:
- Set local DNS server in the Preferred DNS and the Alternate DNS

Configure to dynamic obtain IP

- Enable DHCP;

If there is DHCP server in your local network, AG-188N will automatically obtain WAN port network information from your DHCP server.

Configure PPPoE:

- Enable PPPoE
- PPPoE server: Enter "ANY" if no specified from your ITSP.
- Enter PPPoE username and pin in the username and password.

AG-188N will automatically obtain WAN port network information from your ITSP if PPPoE setting and the setup are correct.

Notice: If user accesses the gateway through WAN port. He should use the new IP address to access the gateway when the WAN port address was changed.

2.3.2 LAN Config

Bridge Mode: Enable this option to switch to bridge mode. Gateway won't assign IP for its LAN port in bridge mode and its LAN and WAN port will be in the same network. (This setting won't take effect unless you save the config and reboot the device)

IP Netmask: Set the IP and Netmask for the LAN

DHCP Server: Enable DHCP service in LAN port

NAT: Enable NAT.

2.4 VoIP

2.4.1 SIP Config

Setting page of public SIP server:

Register Server Addr: Register address of public SIP server

Register Server Port: Register port of public SIP server

Register Username: Username of your SIP account (Always the same as the phone number)

Register Password: Password of your SIP account.

Proxy Server Addr: IP address of proxy SIP server (SIP provider always use the same IP for register server and proxy server, in this case you don't need to configure the proxy server information.)

Proxy Server Port: Signal port of SIP proxy

Proxy Username: proxy server username

Proxy Password: proxy server password

Domain Realm: SIP domain, enter the sip domain if any, otherwise AG-188N will use the proxy server address as sip domain.

Local SIP port: Local SIP register port, default 5060

Phone Number: Phone number of your SIP account

Register Expire Time: register expire time, default is 600 seconds. AG-188N will auto configure this expire time to the server recommended setting if it is different from the SIP server.

Detect Interval Time: Co-work with the Auto Detect Server, if Auto Detect Server is enable, AG-188N will periodically detect if the SIP server is available according this setting.

RFC Protocol Edition: Current AG-188N SIP versions. Set to RFC 2543 if the gate need to communicate to devices (such as CISCO5300) using the SIP 1.0. Default is RFC 3261.

Enable Register: Enable/Disable SIP register. AG-188N won't sent register info to SIP server

DTMF Mode:DTMF signal sending mode: support RFC2833, DTMF_RELAY (inband audio) and SIP info

Auto Detect server: co-work with Server Auto Swap and Detect Interval Time. Enable this option, AG-188N will periodically detect whether the public SIP server is available, if the server is unavailable, the AG-188N will switch to the back-up SIP sever, and continue detecting the public sip server. AG-188N will switch back to the primary SIP server if the **server is available again.**

Server Auto Swap:Please refer to Auto Detect server for detail.

Enable Via rport: config the supporting for RFC 3581

SIP(Default Protocol): Setting for the default protocol of SIP

2.4.2 IAX2 Config

VoIP Gateway	
IAX[Unregistered] Configuration	
IAX Server Addr	<input type="text"/>
IAX Server Port	<input type="text" value="4569"/>
Account Name	<input type="text"/>
Account Password	<input type="text"/>
Phone Number	<input type="text"/>
Local Port	<input type="text" value="4569"/>
Voice mail number	<input type="text" value="0"/>
Voice mail text	<input type="text" value="mail"/>
Echo Test number	<input type="text" value="1"/>
Echo Test text	<input type="text" value="echo"/>
Refresh Time	<input type="text" value="60"/> Seconds
<input type="checkbox"/> Enable Register	<input type="checkbox"/> Enable G.729
<input type="checkbox"/> IAX(Default Protocol)	
<input type="button" value="Apply"/>	

Setting page of public IAX server:

IAX Server Addr: Register address of public IAX server

IAX Server Port: Register port of public IAX server, default port is 4569

Account Name: Username of your SIP account (Always the same as the phone number)

Account Password: Password of your IAX account.

Local port: Signal port of local, default port is 4569

Phone Number: Phone number of your IAX account

Voice mail number: If the IAX support voice mail, but your username of the voice mail is letters which you can not input with the ATA, then you use the number to stand for your username

Voice mail text: if IAX support voice mail, config the domain name of your mail box here.

Echo test number: If the platform support echo test, and the number is test form, the config the test number to replace the text format The echo test is to test the working status of terminals and platform

Echo test text: echo test number in text format

Refresh time: IAX refresh time

Enable Register: enable or disable register

IAX(Default Protocol): Set IAX 2 as the default protocol, if not the system will choose SIP as default

Enable G.729: Using G.729 speech coding mandatory consultations

2.5 Advance

2.5.1 DHCP Server

VoIP Gateway

DHCP Service

Update Mode: (Dropdown menu: None, Update firmware, Update config file) | tftp Server:

DNS Relay

Name	Start IP	End IP	Lease Time	Netmask	Gateway	DNS
lan	192.168.10.1	192.168.10.30	1440	255.255.255.0	192.168.10.1	192.168.10.1

Lease Table Name: | Lease Time: minute

Start IP: | End IP: |

Netmask: | Gateway:

DNS:

Lease Table Name: |

DHCP server manage page.

User may trace and modify DHCP server information in this page.

Update Mode: Using DHCP updated model ,None expressed are not updated, Update firmware update firmware is used to DHCP. Update file is used to configure DHCP updated configuration files.

Tftp Server: Addresses using TFTP server upgrade .

DNS Relay: enable DNS relay function.

User may use below setting to add a new lease table.

Lease Table Name: Lease table name.

Lease Time: DHCP server lease time.

Start IP: Start IP of lease table.

End IP: End IP of lease table. Network device connecting to the AG-188N LAN port can dynamic obtain the IP in the range between start IP and end IP.

Netmask: Netmask of lease table.

Gateway: Default gateway of lease table

DNS: default DNS server of lease table.

Notice: This setting won't take effect unless you save the config and reboot the device

2.5.2 NAT

The screenshot displays the NAT Configuration interface for the VoIP Gateway. On the left is a sidebar with the ATCOM logo and a menu including 'Current State', 'Network', 'VoIP', 'Advance' (with sub-items like DHCP Server, NAT, Net Service, DOS, SIP, Digital Map, Call Service, MMI Filter, Audio Settings, VPN), 'Dial-Peer', 'Config Manage', 'Update', and 'System Manage'. The main area is titled 'VoIP Gateway' and 'NAT Configuration'. It features three checked checkboxes: IPsec ALG, FTP ALG, and PPTP ALG, with an 'Apply' button below them. Below this are two tables for port mapping configuration. The first table is for TCP, with columns for 'Inside IP', 'Inside TCP Port', and 'Outside TCP Port'. The second table is for UDP, with columns for 'Inside IP', 'Inside UDP Port', and 'Outside UDP Port'. At the bottom, there is a 'Transfer Type' dropdown menu set to 'TCP', and input fields for 'Inside IP', 'Inside Port', and 'Outside Port'. 'Add' and 'Delete' buttons are positioned at the bottom right of the configuration area.

Advance NAT setting. Maximum 10 items for TCP and UDP port mapping.

IPSec ALG: Enable/Disable IPSec ALG;

FTP ALG: Enable/Disable FTP ALG;

PPTP ALG: Enable/Disable PPTP ALG;

Transfer Type: Transfer type using port mapping.

Inside IP: LAN device IP for port mapping.

Inside Port: LAN device port for port mapping.

Outside Port: WAN port for port mapping.

Click **Add** to add new port mapping item and **Delete** to delete current port mapping item.

2.5.3 Net Service

VoIP Gateway

Net Service

HTTP Port	80	Telnet Port	23
RTP Initial Port	10000	RTP Port Quantity	200

If modify HTTP or Telnet port, you'd better set it more than 1024, then save and restart.

Apply

DHCP Lease Table

Leased IP Address	Client Hardware Address
-------------------	-------------------------

HTTP Port: configure HTTP transfer port, default is 80. User may change this port to enhance system's security. When this port is changed, please use `http://xxx.xxx.xxx.xxx:xxxx/` to reconnect.

Telnet Port: configure telnet transfer port, default is 23.

RTP Initial Port: RTP initial port.

RTP Port Quantity: Maximum RTP port quantity, default is 200

Notice:

Settings in this page won't take effect unless save and reboot the device.

If you need to change telnet port or HTTP port, please use the port greater than 1024, because ports under 1024 is system remain ports.

HTTP service if HTTP is set to 0.


2.5.4 QoS settings

AG188 implement QoS based on 802.1p, The QoS is used to mark the network communication priority in the data link/MAC sub-layer. AG188 will sorted the packets using the QoS and sends it to the destination.

1. Voice 802.1p Priority --- Configure the priority of the voice packets in 802.1p protocol.
2. VLAN Enable --- Disable/Enable VLAN function
3. Voice VLAN ID --- configure the Voice/signaling VLAN ID
4. DiffServ Enable --- Disable/Enable Diffserv service
5. DiffServ Value --- Configure Diffserv parameter. The value range : value range: 0x28,0x30,0x38,0x48,0x50,0x58,0x68,0x70,0x78,0x88,0x90,0x98,0xb8.default is 0xb8 ,0xb8 stands for best fast transmission; 28-30 is guarantee for the transmission priority for the 1st rank , 48-58 is guarantee for the transmission priority for the 2nd rank, 68-78 is guarantee for the transmission priority for the 3rd rank, 88-98 is guarantee for the transmission priority for the 4th rank.
6. Data VLAN ID--- Assign VLAN id for data stream.
7. Data 802.1P Priority --- Configure the priority of the data packets (non-voice/signaling data) in 802.1p protocol.
8. Data/Voice DiffServ differentiated --- undifferentiated for Date and voice VLAN is not distinction VLAN tag, Tag differentiated for Date and Voice VLAN is distinction VLAN tag, Date untagged for Date VLAN is distinction VLAN tag

Please refer to [VLAN implement](#) for detail

2.5.5 Advance SIP settings



- Current State
- Network
- VoIP
- Advance**
 - DHCP Server
 - NAT
 - Net Service
 - QoS
 - SIP
 - Digital Map
 - Call Service
 - MMI Filter
 - Audio Settings
 - VPN
- Dial-Peer
- Config Manage
- Update
- System Manage

VoIP Gateway

Advance SIP Configuration
Public[Registered]Private[Unregistered]
STUN NAT Transverse[FALSE]

STUN Server Addr	<input type="text"/>	STUN Server Port	<input type="text" value="3478"/>
Private Server Addr	<input type="text" value="192.168.1.209"/>	Private Proxy	<input type="text"/>
Server Port	<input type="text" value="5060"/>	Proxy Port	<input type="text"/>
Server Username	<input type="text" value="83018806"/>	Proxy Username	<input type="text"/>
Server Password	<input type="password" value="*****"/>	Proxy Password	<input type="password"/>
Private Domain	<input type="text"/>	Expire Time	<input type="text" value="60"/> seconds
Private Number	<input type="text" value="83018806"/>	STUN Effect Time	<input type="text" value="50"/> minute
Display Name	<input type="text"/>	Private User Agent	<input type="text" value="Voip Phone 1.0"/>
Private Server Type	<input type="text" value="common"/>	<input checked="" type="checkbox"/> Enable URI Convert	
<input checked="" type="checkbox"/> Enable Private Register		<input type="checkbox"/> Enable SIP Stun	

This page is used to set the private sip server, stun server, and back up sip server information.

STUN Server setting:

STUN Server Addr: configure stun server address;

STUN Server Port: configure stun server port default 3478

STUN Effect Time: stun detect NAT type circle, unit: minute.

Enable SIP STUN: enable/disable stun.

Please refer to [sip_conf](#) for the setting for how to set the public alter server.

Private Server Type: The particular Private service system supplier carries out the sign and speeches to encrypt, default is common

User can register two sip servers: public sip server and private sip server. these two sip servers are independent from each other and running in the same time.

For how to configure private sip server. Please refer to [sip configuration](#).

2.5.6 Digital Map

The screenshot displays the ATCOM VoIP Gateway configuration page for Digital Map. The left sidebar contains a navigation menu with categories: Current State, Network, VoIP, Advance, Dial-Peer, Config Manage, Update, and System Manage. The main content area is titled 'VoIP Gateway' and 'Digital Map Configuration'. It features a configuration panel with the following options:

- End with "#"
- Fixed Length: 11
- Time out: 5 (3--30)

An 'Apply' button is located below these options. Below the configuration panel is the 'Digital Map Table' which contains the following entries:

Prefix Number
*
8[3-8]XXXXXX
89XXXX
6567
78XXXT2
5[3,7,9]XXXXXX

At the bottom of the table, there are two rows for adding or deleting entries:

Prefix Number	<input type="text"/>	<input type="button" value="Add"/>
Prefix to be deleted	<input type="text"/>	<input type="button" value="Delete"/>

Digit map is a set of rules to determine when the user has finished dialing.

AG-188N support below digital map:

Digital Map is based on some rules to judge when user end their dialing and send the number to the server. AG-188N support following digital map:

----End With "#": Use # as the end of dialing.

----Fixed Length: When the length of the dialing match, the call will be sent.

----Timeout: Specify the timeout of the last dial digit. The call will be sent after timeout

----Prefix: User define digital map:

[] represents the range of digit, can be a range such as [1-4], or use comma such as [1,3,5], or use a list such as [234]

x represents any one digit between 0~9

Tn represents the last digit timeout. n represents the time from 0~9 second, it is necessary. Tn must be the last two digit in the entry. If Tn is not included in the entry, we use T0 as default, it means system will sent the number immediately if the number matches the entry.

Example:

[1-8]xxx	All number from 1000 to 89999 will be sent immediately.
9xxxxxxx	8 digits numbers begin with 9 will be sent immediately.
911	Number 911 will be sent will be immediately
99xT4	3 digits numbers begin with 99 with be sent after four seconds.

2.5.7 Call Service Settings

User configure the value add service such as hotline, call forward, call transfer, 3-way conference call .etc in this page

Hotline: configure hotline number. AG-188N immediately dials this number after hook-off if it is set.

Call Forward: Please refer to value add service for detail.

No Disturb: DND, do not disturb, enable this option to refuse any calls.

Ban Outgoing: Enable this to ban outgoing calls.

Enable Call Transfer: Please refer to value add service for detail.

Enable Three Way Call: Please refer to value add service for detail.

Enable Call Waiting: Enable/disable Call Waiting

Accept Any Call: If this option is disable, AG-188N refuse the incoming call when the called number is different from AG-188N's phone number.

No Answer Time: no answer call forward time setting.

Black List: incoming call in these phone numbers will be refused.

Limit List: outgoing calls with these phone numbers will be refused

2.5.8 MMI Filter

The screenshot shows the 'VoIP Gateway' configuration interface. On the left is a navigation menu with categories: Current State, Network, VoIP, Advance, Dial-Peer, Config Manage, Update, and System Manage. The 'Advance' section is expanded, showing sub-items: DHCP Server, NAT, Net Service, QOS, SIP, Digital Map, Call Service, MMI Filter (highlighted), Audio Settings, and VPN. The main content area is titled 'MMI Filter' and contains the following controls:

- A checkbox labeled 'MMI Filter' with an 'Apply' button to its right.
- Two input fields labeled 'Start IP' and 'End IP'.
- A table with two columns: 'Start IP' and 'End IP'. Each column has an input field and an 'Add' button.
- A dropdown menu labeled 'Start IP to be deleted' with a 'Delete' button to its right.

MMI filter is used to make access limit to AG-188N Gateway.

When MMI filter is enable. Only IP address within the start IP and end IP can access AG-188N gateway.

2.5.9 Audio Settings

CODEC	g711Alaw64k	Signal Standard	CHINA
Input Volume	0 (0-5)	Output Volume	0 (0-5)
G729 Payload Length	10 ms	DTMF Payload Type	101
iLBC Payload Type	97 (96-127)	iLBC Payload Length	30 ms
CallerID Tx Mode	FSK	FAX Mode	T.38
<input type="checkbox"/> VAD			

Apply

CODEC: select the prefer CODEC; support ulaw, alaw and G729

Signal Standard: Support CHINA, Japan and USA standard

Input Volume: Handset in volume.

Output Volume: Handset out volume.

G729 Payload Length: G729 payload length

VAD: Enable/disable Voice Activity Detection

FAX Mode: select the FAX Mode

2.5.10 VPN

VPN IP: 0.0.0.0

UDP Tunnel			
VPN Server Addr	0.0.0.0	VPN Server Port	80
Server Group ID	VPN	Server Area Code	12345

L2TP			
VPN Server Addr		VPN User Name	
VPN Password			

UDP Tunnel L2TP Enable VPN

Apply

this page is VPN setting page , the Gateway support the VPN with UDP and L2TP protocol .The parameters is as below

VPN IP: After VPN registered successfully, VPN server will give an IP address to the terminal . If there is a IP address shown on terminal (except for 0.0.0.0) ,it means your VPN has registered

UDP Tunnel

VPN Server Addr: register to the address of VPN server .

VPN Server Port: Register to the port of VPN server

Server Group ID: the group ID of UDP VPN

Server Area Code: the are code of VPN server

L2TP

VPN Server Addr: register to the address of VPN server

VPN User Name: L2TP VPN username

VPN Password: L2TP VPN password



The screenshot shows a configuration panel with two radio buttons on the left: 'UDP Tunnel' (which is selected) and 'L2TP'. To the right of these is a checkbox labeled 'Enable VPN'.

UDPTunnel: use the UDP to visit VPN

L2TP: use the L2TP to visit VPN

Enable VPN: Enable the VPN server, you must choose UDP or L2TP type in advance

2.6 Dial-Peer Settings

ATCOM

VoIP Gateway

Dial-Peer

Number	Call Mode	Destination	Port	Alias	Suffix	Del Length
*T	lifeline	0.0.0.0	0	no alias	no suffix	0

Please refer to "[how to use dial rule?](#)" for detail.

2.7 Config Manage

Save Config: save current settings.

Clear Config: restore to default settings.

Notice: clear config in admin mode, all settings restores to factory default; clear config in guest modem, all settings except sip, advance sip restore to factory default.

2.8 Update

2.8.1 Web Update:

update gateway's settings or firmware. Firmware file is .dlf extension when configure file is .cfg extension, AG-188N will auto select configure update or firmware update according the extension.

2.8.2 FTP Update:

back up the configure file to FTP or TFTP server. Or auto update configure file from your auto update server.

Back up configure file to your FTP/TFTP server.

The screenshot shows the 'VoIP Gateway' web interface. On the left is a navigation menu with the ATCOM logo and options: Current State, Network, VoIP, Advance, Dial-Peer, Config Manage, Update, WEB Update, FTP/TFTP Update, Auto Provisioning, and System Manage. The main content area is titled 'FTP/TFTP Download' and contains a form with the following fields:

Server	192.168.1.207
Username	wells
Password	*****
File name	config.bt
Type	Config file export
Porotocol	FTP

An 'apply' button is located at the bottom right of the form.

* configure use .cfg extension.

2.8.3 Auto update:

AG-188N gateway support FTP and TFTP auto update. The gateway will auto obtain the configure file from your update server if configured. To obtain the original configure file, you can use the FTP/TFTP back up as describe above. Configure file using module structure, user may remain the concerned modules and remove other modules. Put the configure file in the root directory of update serve when finish editing.

The screenshot shows the 'VoIP Gateway' web interface. On the left is a navigation menu with the ATCOM logo and options: Current State, Network, VoIP, Advance, Dial-Peer, Config Manage, Update, WEB Update, FTP/TFTP Update, Auto Provisioning, and System Manage. The main content area is titled 'Auto Provisioning Configuration' and contains a form with the following fields:

Current Version	2.0001
Server Address	0.0.0.0
Username	user
Password	****
Config File Name	
Config Encrypt Key	
Protocol Type	FTP
Update Interval Time	1 Hour
Update Mode	Disable

An 'apply' button is located at the bottom right of the form.

Current Version: the system will display the current version number .

Server Address: FTP/TFTP server address

Username: FTP server user name

Password: FTP server password

Config File Name: The name of configuration file

Config Encrypt Key: The encrypt key of confirmation file

Protocol Type: The protocol type that used for upgrading

Update Interval Time: The interval time that the terminals search for new configuration file.

Update Mode: auto provision mode; Disable: not auto update, Update after reboot:auto update after reboot, Update at time interval:auto update after a certain time

Configure file version was in the <<VOIP CONFIG FILE>> and <GLOBLE CONFIG MODULE> ConfFile Version

For instance:

Gateway original version is:

<<VOIP CONFIG FILE>>Version:1.0000

<GLOBLE CONFIG MODULE> ConfFile Version: 6

User may edit the configure file version to:

<<VOIP CONFIG FILE>>Version:1.0007

<GLOBLE CONFIG MODULE> ConfFile Version: 7

2.9 System Manage

2.9.1 Account Manage

User Name	User Level
admin	Root
guest	General

Buttons: Add, Delete, Modify, admin (dropdown)

Set web access account or keypad password of AT-530.

2.9.2 Syslog Config:

Server IP	0.0.0.0
Server Port	514
MGR Log Level	None
SIP Log Level	None
IAX2 Log Level	None
<input type="checkbox"/> Syslog Enable	

Apply

Server IP: set the syslog server address

Server Port: set the syslog server port

MGR Log Level: set the MGR log level

SIP Log Level: set the SIP log level

IAX2 Log Level: set the IAX2 log level

Please click "apply" after setting

2.9.3 Time Set:

VoIP Gateway

Time Configuration

SNTP Timeset

server	209.81.9.7
timezone	(GMT+08:00)Beijing,Chongqing,Hong Kong,Urumqi
timeout	60 (seconds)
<input type="checkbox"/> Daylight	<input checked="" type="checkbox"/> select sntp

Apply

Manual Timeset

year	
month	
day	
hour	
minute	

Apply

Server: type the ip address of time server

Timezone: select correct time zone in list box

Timeout: longest response time for SNTP

Manual Timeset: The time setting

Daylight: Daylight Saving time

2.9.4 Logout&Reboot

Reboot Gateway, some setting needs to reboot to make it works. Please always save config before reboot, otherwise the setting will return to previous setting.

VoIP Gateway

Reboot System

Reboot

Logout

3 IVR setting

User may pre-config AG-188N gateway using a normal phone connecting to AG-188N.
please refer the below command:

Notice: all command below can be end with # to speed response.

```
"#****" /*reboot gateway*/
"#*000" /*clear settings*/

"#*100" /*set the IP type to static ip */
"#*101" /*set IP type to DHCP */
"#*102" /*set IP type to PPPoE*/

"#*111" /*prompt gateway ip*/
"#*222" /* prompt phone number*/
```

Below setting need reboot to take effect

```
"#*103" /*change to bridge mode*/
"#*104" /*change to router mode*/

"#*50192.168.1.117" set WAN port IP address
"#*51192.168.1.1" set default gateway IP
"#*52202.112.10.37" set dns server
"#*53255.255.255.0" set netmask, use 255.255.255.0 if no be set
```

4 Telnet Console

4.1 Introduce

4.1.1 Basic structure

User may use telnet command to access and manage gateway.

AG-188N adopts tree structure for telnet. Every node contains its sub-nodes or local command. User can type "help" or "?" whenever to see sub-nodes and all local command under current node.

Besides local command, there are some global commands can be used in each node.

4.1.2 Basic command

Logout: exit telnet mode.

Write: save current settings.

Type sub-nodes name in current node to switch to sub-node.

Type "!" or "exit" in current node to return to parent-node.

Type "help" or "?" can see all sub-nodes and all local command under current node, every help item has comments such as <command> or <node> to distinguish sub-nodes and local command. Type "help" or "?" in command can see all parameters using in this command.

When typing node name or command, user no need to key the full name, use TAB button will make it more efficient.

There are two types in command parameters: optional and required. "required" parameter use "-" as prefix and "optional" use "_" as prefix. User may type "-" or "_" then press TAB button for complementarily.

4.2 Global Command

Global command is available under all nodes, AG-188N support following commands:

Command	Function	Example
exit	Return to parent-node	#exit
logout	Exit	#logout
ping	Ping command, use to check network,	#ping www.google.com
write	Save setting to flash	#write

5 Tree Structure

5.1.1 Debug (Level 0~7)

path: <debug>#
show debug setting ---show
[disable]enable debug all modules ---[no] all xxx
[disable]enable debug app module ---[no] app xxx
[disable]enable debug cdr module ---[no] cdr xxx
[disable]enable debug sip module ---[no] sip xxx
[disable]enable debug tel module ---[no] tel xxx
[disable]enable debug dsp module ---[no] dsp xxx

5.1.2 reload

usage: #reload
Reboot system

5.1.3 show system running info

➤ basic

path: <show>#
show network status
Example: #<show>#basic
Show ip packets Stat.
Example: #<show>#ip ip

Show RTP packets Stat.
Example: #<show>#ip rtp

Show TCP packets Stat.
Example: #<show>#ip tcp

Show UDP packets Stat.
Example: #<show>#ip udp

➤ memory

path: <show>#
show gateway memory
Example: #<show>#memory

➤ nat

path: <show>#
show NAT information
Example: #<show>#nat

➤ uptime

path: <show>#

show running time

Example: #<show># uptime

➤ version

path: <show>#

show gateway version

Example: #<show># version

5.1.4 telnet and logout

Usage: #telnet –target -port

Login:xxx

Password:xxx

#

#logout

5.1.5 tracet trace network path info

usage: #tracert –host

Example: #tracert www.google.com

6 Network Diagnosis

There are some telnet commands for checking your network. Now Listing below for your information


Command	Function	Example
ping	Check if the destination is accessible	#ping www.google.com
tracert	Show network path info	#tracert <u>www.google.com</u>
show basic	Show network settings	#show basic
show ip route	Show route table	#show ip route
show ip arp	Show arp table	#show ip arp
telnet	Telnet to another device	#telnet 192.168.1.2

7 Restore to factory default

#setdefault clear gateway settings expect network part

#setdefault all clear all settings.

8 POST Mode(safe mode)

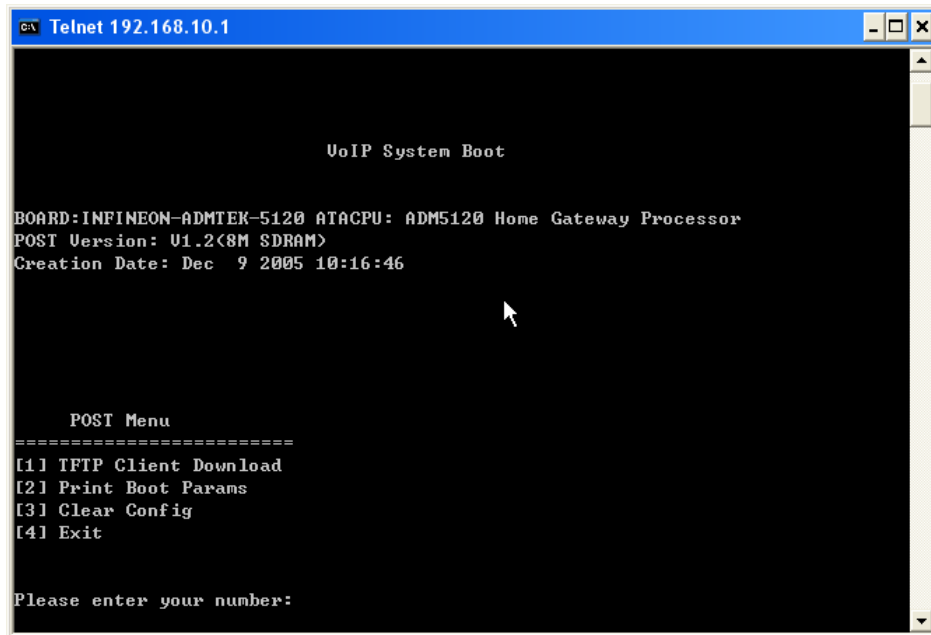A screenshot of a Telnet window titled 'Telnet 192.168.10.1'. The window displays the following text:

```
UoIP System Boot

BOARD:INFINEON-ADMTEK-5120 ATACPU: ADM5120 Home Gateway Processor
POST Version: U1.2<8M SDRAM>
Creation Date: Dec 9 2005 10:16:46

POST Menu
=====
[1] TFTP Client Download
[2] Print Boot Params
[3] Clear Config
[4] Exit

Please enter your number:
```

AG-188N provide safe mode. When there is booting problem because of setting problem or firmware problem. User can restore the factory setting or upgrade to a new firmware to solve this problem.

How to enter safe mode?

In the AG-188N booting procedure, it use the static ip 192.168.1.179 (WAN port IP) for a short time, user can telnet to this ip address in this occasion to enter the save mode.(remember to change your PC into the network 192.168.1.xx)

Then user can according the guide in post mode to clear the settings or upgrade the firmware.

9 FAQ

How many SIP servers may AG-188N register simultaneously?

AG-188N support 2 SIP servers and a IAX server. The Default server is SIP . If you want to use the IAX server you must set IAX as default protocol in the IAX config page. IAX and SIP can register simultaneously but not work simultaneously. If you set 2 SIP servers in the SIP setting page , you can choose the route (server) by dialing plan which is edited by you. Please see [“How to use the dial rule?”](#) for detail.

How can I know the AG-188N's IP address?

Pick up the handset and then dial “#*111#”, and the AG-188N will promote you its IP address.

How to use AG-188N's Lifeline function?

AG-188N supports Lifeline function, you can use the same handset to place PSTN and VoIP calls. First, you need to set up the Lifeline with the accessory send with the AG-188N, connect this accessory to AG-188N's FXS port, and then connect the handset to the accessory's phone port, connect the landline to the accessory's line port. You can receive PSNT and VoIP calls simply with configuration. To place the PSTN call, you need to set up as follow:

----Add a new dial rule in the *Dial-Peer* setting: set the phone number to *T, and choose the Lifeline as the Call mode.

----Add new Digital map item in the *Advance* →*Digital Map*: set Prefix Number to and *, and the length to 1.

Then when you want to place a PSTN calls, you can first press * to switch to the PSTN line and then place your call as you normal do.

Why the settings vanish after reboot?

Please go to Config Manage→Save Config to save your setting always.

How to use the dial rule?

AG-188N provide flexible dial rule, with different dial-rule configure, user can easily implement the following function:

----Replace, delete or add prefix of the dial number.

----Make direct IP to IP call

----Place the call to different SIP server according the prefix.

----Make PSTN calls use Lifeline function (Please refer [“How can use the Lifeline function of AG-188N?”](#)).

You can click “Add” to add a new dial rule. Below is the detail setting of the dial-rule:

Phone Number: The Number suit for this dial rule, can be set as full match or prefix match. Full match means that if the number user dialed is completely the same as this number, the call will use this dial-rule. Prefix match means that if prefix of the number that the user dials is the same as the prefix, the call will use this dial-rule, to distinguish from the full match case, you need to add “T” after the prefix number in the phone number setting.

Call Mode: support SIP and Lifeline, SIP means the call will use sip protocol, Lifeline means the call will use the PSTN line.

Destination (optional): call destination, can be IP or domain. Default is 0.0.0.0, in this case the call will be routed to the Public SIP server. If you set the destination to 255.255.255.255, then the call will be routed to the private SIP server. Also you can key other address here to make direct IP calls

Port (optional): Configure the port of the destination, default is 5060

Alias (optional): Set up the Alias. We support four Alias as below. Alias need to co-work with the *Del Length*:

- add:xxx, add prefix to the phone number, can set to reduce the dial length.
- all: xxx, replace the phone number with the xxx, can use as speed dial function.
- del, delete the first N numbers. N is set in the *Del Length*
- rep:xxx, replace the first N numbers. N is set in the *Del Length*. For Example: Use wants to place a call 8610-62281493, then you can set the *phone number* in the dial rule as 010T, and set the *Alias* as rep:8610, and set the *Del Length* to 3. Then all calls begin with 010 will be changed to 8610 xxxxxxxx.

Suffix (optional): Configure suffix, show no suffix if not set

Instance:

The screenshot shows the ATCOM VoIP Gateway web interface. On the left is a navigation menu with categories: Current State, Network, VoIP, Advance (DHCP Server, NAT, Net Service, QoS, SIP, Digital Map, Call Service, MMI Filter, Audio Settings, VPN), Dial-Peer, Config Manage (Save Config, Clear Config, Backup Config), Update, and System Manage (Account Management, Syslog Config, Time Config, Logout & Reboot). The main content area is titled 'VoIP Gateway' and 'Dial-Peer'. It contains a table with the following data:

Number	Call Mode	Destination	Port	Alias	Suffix	Del Length
*T	lifeline	0.0.0.0	0	no alias	no suffix	0
2T	sip	255.255.255.255	5060	del	no suffix	1
3T	sip	0.0.0.0	5060	del	no suffix	1
123	sip	0.0.0.0	5060	all:8675583018049	no suffix	0
0T	sip	0.0.0.0	5060	rep:86	no suffix	1
179	sip	192.168.1.179	5060	no alias	no suffix	0

Below the table are buttons for 'Add', 'Delete', 'Modify', and a dropdown menu with '*T' selected.

2T rule: If the call starts with 2, the first 2 will be deleted, and the rest number will be sent to private server.

3T rule: If the call starts with 3, the first 3 will be deleted, and the rest number will be sent to public server.

123 rule: Dial 123 and will send 8675583018049 to your server. Used as speed dial function.

0T rule: If the call begins with 0, the first 0 will be replaced by 86. Means that if you dial 075583018049 and AG-188N will send 8675583018049 to your server.

***T rule:** Dial the * and the line with switch to PSTN. Note that you need to set another rule "Prefix Number: *; Length: 1" in the Digital Map. (Refer "[How to use AG-188N's Lifeline Function?](#)")

179 rule: when you dial 179, the call will send to 192.168.1.179, suit for LAN application without set up a sip server.

How to use speed dial function?

Please refer to [“How to use dial rule?”](#).

How to configure digital map?

Please refer [digit map settings](#).

How to use Call Forward, Call Transfer and 3-way Conference calls?

User may set up the configuration in the *Call Service* page to use these value add service.

VoIP Gateway

Call Service

Hotline	<input type="text"/>		
Call Forward	<input checked="" type="radio"/> Off <input type="radio"/> Busy <input type="radio"/> No Answer <input type="radio"/> Always		
	Forward Number	IP	Port 5060
<input type="checkbox"/> No Disturb	<input type="checkbox"/> Ban Outgoing		
<input type="checkbox"/> Enable Call Transfer	<input type="checkbox"/> Enable Call Waiting		
<input type="checkbox"/> Enable Three Way Call	<input checked="" type="checkbox"/> Accept Any Call		
<input type="text" value="20"/> No Answer Time(seconds)	P2P IP Prefix		<input type="text"/>
<input type="checkbox"/> Use Record Server	Remote Record		No <input type="text"/>

➤ Call Forward:

---Forward when busy: select *Busy* in the *Call Forward* Field, and Key in the destination phone number in the *Forward Number*. If some one calls you when you having a call, the caller will be forwarded to the destination number.

---Forward no answer: Select *No Answer* in the *Call Forward* Field, and Key in the destination phone number in the *Forward Number*, fill the time in the *No Answer Time*. If some one calls you and no one answer the caller during the No Answer Time, the call will be forward to the destination number.

---Forward Always: Select *Always* in the *Call Forward* Field, and Key in the destination phone number in the *Forward Number*, then any one calls this gateway will be forward to the destination

number.

➤ Call Transfer:

Check the *Enable Call Transfer*.

If A is the AG-188N user, and B calls and talking with A through VoIP. A can **press the Hook-Flash** to hold the call with B, and then press * and then **enter C's number**. B will be transferred to C and can talk with C.

➤ 3-Way Conference Calls

Check Enable Three Way Call

Only sip protocol support this function .Assume A is the AG-188N user, and B calls and talking with A through VoIP. A can **press Hook-Flash** to hold the call with B, then **enter C's number** to talk with C, and then **press Hook-Flash** again switch back to user B , then A can press * to make 3-way conference calls.

Notice: A can press **Hook-Flash** to switch between B and C. or press # to cancel the current call and switch to the other user.

VLAN implement

AG188 support rich 802.1Q/P protocol and Diffserv configuration. Through its flexible VLAN function, you can set the voice/signaling and data packets in different VLAN via different VLAN id.

Different implement of VLAN function:

1: if “Data/Voice VLAN differentiated” is undifferentiated. Device will set the same vlan ID for voice and data. As show below

QoS Configuration			
<input type="checkbox"/> VLAN Enable			
<input checked="" type="checkbox"/> VLAN ID Check Enable	Voice/Data VLAN differentiated	Undifferentiated	
<input checked="" type="checkbox"/> DiffServ Enable	DiffServ Value	0x b8	
Voice VLAN ID	256 (0 - 4095)	Data VLAN ID	254 (0 - 4095)
Voice 802.1P Priority	0 (0 - 7)	Data 802.1P Priority	0 (0 - 7)
<input type="button" value="Submit"/>			

Or

VoIP Gateway

QoS Configuration

<

<input checked="" type="checkbox"/> VLAN Enable			
<input type="checkbox"/> VLAN ID Check Enable		Voice/Data VLAN differentiated	Undifferentiated
<input checked="" type="checkbox"/> DiffServ Enable		DiffServ Value	0x b8
Voice VLAN ID	256 (0 - 4095)	Data VLAN ID	254 (0 - 4095)
Voice 802.1P Priority	0 (0 - 7)	Data 802.1P Priority	0 (0 - 7)

2. if “Data/Voice VLAN differentiated” is Tag differentiated but the DiffServ is disable. Device won’t distinguish the voice, signaling and data stream. It will add the same data vlan id to them. As below:

VoIP Gateway

QoS Configuration

<

<input checked="" type="checkbox"/> VLAN Enable			
<input type="checkbox"/> VLAN ID Check Enable		Voice/Data VLAN differentiated	Tag differentiated
<input type="checkbox"/> DiffServ Enable		DiffServ Value	0x b8
Voice VLAN ID	256 (0 - 4095)	Data VLAN ID	254 (0 - 4095)
Voice 802.1P Priority	0 (0 - 7)	Data 802.1P Priority	0 (0 - 7)

Or

VoIP Gateway

QoS Configuration

<

<input checked="" type="checkbox"/> VLAN Enable			
<input checked="" type="checkbox"/> VLAN ID Check Enable		Voice/Data VLAN differentiated	Tag differentiated ▾
<input type="checkbox"/> DiffServ Enable		DiffServ Value	0x b8
Voice VLAN ID	256 (0 - 4095)	Data VLAN ID	254 (0 - 4095)
Voice 802.1P Priority	0 (0 - 7)	Data 802.1P Priority	0 (0 - 7)

3. if “Data/Voice VLAN differentiated” is Tag differentiated and diffServ are both enable. Then device will distinguish the voice, signaling and data stream to VLAN ID setting. As below:

VoIP Gateway

QoS Configuration

<

<input checked="" type="checkbox"/> VLAN Enable			
<input checked="" type="checkbox"/> VLAN ID Check Enable		Voice/Data VLAN differentiated	Tag differentiated ▾
<input checked="" type="checkbox"/> DiffServ Enable		DiffServ Value	0x b8
Voice VLAN ID	256 (0 - 4095)	Data VLAN ID	254 (0 - 4095)
Voice 802.1P Priority	0 (0 - 7)	Data 802.1P Priority	0 (0 - 7)

Or

VoIP Gateway

QoS Configuration

<

<input checked="" type="checkbox"/> VLAN Enable			
<input type="checkbox"/> VLAN ID Check Enable	Voice/Data VLAN differentiated		Tag differentiated ▾
<input checked="" type="checkbox"/> DiffServ Enable	DiffServ Value		0x b8
Voice VLAN ID	256 (0 - 4095)	Data VLAN ID	254 (0 - 4095)
Voice 802.1P Priority	0 (0 - 7)	Data 802.1P Priority	0 (0 - 7)

4. if “Data/Voice VLAN differentiated” is Data untagged and diffServ are both enable. Then device will undistinguish the data to VLAN ID setting. As below:

VoIP Gateway

QoS Configuration

<

<input checked="" type="checkbox"/> VLAN Enable			
<input type="checkbox"/> VLAN ID Check Enable	Voice/Data VLAN differentiated		data Untagged ▾
<input checked="" type="checkbox"/> DiffServ Enable	DiffServ Value		0x b8
Voice VLAN ID	256 (0 - 4095)	Data VLAN ID	254 (0 - 4095)
Voice 802.1P Priority	0 (0 - 7)	Data 802.1P Priority	0 (0 - 7)

5. if VLAN is disable. Device won't add any vlan ID to the stream. In this case, if the Diffserv is enable, the DiffServ value response to the voice/signaling stream.

6. When VLAN function is enable. If “VLAN ID check” is enable, AG188 will have strict requirement on the VLAN, it won't handle any packets with different VLAN ID. If “VLAN ID check” is disable, AG188 will handle the packets even from different vlan ID. Please notice that VLAN ID check is enable in default.