



IP Video Door Phone Quick Installation Guide

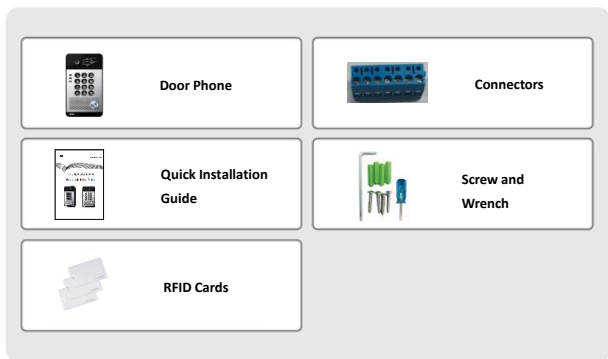




Table of Contents

1. Package Contents	4
2. Physical Specifications	4
3. Installation	8
4. Searching Door Phone	11
5. IP Door Phone Setting	12
6. Door Unlocking Setting	13

1. Package Contents



2. Physical Specifications

Device size	160 x 93 x 35 mm
Weight	450g

1) Front Panel






Interface	Description
Camera	Get the video.
Speaker	The door phone has a built-in speaker for convenient communication and alert use.
MIC	The door phone has a built-in microphone hidden in the pinhole located on the front panel.
RFID Reader	Use RFID cards to unlock the door by touching RFID reader of device.

Button Definition


Button	Description
DSS Key	Press the Button, calling or request to open the door.
Numeric Keyboard	Input password to open the door or call.

LED Definition

LED	Status	Description
 Lock	Steady Blue	Door unlocking
	off	Door locking
 Call & Ring	Blinks per second	Call Hold or Ringing
	off	On Hook
	Blinks every 3 seconds	Device in the issuing state
	Steady Blue	Online talking
 Network & SIP Registration	Blinks per second	Network error
	off	Network is normal, SIP is not registered
	Blinks every 3 seconds	SIP Registration failed
	Steady Blue	SIP Registration succeeded

2) Port Definition

After removing the Back Panel of i30, there are one terminal block connectors for power and lock control connection as shown in the picture below.

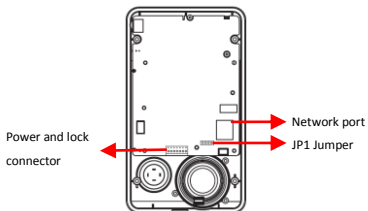

Network Connector



Power and Electric-lock Connector



1	2	3	4	5	6	7
+DC12V	VSS	NC	COM	NO	S-IN	S-OUT
12V DC Input		Electric-lock switch			Indoor switch	

JP1 Jumper

There are two modes for power supply of electric-lock as shown in the picture below.

(The default is "Passive Mode:").

Passive Mode: When the electric-lock starting current is more than 12V/700mA, need to use the external drive mode, the electric lock interface for short circuit output control.

Active Mode : When the electric-lock starting current is less than 12V/700mA, can use the internal drive mode, the electric lock interface is 12V DC output.


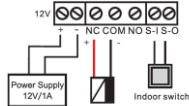

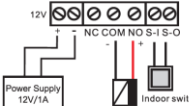

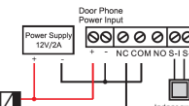

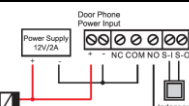

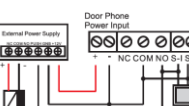


Wiring instructions


NO: Normally Open Contact

COM: Common Contact


NC: Normally Close Contact

Driving Mode		Electric-lock Mode		JP1 Jumper	Connections
Active	Passive	No electricity when open	Electrify when open		
√		√		Active Mode 	 <p>Electric-lock (No electricity when open the door)</p>
√			√	Active Mode 	 <p>Electric-lock (When the power to open the door)</p>
	√	√		Passive Mode 	 <p>Electric lock (No electricity when open the door)</p>
	√		√	Passive Mode 	 <p>Electric lock (When the power to open the door)</p>
	√	√		Passive Mode 	 <p>Electric lock (Without power to open the door)</p>

3. Installation



Main Part of Intercom



Back Panel



Wall-mounted hanging shell

Figure 1 Three Major Parts of i30

Step 1: Installation preparation

A. Check the following contents:

- Hex wrench x 1
- RJ45 plugs x 2 (1 spare)
- KA4 x 25mm screws x 4
- 25mm screw anchors x4

B. Tools that may be required:

- Hex wrench
- Phillips screwdriver (Ph2 or Ph3), hammer, RJ45 crimper
- Electric impact drill with an 6mm drill bit

Step 2: Drilling

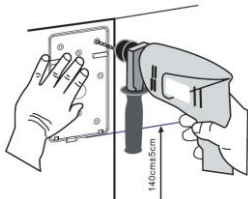


Figure 2 Wall Mounting

- Place the mounting template with dimensions on the surface of a wall in a desired flat position.
- Use an electric drill to drill the 4 holes marked on the mounting template. It is recommended to drill about 30mm deep. Remove the template when finishing drilling.
- Push or hammer screw anchors into the drilled holes.

Step 3: Removing hanging shell

A. Remove the hanging shell in Figure 3 and Figure 4.

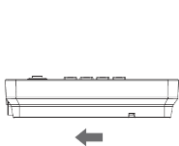


Figure 3

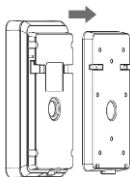


Figure 4

B. With Phillips screwdriver, unpacks the Back Panel and the main part of intercom as shown in Figure 5.

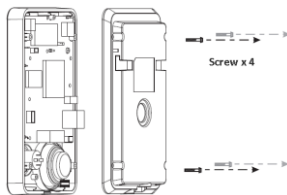


Figure 5

Step 4: Hanging shell Fixing and Cabling

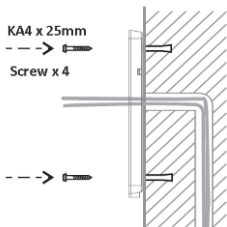


Figure 6

A. Select the hole for cable supply; cable length of 15cm to 20cm is recommended.

B. With 4 KA4 x 25mm screws, tighten the Wall-mounted hanging shell as shown in Figure 6.

Step 5: Connection line

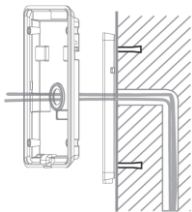


Figure 7

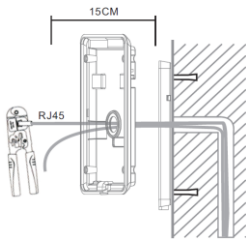


Figure 8

- A. Select the hole for cable supply.
- B. Connect the cables of RJ45, power, and electric-lock to the motherboard socket as mentioned in connectors description (refer to Section 2).
- C. Test whether there is electricity by doing the following:

Press the # button for 3 seconds to get the IP address of intercom by voice.

Input access password or press the indoor switch to check electric-lock installation.

Note: Do not proceed mounting until you have finished the electric checking.

Step 6: Mounting

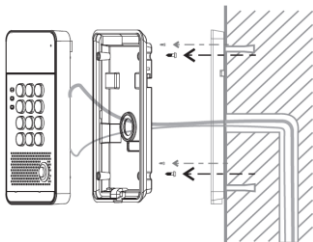


Figure 9

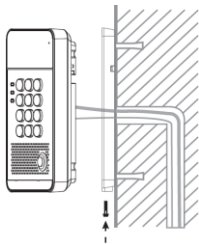


Figure 10

- A. Use the 4 screws to tighten the main part of intercom on the back panel as shown in Figure 9.
- B. Push the device into the Wall-mounted hanging shell and tighten it with 1 screw as shown in Figure 10.
- C. Make sure the screws have been tightened properly for better waterproof effect.

4. Searching Door Phone

There are two methods as shown below to search the i30.

Method 1:

Open the iDoorPhone Network Scanner. Press the Refresh button to search the i30 and find the IP address.



Method 2:

Press and hold the “#” key for 3 seconds and the door phone will report the IP address by voice.

(Download address <http://download.fanvil.com/tool/iDoorPhoneNetworkScanner.exe>)


In addition i30 provides the device surface DSS key operation to switch IP address acquisition mode: long press the DSS key for 10 seconds, to be issued by the speaker Beep, and then press the DSS key three times, the beep stops. Wait 10 seconds, after the success of the system automatically broadcast the current IP address.



Default Setting	
Default DHCP Client	Enable
Static IP Address	192.168.1.128
Default Web Port	80
Default Login User Name	admin
Default Login Password	admin
Display IP address	Hold # for 3 seconds to display by voice
Search Tools	iDoorPhone Network Scanner

5. IP Door Phone Setting

Step 1: Login the homepage of the i30.



Step 2: Add the SIP account.

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters. Select "Activate", and then click Apply to save this setting.



Step 3: Setting DSS key

Set the DSS key as shown below for a quick start. Click "Apply" to save this setting.


Type: Hot Key

Number 1: The DSS Key will dial to this Number 1.

Number 2: If Number 1 is unavailable, it will be forwarded to Number 2.

Line: Working line

Subtype: Speed dial

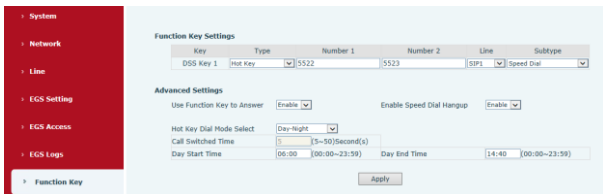

Step 4: Door Phone Setting

The screenshot shows the 'Common Settings' section of the EGS Setting interface. The left sidebar has 'EGS Setting' selected. The main area contains various configuration options:

Setting	Value	Setting	Value
Switch Mode	Monostatic	Switch-On Duration	5 (1-600)Second(s)
Enable Card Reader	Enable	Card Reader Working Mode	Normal
Limit Talk Duration	Enable	Talk Duration	120 (20-600) Second (s)
Remote Password	*	Local password	****
APP Door Open	Disable	APP Password	*
Enable Indoor Open	Enable	Enable Access Table	Enable
Description	30 IP Door Phone	Enable Open Log Server	Disable
Address of Open Log Server	0.0.0.0	Port of Open Log Server	514
Door Unlock Indication	Long Beeps	Remote Code Check Length	4 (1-11)

An 'Apply' button is located at the bottom right of the settings area.

6. Door Unlocking Setting

Local

1) Local Password

Step 1: Go to EGS Setting → Features → Set **Local Password** (The default is "6789").

Step 2: Use the device's **Numeric Keyboard** to input **password** and **"#"** key, and then the door will be unlocked.

This screenshot is identical to the one above, but with a red rectangular box highlighting the 'Local password' field, which contains four asterisks (****).

2) Private Access Code

Step 1: Go to **EGS Access** → **Access Rule** → set **Access Code**.

Step 2: Use the device's **Numeric Keyboard** to input **password** and **"#"** key, and then the door will be unlocked.

Access Table >>

Total: 1 | Prev | Page: 1 | Next | [Click here to Save Access Table](#) | Delete | Delete All

<input type="checkbox"/>	Index	Name	ID	Department	Position	Location	Number	Fwd Number	Access Code	Double Auth	Profile	Type	Issuing Date	Card State
<input checked="" type="checkbox"/>	1	BBK							1234	Disable	None	Guest		Enable

Add Access Rule

Name: BBK * | Location: [] | ID: [] | Number: [] | Card State: Enable | Fwd Number: [] | Department: [] | Access Code: 1234 | Double Auth: Disable | Position: [] | Profile: None | Type: Guest

Add | Modify

Remote

Remote Password

Step 1: Go to **EGS Setting** → **Features** → Set **Remote Password** (The default is "").

Step 2: To answer the call made by visitor via SIP phone, press the **"*"** key to unlock the door the visitor.

Features | Audio | Video | MCAST | Action URL | Time/Date

Common Settings

Switch Mode: Monostable | Switch-On Duration: 5 (1-600) Second(s) | Card Reader Working Mode: Normal | Talk Duration: 120 (20-600) Second(s) | Local password: **** | APP Password: [] | Enable Access Table: Enable | Enable Open Log Server: Disable

Enable Card Reader: Enable | Limit Talk Duration: Enable | Remote Password: [] | APP Door Open: Disable | Enable Indoor Open: Enable | Description: 130 IP Door Phone

RFID Card

Step 1: Go to **EGS Access** → Enter the Name and ID Number (Only Front 10 yards) → Press **Add** to Access Table.

Step 2: Use pre assigned RFID cards to unlock the door by touching RFID area of device.

Access Table >>

Total: 0 | Prev | Page: | Next | [Click here to Save Access Table](#) | Delete | Delete All

<input type="checkbox"/>	Index	Name	ID	Department	Position	Location	Number	Fwd Number	Access Code	Double Auth	Profile	Type	Issuing Date	Card State
--------------------------	-------	------	----	------------	----------	----------	--------	------------	-------------	-------------	---------	------	--------------	------------

Add Access Rule

Name: Hugo * | Location: [] | ID: 0123031310 | Number: [] | Card State: Enable | Fwd Number: [] | Department: [] | Access Code: [] | Double Auth: Disable | Position: [] | Profile: None | Type: Guest

Add | Modify

Fanvil